



(110V version)



IMPORTANT



Be Sure
to Read this
Manual
Before Use



NOTE: Some portions of assembly may require additional assistance.

Operation Manual

WE ARE HERE TO ASSIST For parts and service



Have Questions? Contact us!

UNIS SERVICE CENTER

Tel: 972-241-4263

Email: service@unispartsandservice.com

www.unispartsandservice.com

**When contacting Service, you will need the following information
and the name of your authorized distributor.**

Suitable for Indoor Use Only	
NAME: Sailor's Quest VR GMP	MAX POWER: 1850W
MODEL: V-029	MIN POWER: 400W
VOLTAGE: AC 110V ~	FREQUENCY: 50/60Hz
S/N:	DATE:
Guangdong UNIS Technology Co.,Ltd.	

CONTENT

IMPORTANT SAFETY INSTRUCTIONS.....	3
1. SPECIFICATIONS.....	5
2. CONTENTS OF THE ACCESSORY KIT.....	6
3. PART NAME.....	7
4. SET UP & INSTALLATION.....	8
5. HOW TO PLAY.....	23
6. GAME OPTION.....	24
7. TROUBLESHOOTING.....	40
8. MAINTENANCE & INSPECTION.....	44
9. OVERALL CONSTRUCTION.....	53
10. WIRING DIAGRAM.....	97

Thank you for purchasing **Sailor's Quest GMP**. We hope you enjoy the product.

This manual contains valuable information about how to operate and maintain your game machine properly and safely. It is intended for the owner and/or personnel in charge of product operation. Carefully read and understand the instructions.

If you need any help during installation and setup please utilize this manual and troubleshooting guide. If the product fails to function properly, *non-technical personnel should under no circumstance attempt to service the machine*. Contact your distributor or manufacturer for help.

Before use, please read **IMPORTANT SAFETY INSTRUCTIONS**.

IMPORTANT SAFETY INSTRUCTIONS

To ensure the safe usage of this product, carefully read and understand these instructions before operating your game.

Save these instructions for future reference.

Use this product only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury. Unplug the game from the outlet when not in use, when moving from one location to another, and before cleaning/servicing.

Explanations which require special attention are indicated by signs of warning. Depending on the potential hazardous degree, the terms: **NOTE**, **NOTICE**, and **WARNING** are used.

NOTE: A NOTE indicates useful hints or information about product usage.

NOTICE: A NOTICE indicates potential damage to product and how to avoid the problem.

WARNING: A WARNING indicates a potential for product damage or serious personal injury.

It is important to understand the meaning of the following HAZARD SIGNS before continuing:

High Voltage and Shock Hazard:

High voltage can cause electric shock.
Turn off/unplug power before servicing.



High Temperature Hazard:

This part may cause scalding.
Do not touch. Surface may be hot.



No Touching Hazard:

This part may be hot or can cause electric shock.
Do not touch.



Use the following safety guidelines to help ensure your own personal safety and to help protect your equipment and surrounding environment from potential damage.

⚠️ This product is an indoor game machine. Do not install outdoors.


Avoid installing in the following places to prevent fire, electric shock, injury and/or machine malfunctioning:

- Places subject to rain/moisture, or places subject to high humidity.
- Places subject to direct sunlight, or places subject to extremely hot or cold temperatures to ensure that it is used within the specified operating range.
- Places where inflammable gas may be present or in the vicinity of highly inflammable/volatile chemicals or items that can easily catch fire.
- On unstable or sloped surfaces. The machine may topple or cause unforeseen accidents.
- Vicinity of fire exits, fire extinguishers etc that may block/prevent safety measures.



Power

- Each power cord must be connected to a separate power outlet. Do not plug into the same power strip or use the same power connection.

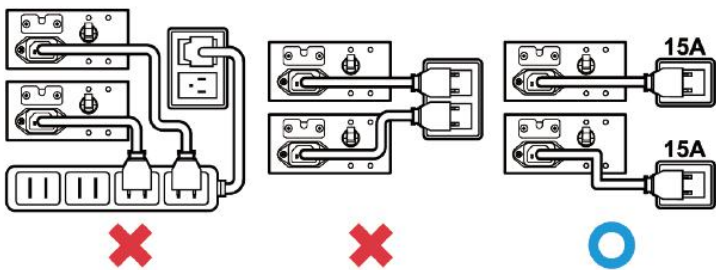

- Before plugging in the cabinet, first make sure the voltage is 110V or 220V, or fires and electric shocks might occur.
- When plugging in the cabinet, use an earthing socket.
- Do not expose electrical cords and earthing wires on the hallway, or damage, electric shocks and short circuit might occur.
- Do not place flammable items near electrical cords to avoid fires.
- If electrical cords are damaged, replace new ones with your local distributor.
- Do not use fuses and parts other than those designated by IGS.
- To avoid electric shocks or short circuits:
 - Before repair or maintenance, power must be turned off.
 - Do not touch plugs with wet hands.
 - Do not immediately unplug or plug in the cabinet.
 - When unplugging the electric cord, tightly hold the plug and avoid pulling the electric cord.

IMPORTANT NOTE:

ALL REPAIRS MUST BE DONE TO ORIGINAL MANUFACTURER SPECIFICATIONS. FAILURE TO DO SO VOID ALL WARRANTIES AND OPERATOR ASSUMES ALL RISKS.

Note: The contents of this manual may be updated without notice.

1. SPECIFICATIONS

Rated power supply: AC110V 50/60Hz; AC220V 50/60Hz (It is subject to the nameplate on the back of the machine.)

Min. Power consumption: 1500W

Max. Power consumption: 1800W

Dimension: H100.53×W63.38×D109.92 in

H2553.5 ×W1610 ×D2792 mm



Weight: Approximately 1609.37 lb/730 kg

Model No: V-029

Part No.: S185



NOTICE: After turning off the game, please wait at least 1 minute before restarting again.

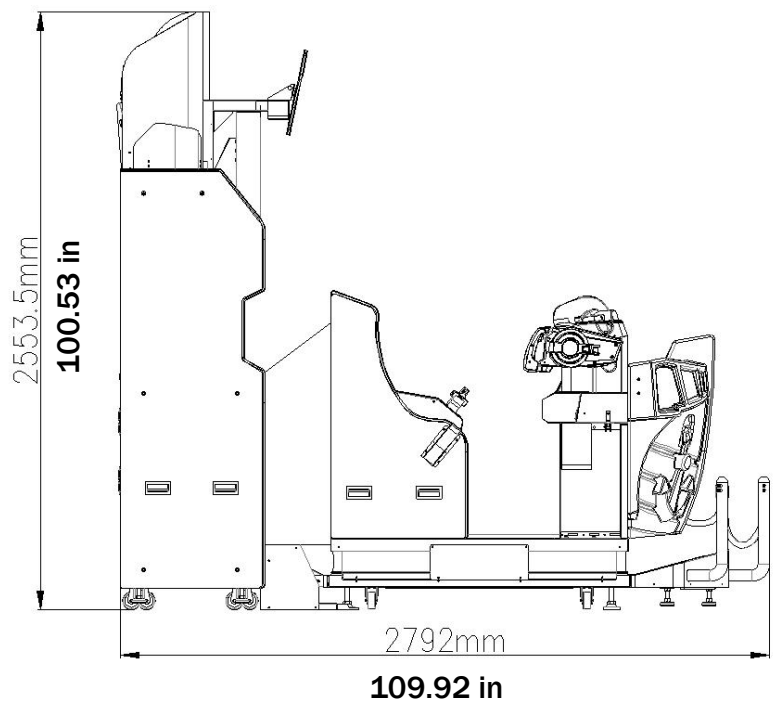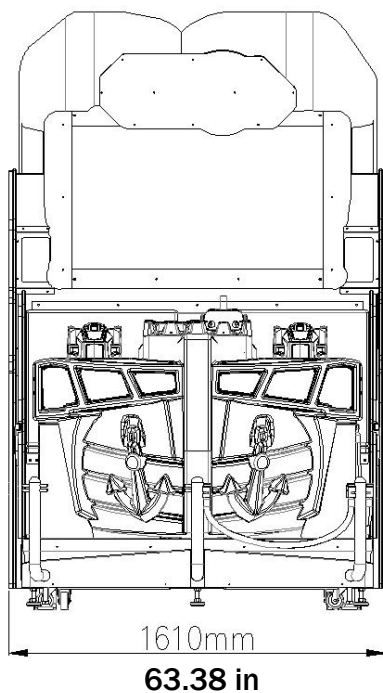

Note: Game specifications are subject to change without notice.

2. CONTENTS OF THE ACCESSORY KIT

Open the package and make sure all the items are included:

Following accessories

No.	Part No.	Code No.	Name/SPEC	Picture	Qty
1	S185-1307-00	2.19.01.000013	Fuse Φ5×20mm T10A 250VAC		2
2	S185-1302-00	4.14.40000583	Manual		1
3	S185-1304-00	2.53.00171002	Key 171A		2
4	S185-1305-00	2.53.00172002	Key 171B		2
5	S185-1303-00	2.33.01.018024	Power cord 3×18AWG 3M UL		3
6	S185-1306-00	2.19.01.000012	Fuse Φ5×20mm T5A/220VAC		5
7	S185-1308-00	2.33.02.000012	Network cable T568A-T568A 5M		1
8	S185-1309-00	2.51.01.18.1009	Plug HP-12		2

NOTE: Part models are subject to change without notice.

3. PART NAME

Key Components



4. SET UP & INSTALLATION

! NOTICE


We do not recommend using power tools as they may cause damage.

! This product is an indoor game machine. Do not install outdoors.

- Refer to IMPORTANT SAFETY INSTRUCTIONS (Pg. 3) for places to avoid.
- Place the unit on a dry level surface.
- Ventilation openings in the back of the unit must not be obstructed by objects or by wall.

4.1 Transporting the Game

If you need to move the game, adjust the levelers back to an “up” position.

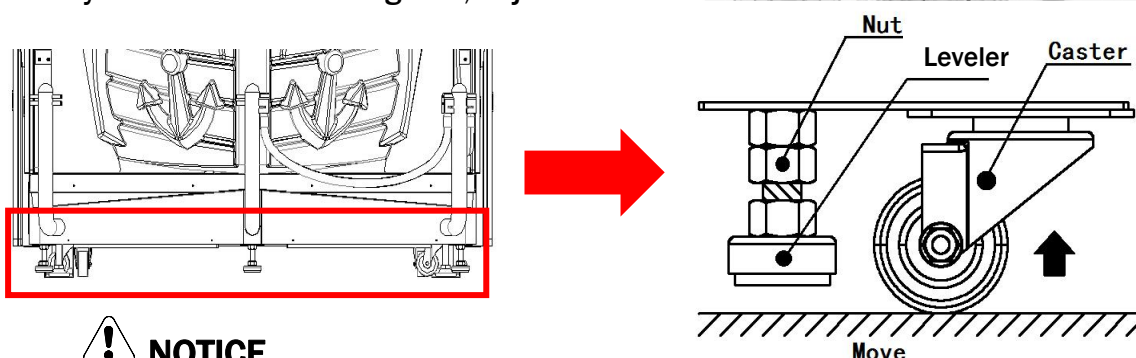


! NOTICE

- Be careful not to damage the machine during transport.
- Always unplug the game before moving.
- Keep the machine in upright position during transport.
- For longer distance transport, package the game properly to prevent damages.

4.2 Level Adjustment

Install this game on a flat surface. If the game is installed on an unsuitable floor, it could cause game malfunction.

To secure the game, loosen the nut, utilize wrench to adjust the leveler down until it touches the floor, lifting the casters off the ground by 0.2 in/5mm. Repeat the same for all levelers.

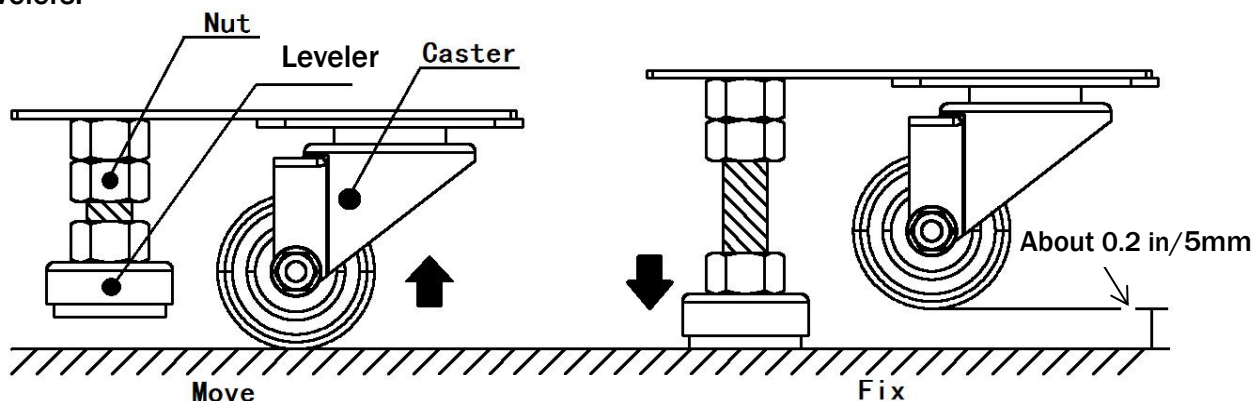

! NOTICE


Make sure the machine is level.

4.3 Play Zone

This machine requires space for playing and for maintenance as shown below.

Leave space around the game upon installation:

Service area: 500 mm/20 in

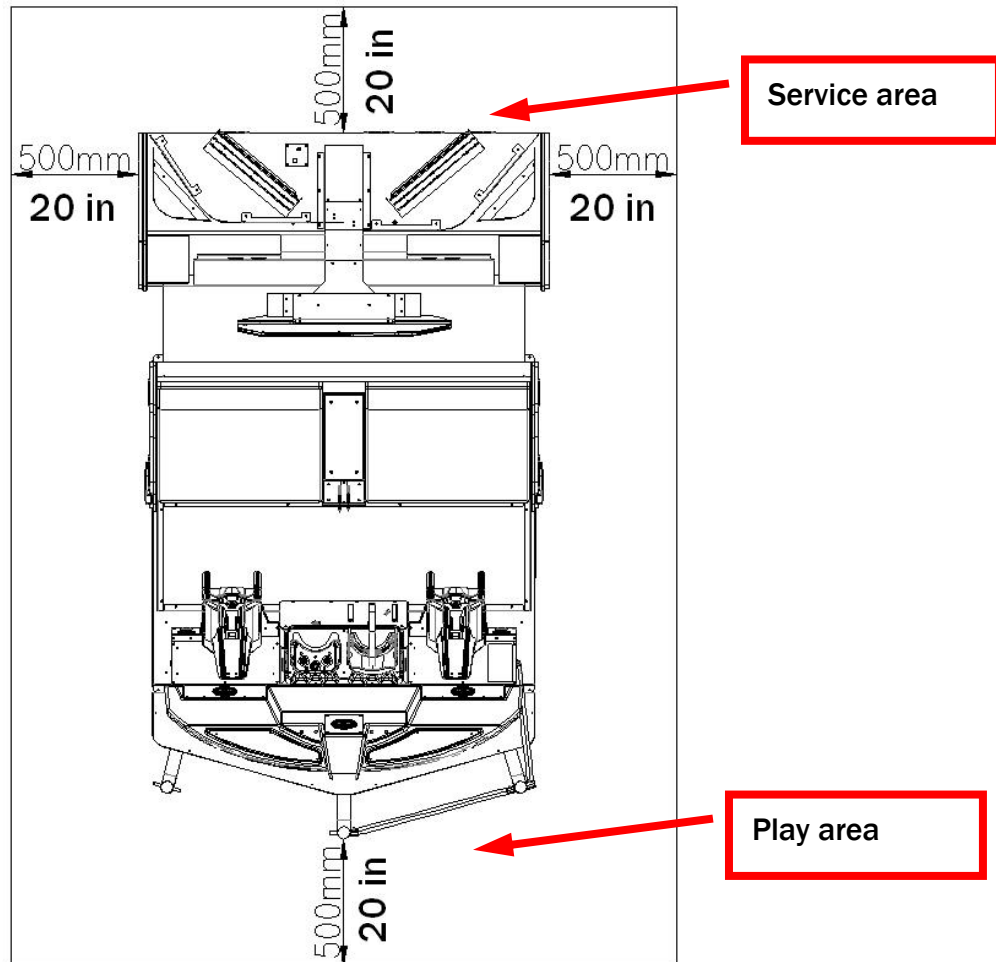


NOTICE

Your unit must be leveled to operate properly.


4.4 Machine Installation

Step 1 To facilitate subsequent installation,utilize key and loosen screws to remove 3 back doors.

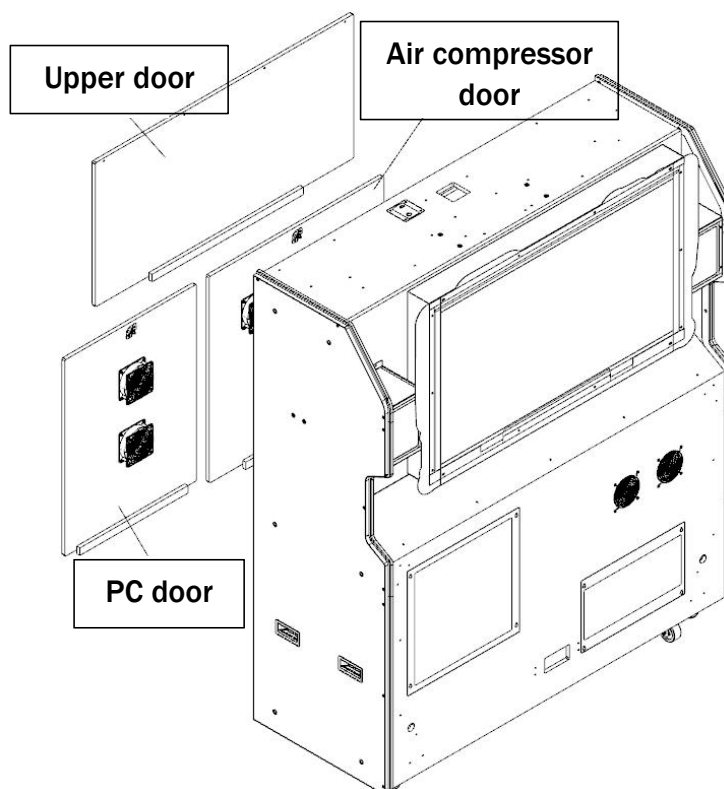


Step 2-1 Loosen Monitor fixing screws on the cabinet inside. Lift the Monitor up to the upper buckle.


Notice: Staffs need to hold the Monitor assembly during the installation.

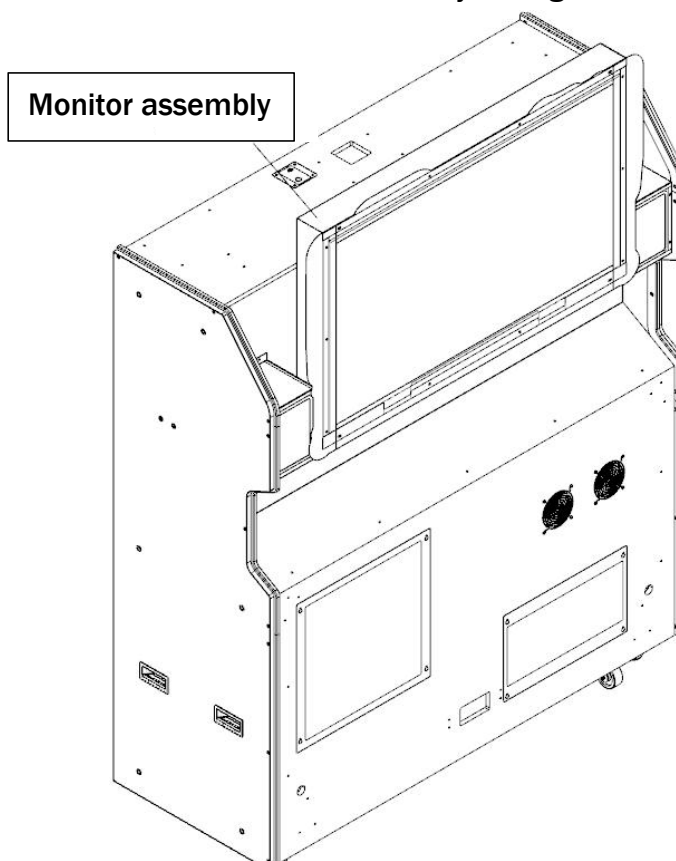

Step 2-2 Secure the screws and connect the connectors and cables after lifting monitor finish.

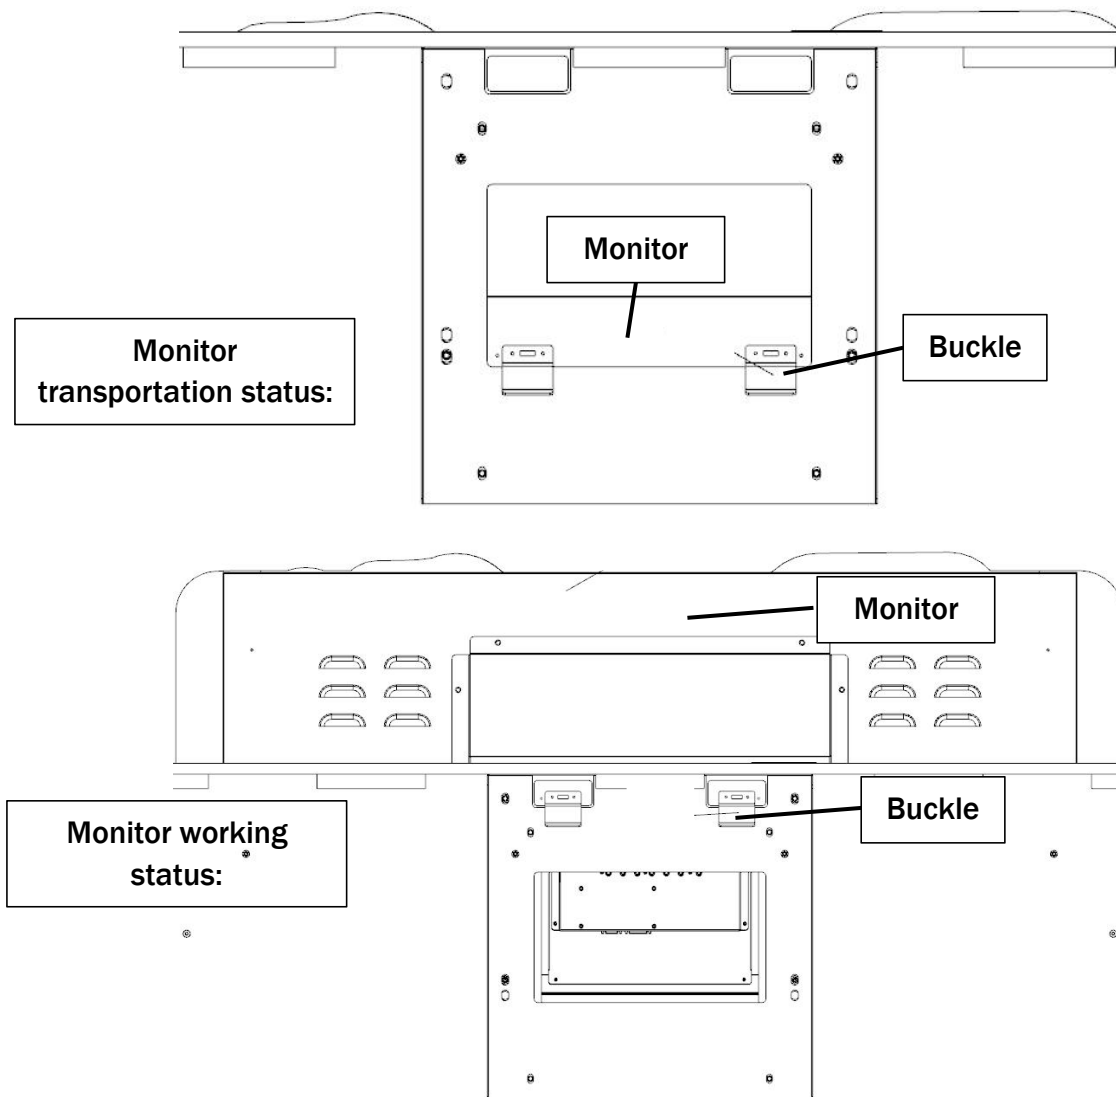


Step 2-3 Insert hole cover to the position as shown below for covering the hole.

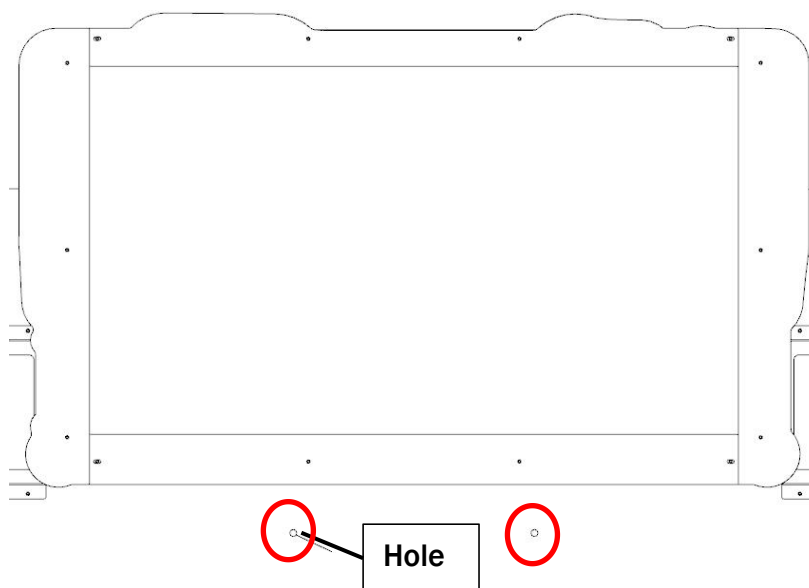


Step 3-1 Install Headset hanging assembly. Route the connectors to the PC through the Wiring hole. Connect the Headset connectors to the PC.

Step 3-2 Utilize screws to secure the Headset hanging assembly.


Note: Please take care of the Headset.

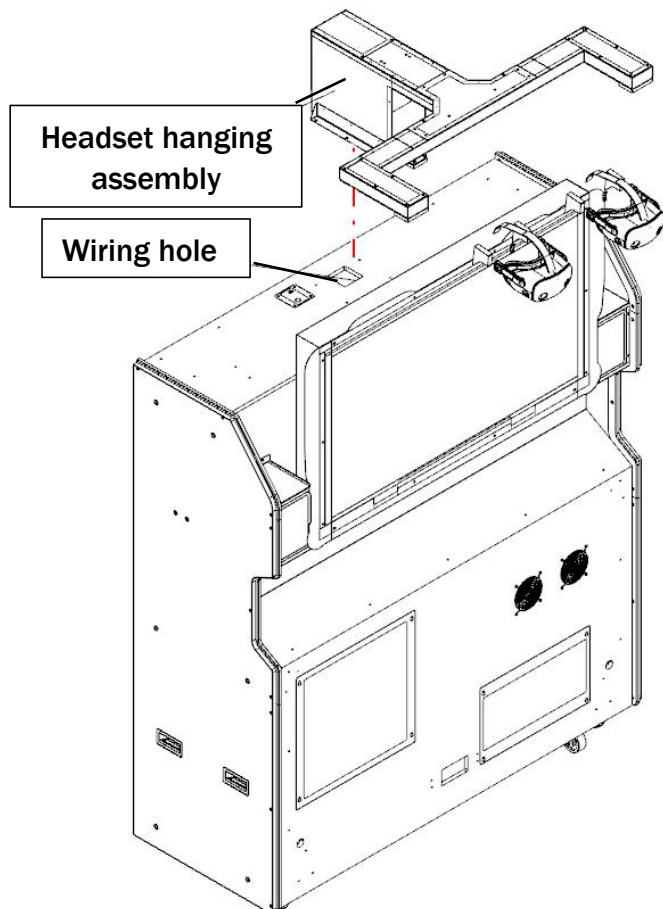


Step 4 Install the LOGO marquee to the Headset hanging assembly. Utilize screws to secure. Connect the connectors.

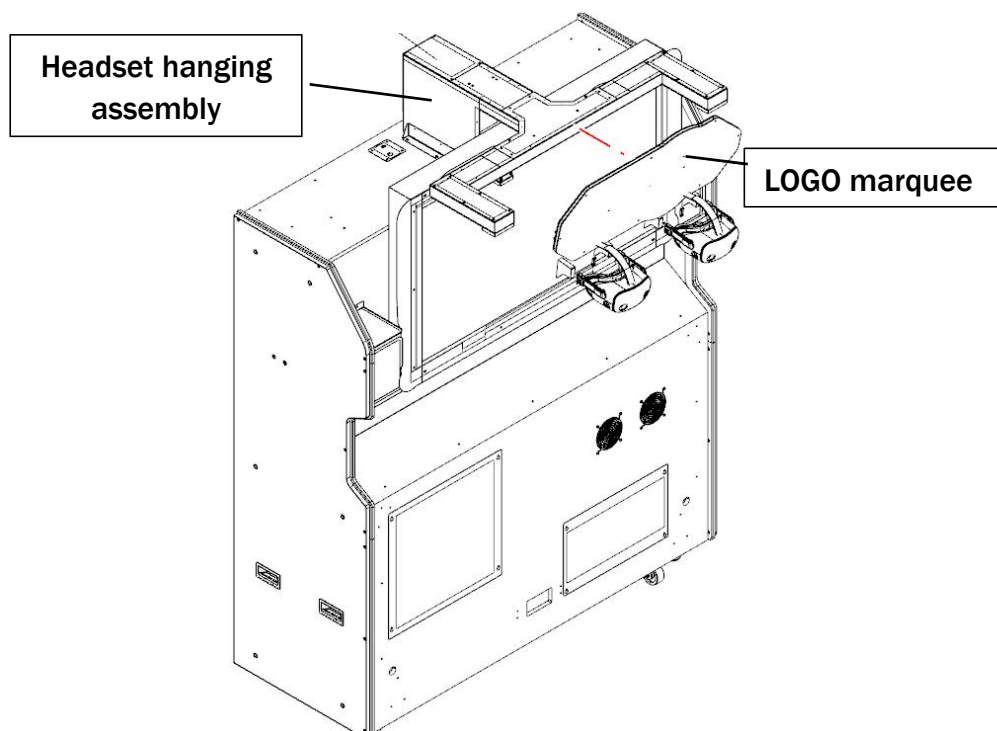

Step 5 Install Light board, Large&Small background plastic to the top of the cabinet. Connect the connectors.

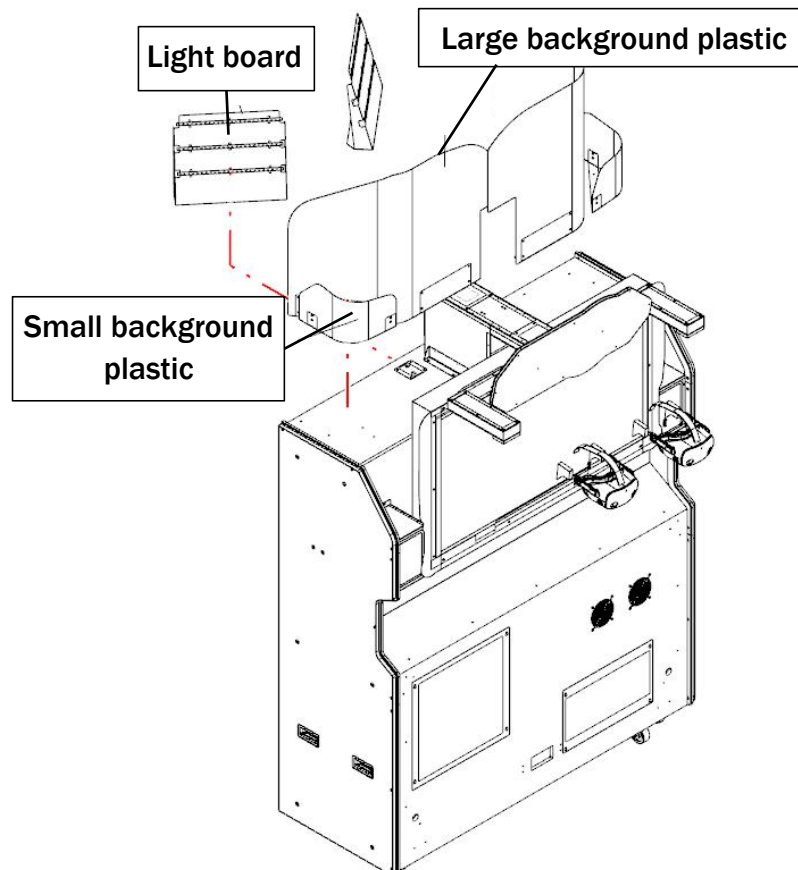


Step 6 Locate Motion platform. Loosen screws to remove console upper plate.

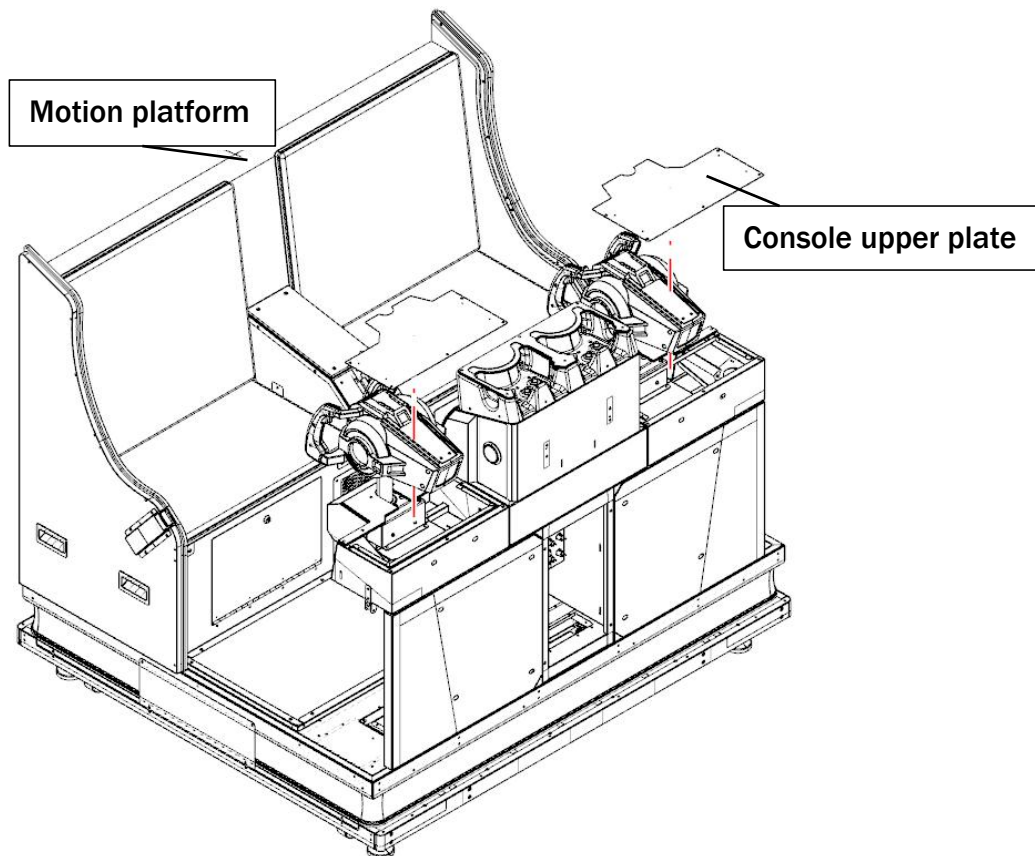


Step 7-1 Install Boat decoration moulding to the Motion platform. Connect the connectors.


Step 7-2 Install console upper plate back.

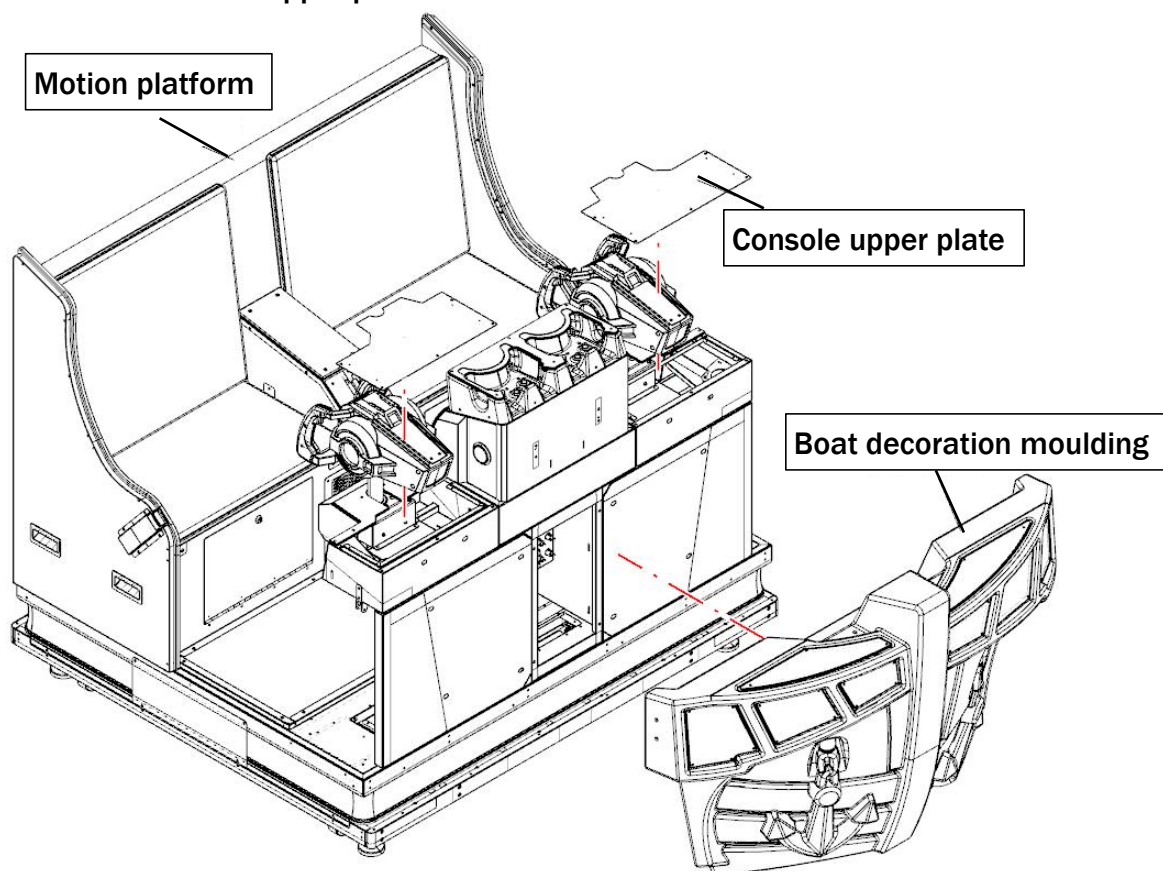


Step 8 Remove Motion fixing plate.

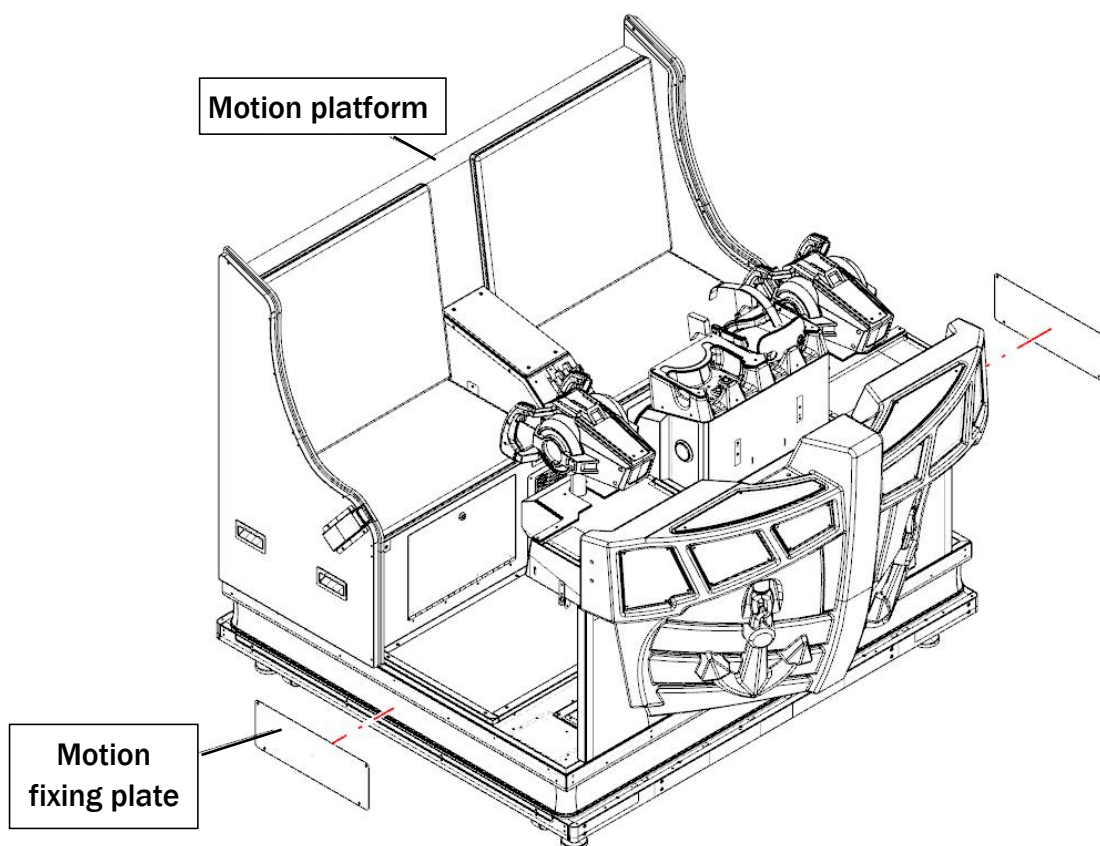

Step 9 Align the Back cabinet with the Motion platform.

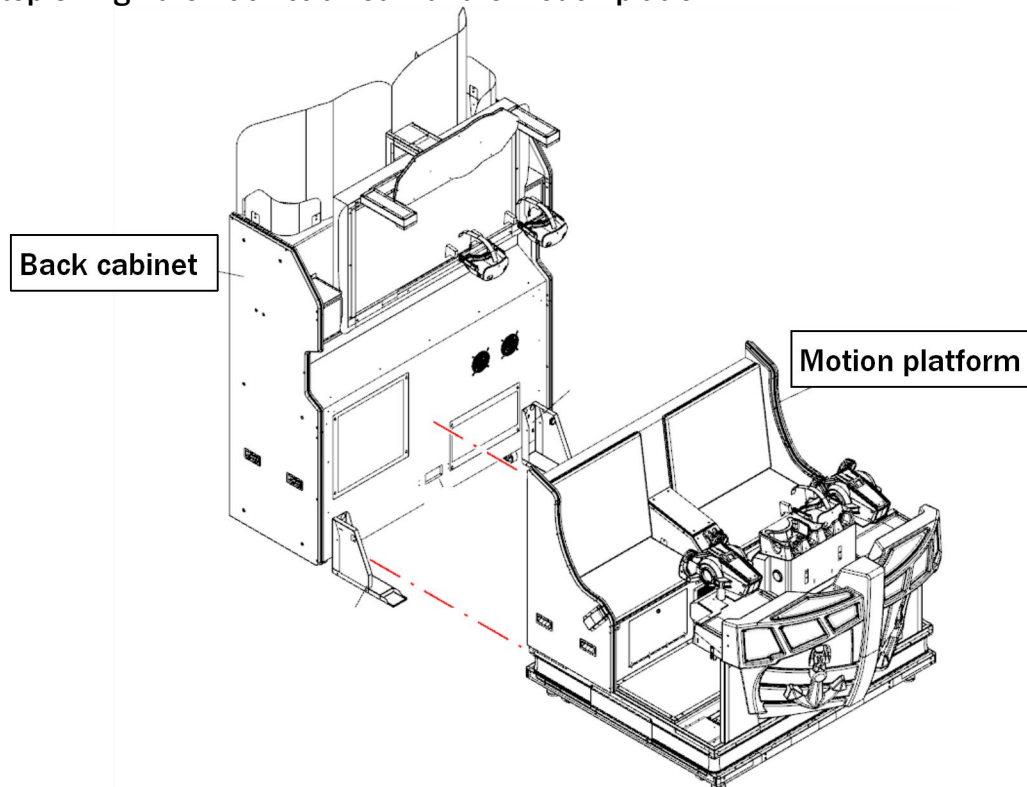


Step 10 Locate Skirt cover. Loosen screws to remove skirt form the back board.

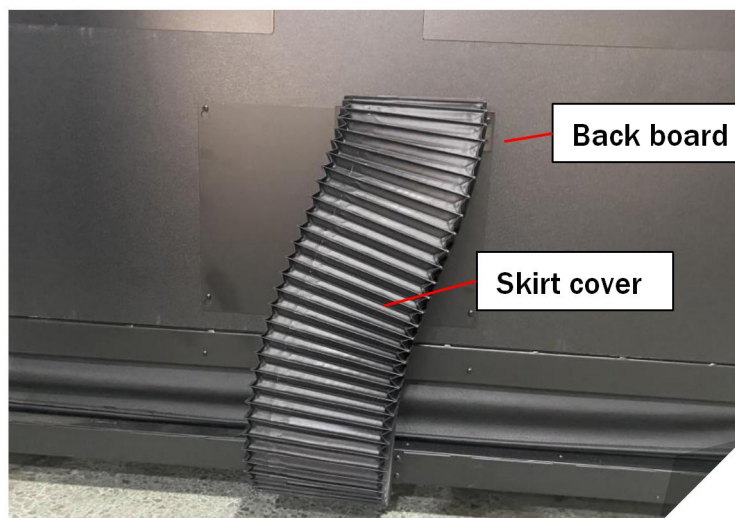

Step 11 Connect connectors and pipe. Secure the Skirt cover to the Back cabinet.




Step 12 Place Side fixing bracket to the middle of the Back cabinet and Motion platform. Connect the connectors. Utilize screws to secure for connecting Back cabinet and Motion platform.

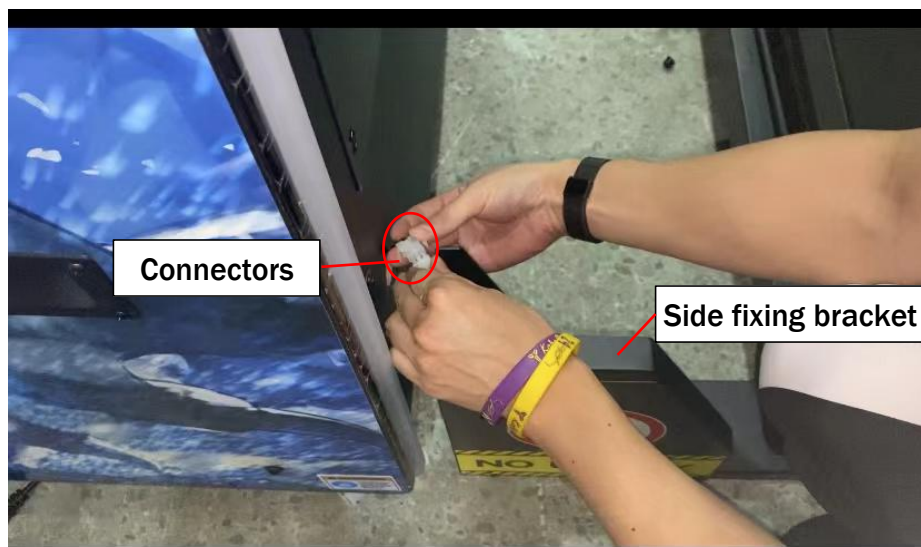


Step 13 Place Headset to the Headset holder.


Step 14 Install Anti-fall net to the middle of the Back cabinet and Motion platform.

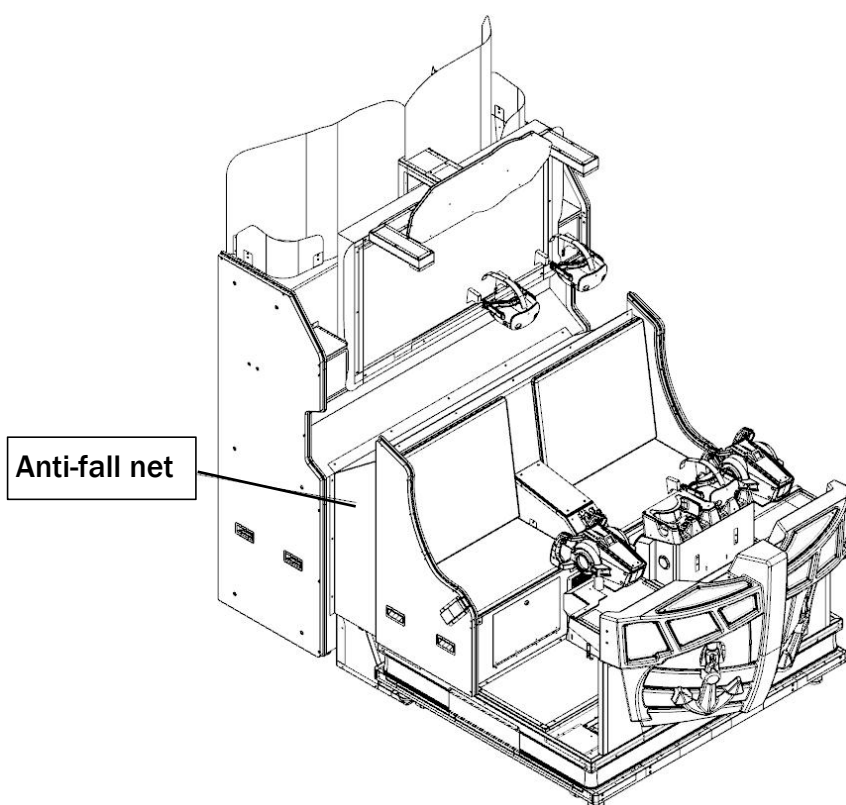

Step 15 Install Front fence assembly. Fasten the hooks to the buckle on both sides of Console.

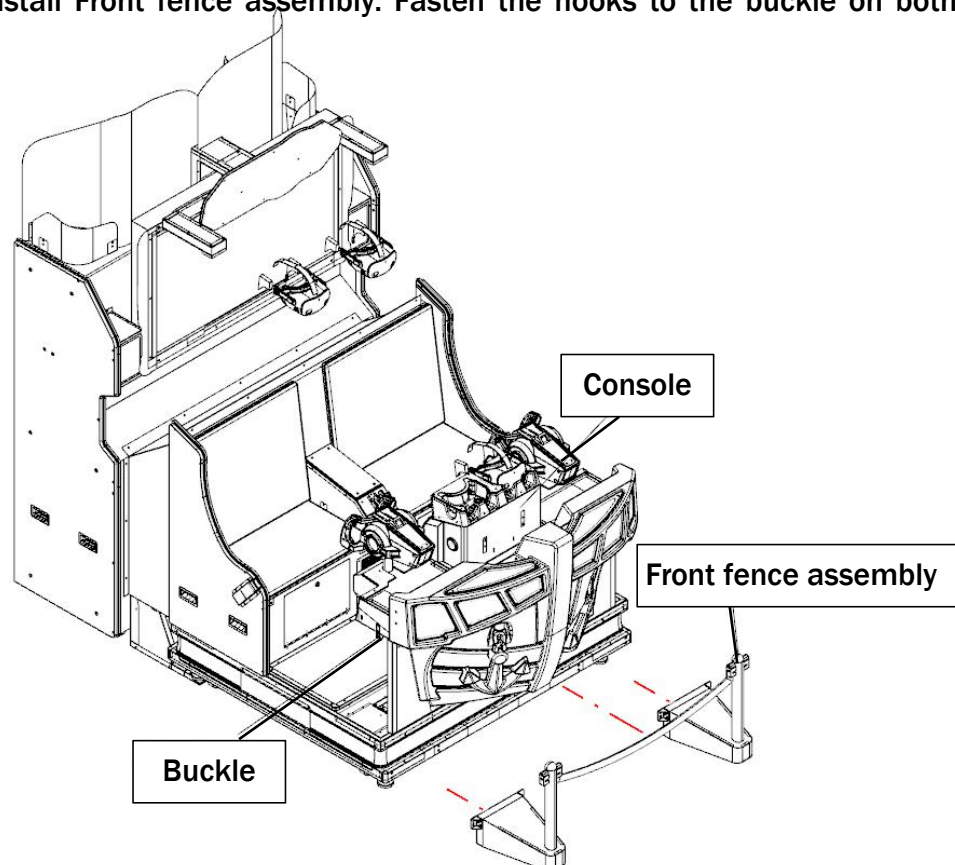


Step 16 Power on the machine. Open the Coin door, and press the **【TEST】** button to enter **【Main Menu】** as shown below.

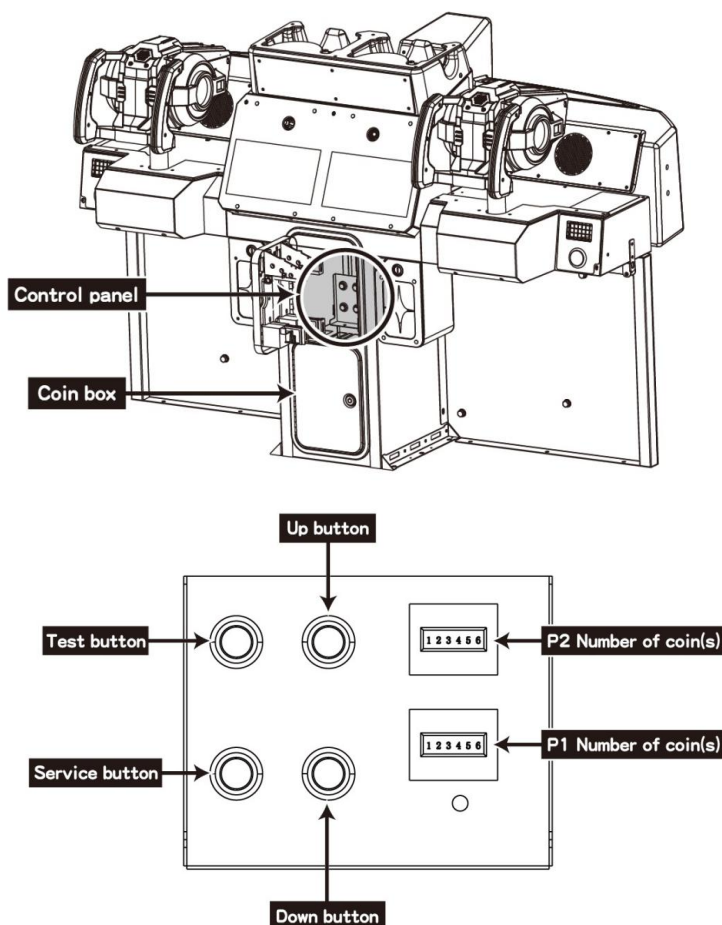

Step 17 Enter [Main Menu]→ [System Setting]→ [VR Headset Environment Setting]to perform the environment settings and positioning calibration.

After selecting and implementing [Environment Setting], [Settings Status] will appear, then the system will run automatically. Please follow the instructions on the screen to perform the VR headset calibration.

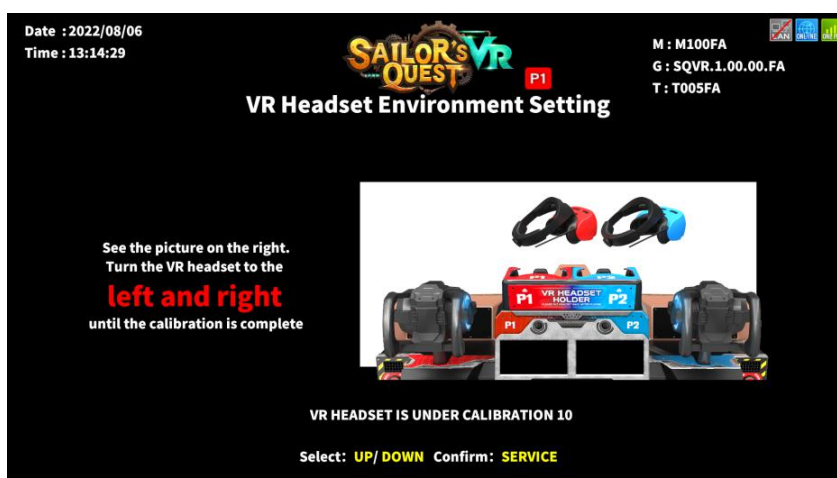

Step 18 For Gun Calibration

Step 18-1 Enter [Main Menu]→ [System Setting]→ [.Gun Calibration]to calibrate the gun.



Finish!

4.5 Card Reader Installation Safety Notice



Take precaution to assure that all wiring voltages are confirmed prior to installation of card reader. All warranties are void if not properly installed resulting in logic board damage.

Important: This game is pre-wired to AAMA standards. It is highly recommended to utilize this wiring for Card reader installation.

4.6 How To Wear The VR Headset

1. Turn the knob on the back of the VR Headset in the counterclockwise direction to loosen the head strap.



2. Hold the VR Headset on both sides and place it over the player's eyes, allowing the VR Headset to surround the player's eyes. If the player is shortsighted, it is recommended to wear glasses while playing.



3. Make slight vertical adjustments the VR Headset position until the image is clear.



4. Pull down the head strap on the back and tighten the head strap for a comfortable fit.



5. Turn the knob to the right to tighten so that the VR Headset will not move about when the player moves his/her head; however, do not make it too tight as it will cause discomfort around the player's eyes.



4.7 Precautions for Powering Machine On


To ensure the successful calibration of the Motion platform and the VR Headset, please follow the instructions below to power on the machine:

Step 1 Use the key to open the storage door and take out the VR Headset.。


Step 2 Place the VR Headset on the VR stand and power on the machine.

Step 3 When powering on the cabinet:

1. If the text **【Motion platform under adjustment, Please leave the cabinet area.】** is displayed on the screen, please leave the cabinet and platform.

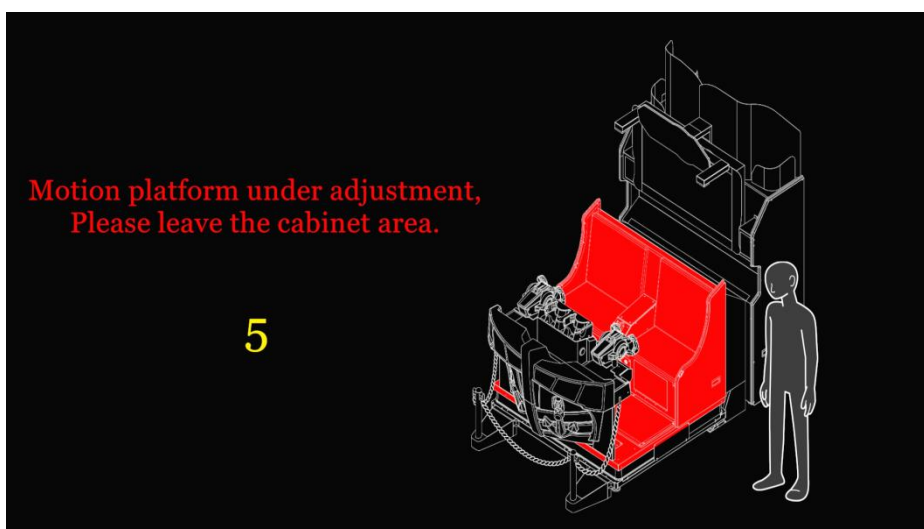

2. If the screen shows [VR headset is under calibration, Place the VR headset on the holder of the same color.], please place the VR Headset on the VR stand with the corresponding color for calibration.

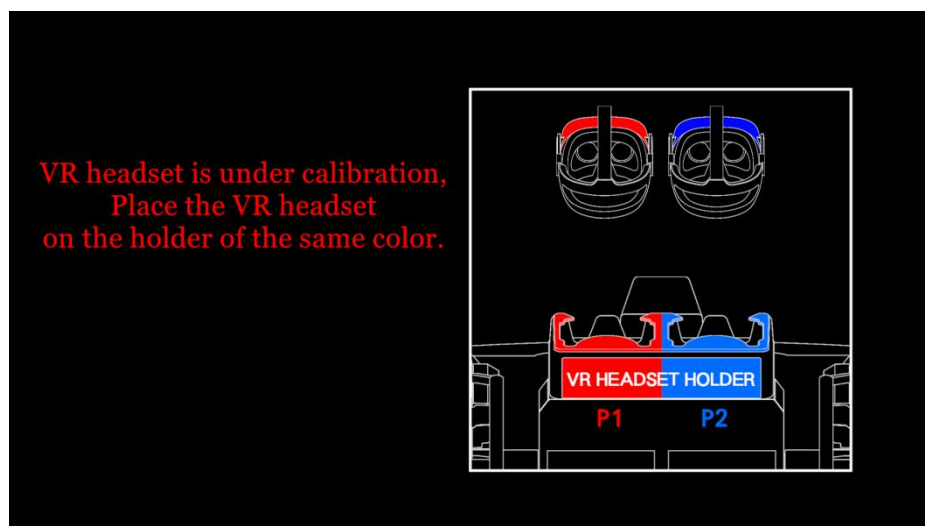

3. If the icon **【Sensor Function Off】** is displayed at the bottom left of the screen, press the **【Emergency】** button in front of the vehicle body to cancel the emergency stop function to complete the calibration of the Air Spring.



4.8 Precautions for Powering Machine Off

When Power off the machine, please follow the instructions below:

1. Please ensure that the game is in idle status and no player is sitting on the cabinet.
2. Power off the power supply and air compressor on the back of the cabinet.
3. Place the VR Headset on the VR stand in front.

5. HOW TO PLAY


1. Insert coins/Tap card to start the game.



2. Correctly fasten the seatbelt and put on the VR headset.



3. Select the level you want to play and shoot it to enter the game.

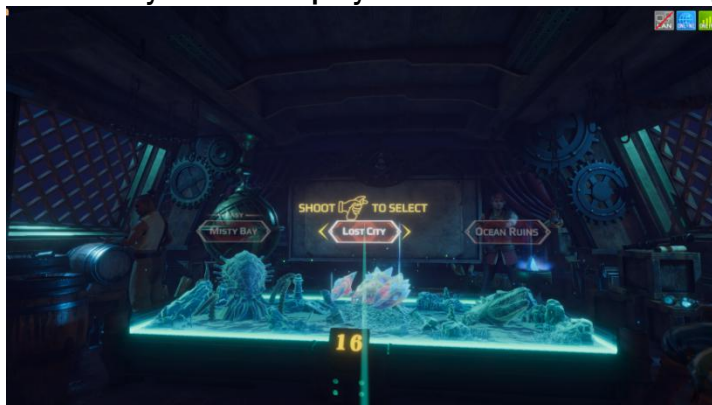


4. Enter the game to start playing. Shoot the monster to win score.



6. GAME OPTION

6.1 Adjustment button instruction

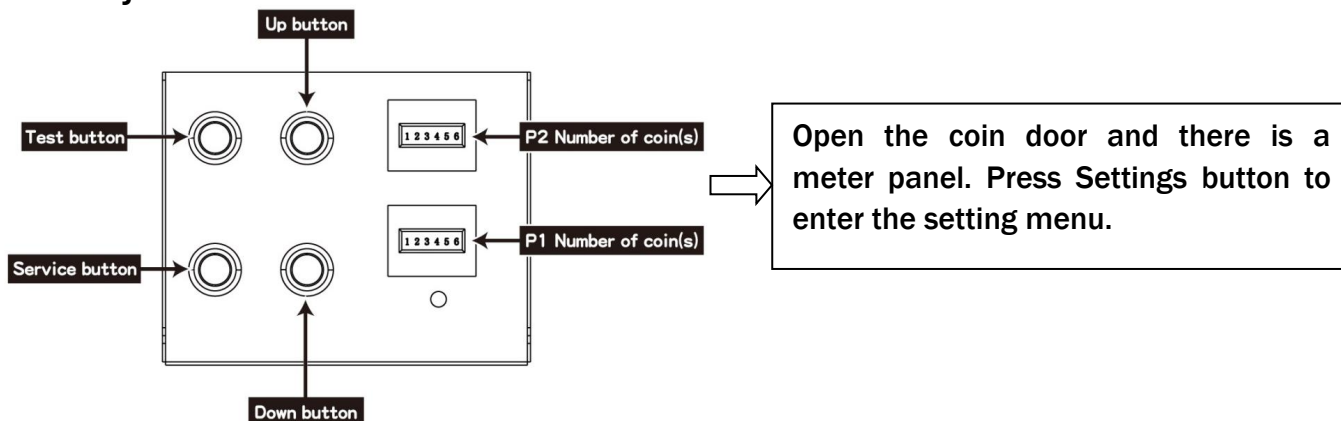

6.2 Main menu

Options
Hardware Test
System Settings
Game Settings
Income Data
System Reset
Exit

6.3 Hardware Test



Options
I/O Test
Screen Test
Sound Test
Connection Test
Counter Test
Output Test
Lamp Test

6.3.1 I/O Test

P1 Coin	P2 Coin
0	0
P1 Headset Sensor	P2 Headset Sensor
Middle	Middle
Left Right	Left Right
P1 Calibration View Button	P2 Calibration View Button
P1 Gun Trigger	P2 Gun Trigger
X-0	X-0
Y-0	Y-0
P1 Seatbelt	P1 Seatbelt
Emergency Stop Button	Infrared Sensor
Test Service Up Down	
Exit: TEST+SERVICE	

I/O applications	Testing method	Testing results
P1 Coin	Press the corresponding button	When you insert a coin, the amount of coins inserted will increase .
P2 Coin		
P1 Headset Sensor (Middle)	Place the VR Headset on the VR stand or Press the corresponding sensor button on the VR Stand.	The text will turn from white to red. The corresponding position of the icon will be displayed in red.
P1 Headset Sensor (Left)		
P1 Headset Sensor (Right)		
P2 Headset Sensor (Middle)		
P2 Headset Sensor (Left)		
P2 Headset Sensor (Right)		
P1 Calibrate View Button	Press the corresponding button	
P2 Calibrate View Button		
P1 Seatbelt	Fasten the P1 Seatbelt	"White" became "Red"
P2 Seatbelt	Fasten the P2 Seatbelt	"White" became "Red"
P1 Gun Trigger	Pull the P1 gun trigger.	The text will turn from white to red. The corresponding position of the icon will be displayed in red.
P2 Gun Trigger	Pull the P2 gun trigger.	
P1 Gun XY	Move the crosshair	The coordinates will be displayed according to the movement position.
P2 Gun XY	Move the crosshair	
Infrared Sensor	Sensor sensed obstacle	"White" became "Red"
Emergency Stop Button	Press the corresponding button	"White" became "Red"
Test		The text will turn from white to red. The corresponding position of the icon will be displayed in red.
Service		
Up		
Down		

 6.3.2 Screen Test

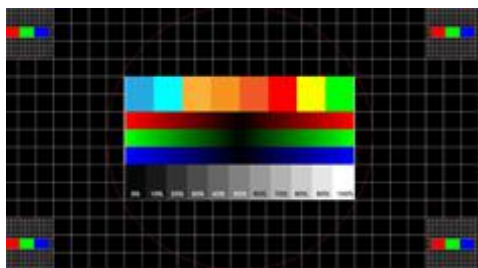

6.3.3 Sound Test

Options	Description
Auto Test	
Left Front	Test Sound Position
Right Front	
Center	
Left Rear	
Right Rear	
Subwoofer	
Exit	

6.3.4 Connection Test

Options	Status
Network Card Test	Wired Network/Wireless Network
Server Test	Please refer to 6.3.4.1
MAC Address	
IP Address	
Subnet Mask	
Gateway	
Exit	

6.3.4.1 Server Test

Options	Status
Gateway Test	
Connection	Wired Network/Wireless Network
P1	Connected/Connection Failed
P2	Connected/Connection Failed
Internet	Connected/Connection Failed
Server 1	Connected/Connection Failed
Server 2	Connected/Connection Failed
Exit	

6.3.4 Counter Test

Options	Status
P1 Coin Slot	Insert xx Coin(s)(Need actual coin testing)
P2 Coin Slot	Insert xx Coin(s)(Need actual coin testing)
Exit	


6.3.5 Output Test

Options	Description
Gun Test	Gun vibration test/Gun motor setting
Vibration Test	Shaking speaker test
Air Spring Test	Motion platform test
Drain Valve Test	
Fan Speed Test	
Jets Test	

6.3.5.1 Gun Test

Options	Status	Description
P1 Gun Vibration Setting	Type A/Type B	Type A:For Old motor Type B:For New motor
P1 Gun Vibration Test		3 levels of vibration from high to medium and low will be performed. It will vibrate for 3 seconds at a time
P2 Gun Vibration Setting		
P2 Gun Vibration Test		
Exit		

Note: How to distinct old motor and new motor:

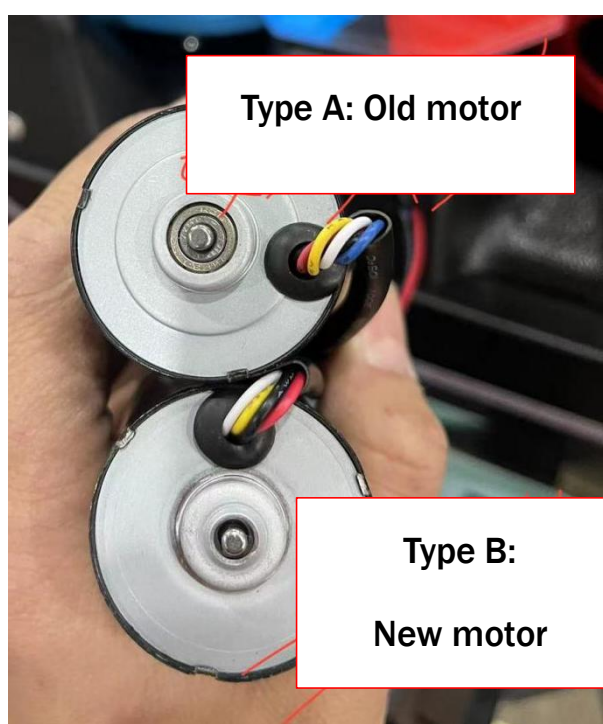


6.3.5.2 Vibration Test

Options	Description
Vibration Test	The vibration is divided into 4 frequencies Each frequency is divided into the three levels of high, medium, and low.
Exit	

6.3.5.3 Air Spring Test

Options	Description
Auto Test	
FL Up Test	Front left up test
FL Down Test	Front left down test
FR Up Test	Front right up test
FR Down Test	Front right down test
RL Up Test	Rear left up test
RL Down Test	Rear left down test
RR Up Test	Rear right up test
RR Down Test	Rear right down test
All Up Test	
All Down Test	
Burn-in Test	
Exit	

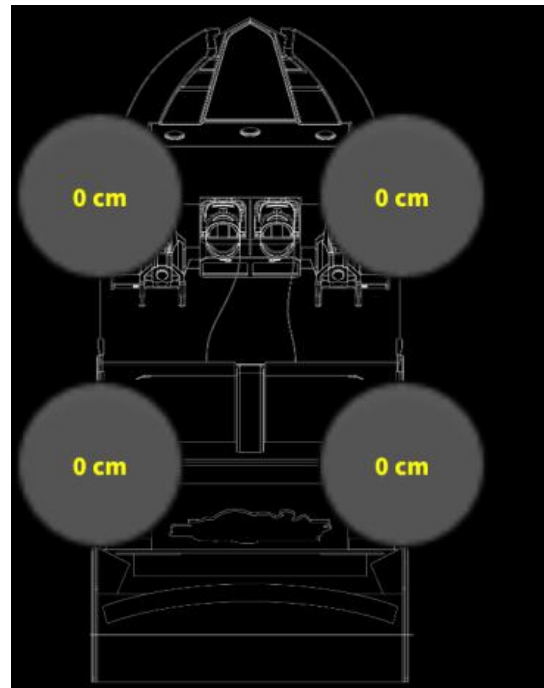

6.3.5.4 Drain Valve Test

Options	Description
Drain Valve Test	After pressing, the Drain Valve Test will automatically stop after 5 seconds.
Exit	

6.3.5.5 Fan Speed Test

Options	Description
Fan Speed Test	After pressing, the 4 fan speeds will be tested in order and each test will last 3 seconds.
Exit	

6.3.5.6 Jets Test

Options	Description
Jets Test	Press the 【Service】 button to start the testing process.
Exit	

6.3.7 Lamp Test

Options	Description
All light	
Auto Test	
P1 gun barrel light	
P1 gun side light	
P2 gun barrel light	
P2 gun side light	
Ship bow light	Ship head light
Ship anchor light	
Seat guide light	Seat side light
Base light	
Upper panel light	
Under screen light	
Screen side guiding light	
Exit	

6.4 System Settings

Options
Time Setting
Connection Setting
Country Setting
Store Setting
Password Setting

Options
Gun Calibration
Air Spring Adjustment
VR Headset Environment Setting
VR Stand Sensor Setting
Exit


6.4.1 Time Setting

Options
Date
Time
Timezone
Exit

6.4.2 Connection Setting

Options	Status
Group Number	1-9
Exit	

6.4.3 Country Setting

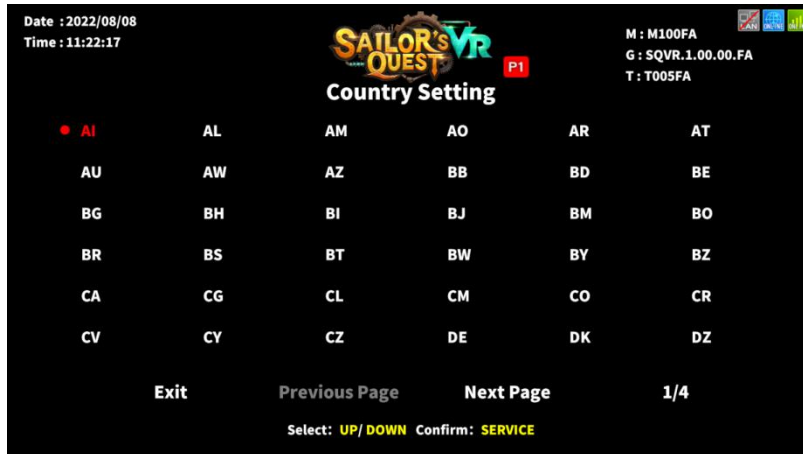

6.4.4 Store Setting



6.4.5 Password Setting

Options	Status	Description
Origin Password	0000-9999	Default password [0000]
New Password		
Confirm Password		
Exit		

6.4.6 Gun Calibration




6.4.7 Air Spring Adjustment

Adjustment
Exit
Limit is between
Current Platform Value
Left Front
Right Front
Left Rear
Right Rear

6.4.8 VR Headset Environment Setting

Options	Status
Environment Setting	Complete/Failed
Exit	

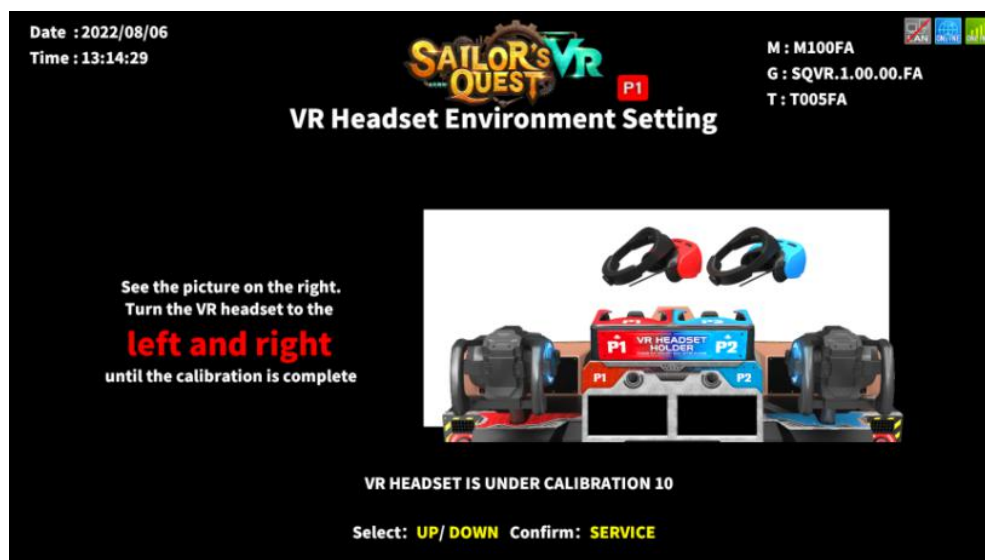

6.4.9 VR Stand Sensor Setting

Options	Status
Setting	On/Off
Exit	

6.4.10 Seatbelt Setting

Options	Status
Setting	On/Off
Exit	

6.5 Game Settings

Options	Description
Charge Mode Setting	Pay mode&Coins per game
Volume Setting	
Flow Time Setting	Select game level time
VR Headset Tutorial Setting	
Continue Setting	
Game Display Setting	Demo setting
Tutorial Setting	
Seatbelt Setting	
Exit	

6.5.1 Charge Mode Setting

Options	Status	Description
Charge Mode	Coin/Freeplay/Non-Coin	Pay mode
Single Play Cost	1-98	
Dual Play Cost	2-196	
Single Continue Cost	1-98	
Dual Continue Cost	2-196	
Exit		

6.5.2 Volume Setting

Options	Status	Description
Daytime Begin	00:00~23:00	Set daytime start time
Daytime Game Volume	0-100%	
Daytime Demo Volume	0-100%	
Nighttime Begin	00:00~23:00	Set nighttime start time
Nighttime Game Volume	0-100%	
Nighttime Demo Volume	0-100%	
Exit		

6.5.3 Flow Time Setting

Options	Status	Description
Choose the number of players	10-45s	
Select Scene	10-45s	Select Level time
Continue	10-45s	Select continue time after game over.
Safety	2/4s	
Stage Time	3-5s	
Exit		

6.5.4 VR Headset Tutorial Setting

Options	Status
Setting	On/Off
Exit	

6.5.5 Continue Setting

Options	Status
Setting	On/Off
Exit	

6.5.6 Game Display Setting

Options	Status
Show All Game Content	On/Off
Exit	

6.5.7 Tutorial Setting

Options	Status
Setting	On/Off
Exit	

6.6 Income Data

Options
Daily Income
Monthly Income
Total Report
Exit

6.6.1 Daily Income

Date	P1 Coin(s)	P2 Coin(s)	Total Game	New Game	Continue	Non-coin	Freeplay
Dual	Dual Continue	Service	Total Time	Game Time	Avg. Game Time		
Average:							
Change Page:UP/DOWN Exit: SERVICE							

Note: Descriptions of each item

Item	Descriptions
Date	Date of record
P1 Coin(s)	Total number of P1 coins inserted that day
P2 Coin(s)	Total number of P2 coins inserted that day
Total Game	Total number of games that day
New Game	Number of times coins were inserted to start new games that day
Continue	Number of times coins were inserted to continue games that day
Non-Coin	Total number of non-coin games that day
Freeplay	Total number of freeplays that day
Dual	Total number of dual-player games that day
Dual Continue	Number of times coins were inserted to dual-player continue games that day
Service	Total number of service buttons pressed that day
Total Time	The total time the machine was on that day
Game Time	Total game time of that day
Avg.Game Time	Average game time of that day Calculation formula: Game Time / Total Game

6.6.2 Monthly Income

Date	P1 Coin(s)	P2 Coin(s)	Total Game	New Game	Continue	Non-coin	Freeplay
Dual	Dual Continue	Service	Total Time	Game Time	Avg. Game Time		
Average:							
Change Page:UP/DOWN Exit: SERVICE							

Note: Descriptions of each item

Item	Descriptions
Date	Date of record
P1 Coin(s)	Total number of P1 coins inserted that month
P2 Coin(s)	Total number of P2 coins inserted that month
Total Game	Total number of games that month
New Game	Number of times coins were inserted to start new games that month
Continue	Number of times coins were inserted to continue games that month
Non-Coin	Total number of non-coin games that month
Freeplay	Total number of freeplays that month
Dual	Total number of dual-player games that month
Dual Continue	Number of times coins were inserted to dual-player continue games that month
Service	Total number of service buttons pressed that month
Total Time	The total time the machine was on that month
Game Time	Total game time of that month
Avg.Game Time	Average game time of that day Calculation formula: Game Time / Total Game

6.6.3 Total Report

Options	Options
Total Coin(s)	Dual
P1 Coin(s)	Dual Continue
P2 Coin(s)	Service
Total Game	Total Time
New Game	Game Time
Continue	Percentage of Dual
Non-Coin	Percentage of Idle
Freeplay	Exit

Note: Descriptions of each item

Item	Descriptions
Total Coin(s)	Total number of coins deducted overall
P1 Coin(s)	Total number of P1 coins deducted overall
P2 Coin(s)	Total number of P2 coins deducted overall
Total Game	Total number of games overall
New Game	Number of times coins were inserted to start new games in total
Continue	Number of times coins were inserted to continue games in total
Non-Coin	Total number of non-coin games overall
Freeplay	Total number of freeplays overall
Dual	Total number of two-player games overall
Dual Continue	Number of times two-player coins were inserted to continue games in total
Service	Total number of Service overall
Total Time	Total The total time the machine was on overall
Game Time	Total game time overall
Percentage Of Dual	Dual / Total Game
Percentage Of Idle	Percentage of time the machine was sitting idle after it was switched on Calculation formula: (Business time - Game Time)/ Business time x100%

6.7 System Reset

Options
Reset Income Data
Restore Default Setting
Update Progress
Exit

6.7.1 Update Progress

Options
Current Version
Available Update
Exit

7. TROUBLESHOOTING

7.1 Common Problem

Please confirm that all connectors fit tightly.

Symptom	Possible Cause	Recommended action
Game will not start	Frame assembly connector is loose.	Check connector.
	Frame assembly fault	Contact with UNIS Service.
Power off	Circuit protector make power SW in off state.	Turn on power SW again. If appeared again and again, machine has anomaly. Please contact with UNIS Service.
No sound	Low volume	Raise the volume.
	Connector loose.	Check connector.
	Speaker fault.	Check speaker.
	POT installation error.	Install POT correctly.
	POT fault.	Change POT.
	Audio cable problem.	Reconnect the audio cable or change it.
	PC crash.	Restart or system recovery.
	Driver problem	Restart the audio driver.
Display black screen	Check connectors.	Plug in connector tightly
	Display fault.	Utilize another source such as a PC to verify if the display is operational.
	RAM is loose.	Remove and reinsert RAM.
Display blue screen	PC power cord is loose	Check PC power cord whether is loose.
	VGA signal cable is loose.	Check VGA cable
	PC video card is loose.	Reseat video card.
	“0X000000A” code appears. Conflict between computer drive and software.	Contact service

Note: After replacing component from PC (except for RAM), and replacing monitor, the game should be recovered again with the recovery stick attached to the machine.

If you see following troubleshooting, please try the recommended action.

Problem	Recommended action
Unable to enter the game or shoot.	Please enter 【Main Menu】 → 【Hardware Test】 → 【I/O Test】 to test the gun trigger.
Button not responding.	Please enter 【Main Menu】 → 【1. Hardware Test】 → 【1-1. I/O Test】 to test the unresponsive device.
Crosshair out of alignment	Please enter 【Main Menu】 → 【System Setting】 → 【Gun Calibration】 to calibrate the gun.
Blank Screen on VR Headset	Please check if the cables of the VR Headset are connected properly.
Severe Image Shift on the VR Headset	Please perform the VR Headset calibration according to 【VR Headset Environment Setting】 .
The VR Headset cannot be calibrated after being placed on the stand.	Please place the VR Headset on the stand with the corresponding color and press the 【Calibrate View Button】 on the side of the stand to calibrate.
VR Headset environment settings failed.	1. Please confirm whether the VR stand sensor settings have been enabled. Enter 【Main Menu】 → 【System Setting】 → 【VR Headset Environment Setting】 2. After confirming the headset stand sensor settings have been configured normally, please check if the Headset Sensor is malfunctioning. Enter 【Main Menu】 → 【Hardware Test】 → 【I/O Test】 to test the headset sensor.
The speakers do not produce sound.	1. Open the maintenance door of the cabinet, and check if the volume of the power amplifier is adjusted to its minimum value. 2. Check if the power of power amplifier is turned on. 3. Check if the audio cable connected the power amplifier and cabinet is coming off. 4. Please enter 【Main Menu】 → 【Game Setting】 → 【Volume Setting】 to adjust the volume.
The machine lights do not light up.	1. Enter 【Main Menu】 → 【Hardware Test】 → 【Lamp Test】 , and run the testing of wrongly-functioning lights.
The game's motion sensing are fading or non-responsive.	1. Enter 【Main Menu】 → 【Hardware Test】 → 【Output Test】 to test the problematic motion sensing. 2. Check if 【Emergency】 is enabled. 3. Check if there are foreign objects in the infrared sensor area behind the seat. 4. Check the rear of the machine Whether the AIR COMPRESSOR is not turned on normally. 5. If the issue persists, please contact your local distributor.
The Operator Settings are inoperable or unresponsive	1. Press and hold the "Test Button" and "Service Button" at the same time for 3 seconds to return to the "Coin Page". 2. If the issue persists, please contact your local distributor.

7.2 Troubleshooting

Troubleshooting display	Possible Cause	Influence	Recommended action
FAIL TO ACTIVATE MOTION PLATFORM	Computer cannot get board signal of I/O.	Motion platform cannot be used normally.	1. Check whether the I/O board is normally powered on. 2. Check whether the fuse is damaged. 3. If the above actions are ineffective, replace the I/O1board and test.
FAIL TO ADJUST MOTION PLATFORM	1. Air compressor power is not ON. 2. Emergency stop button is pressed. 3. Air compressor airbag pressure has not been adjusted to 0.25Mpa. 4. Inflated signal line or air tube is connected incorrectly.	The motion platform does not move or reacts incorrectly.	1. Enter 【Main Menu】 → 【System Setting】 → 【Air Spring Adjustment】 to perform motion platform adjustment. 2. If the motion platform does not recover after calibration, check whether there is a fault in the solenoid valve. 3. Check whether there is a fault in the height sensor or it has been installed incorrectly.
MOTION PLATFORM IS OFF	1. Emergency stop button turned on. 2. Fail To Adjust Motion Platform. 2. Air compressor power is not ON. 3. Infrared sensing error. 4. Unfastening the seatbelt while playing.	Motion platform cannot be used normally.	1. If the light of the emergency stop button on the cabinet Flashing. Press the emergency stop button to activate motion. 2. Please confirm whether the air compressor is turned on normally. 3. Please confirm whether a foreign object is blocking the infrared safety device.
AIR COMPRESSOR IS OFF	AIR COMPRESSOR power is not ON.	1. The motion platform does not move, or lifting action response is weak. 2. The following hardware errors may have also occurred: "FAIL TO ACTIVATE MOTION PLATFORM" or "FAIL TO ADJUST MOTION PLATFORM"	1. Please confirm whether the air compressor is turned on normally. 2. If you hear the sound of an air jet (discharging water) during start up, it may be because there is a fault in the power supply of the air compressor. 3. Please restart air compressor.

Troubleshooting display	Possible Cause	Influence	Recommended action
P1/P2 VR HEADSET ERROR	1. No VR headset signal found during power on. 2. The VR headset is not connected to the correct USB and HDMI ports during power on.	Cannot play normally.	1. Reconnect the HDMI cable and USB cable of the VR Headset during the game; 2. Replace the VR Headset and test.
P1/P2 GUN I/O ERROR	Computer cannot get board signal of Gun I/O.	1. The following devices will not function normally, such as: Gun and Headset Sensor、Calibrate View Button、Gun barrel light、Gun side light. 2. Cannot play normally.	1. Check whether the guns and headset sensors are working normally. If they are working normally, please restart the machine to check if the error message has disappeared. 2. Check whether the I/O board is normally powered on. 3. Check whether the fuse is damaged. 4. Replace the I/O board and test.
INFRARED SAFETY SENSOR ERROR	1. The infrared safety device was blocked by a foreign object during calibration. 2. The device itself has been damaged. 3. Signal line connected incorrectly 4. Computer cannot get board signal of I/O.	The motion platform does not move.	1. Enter【Main Menu】→【Hardware Test】→【I/O Test】 ,Check whether the infrared sensing items are working normally. 2. Replace the infrared sensor 3. Check if the signal line has been connected incorrectly. 4. blocked by a foreign object during calibration? 5. Check whether the I/O board is normally powered on? Check whether the fuse is damaged? 6. If the above actions are ineffective, replace the I/O board and test.

8. MAINTENANCE & INSPECTION

8.1 Safety Check

Check the points listed before operating the machine. These checks are necessary for safe machine operation:

1. Test game before operation each day.
2. Conduct monthly routine checks of game components to ensure good working condition.
3. Check the machine regularly for dust and clean when necessary.

Note: Parts and components require preventative maintenance to maintain proper operation.

8.2 Handling Precautions

When installing or inspecting the machine, be very careful and pay attention to ensure that the player can enjoy the game safely.

Inappropriate handling running counter to the cautionary matters can cause personal injury or damage to the machine.

NOTICE

We do not recommend using power tools as they may cause damage.

8.3 Linking Connection Instruction


Notice: All machines should be installed the same version software if needs to be linked.

The cabinets to be connected must have the same group number in order to be connected.

Note: Utilize Up and Down button to choose and press the Service button to enter and set.

Step 1 Go to [Main Menu] → [System Settings] → [Connection Setting].

Step 2 Set the Group Number.

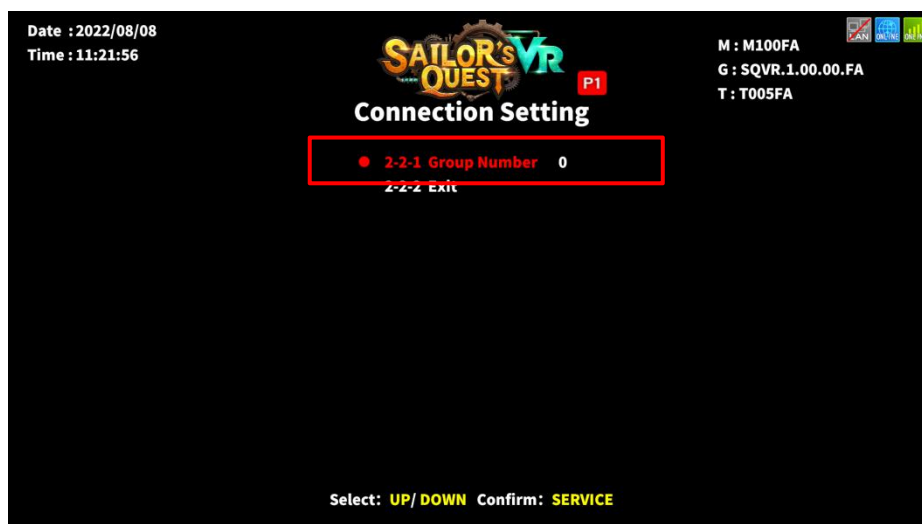

8.4 VR Headset Calibration(VR DETECTION ERROR)


Step 1 Please check if the VR Headset cables are disconnected. Reconnect the cables and restart the headset.

Step 2 Enter the **【Main Menu】** → **【System Setting】** → **【VR Stand Sensor Setting】** .

Step 3 If the Setting is **【On】** , the VR Headset manual calibration steps are as below:

Step 3-1 If the game is in progress, please press the **【Emergency】** button first and then remove the VR headset.

Step 3-2 Place the VR Headset on the VR stand with the corresponding color. The system will start re-calibration.

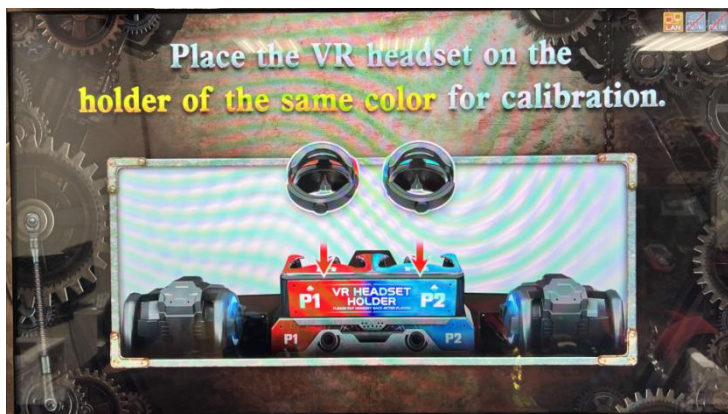



Step 4 If the Setting is **【Off】** , the VR Headset manual calibration steps are as below:

Step 4-1 If the game is in progress, please press the **【Emergency】** button first and then remove the VR headset.

Step 4-2 Place the VR Headset on the VR stand with the corresponding color.

Press the **【Calibrate View Button】** on both sides of the headset. The system will conduct re-calibration after a 3-second countdown.

Step 4-3 Once the message **【Calibrating, Do Not Remove VR Headset】** stops displaying on the screen and goes back to the game screen, the VR Headset manual calibration is complete.

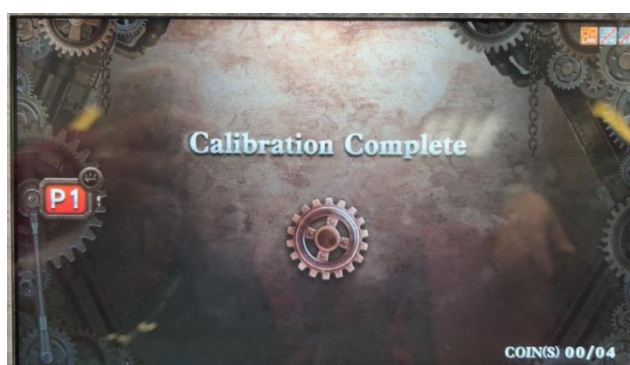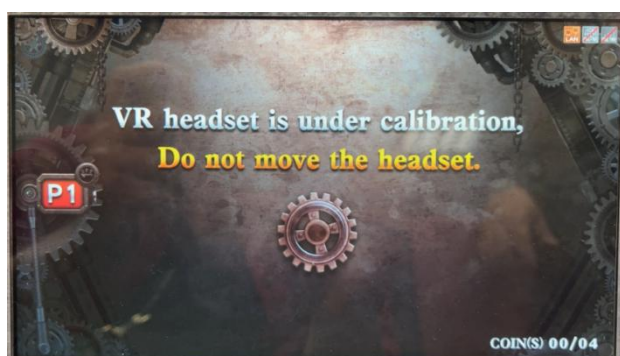


8.5 VR Headset Calibration (Solve Issue)

Please confirm whether there are faults in the 3 sensor buttons in the P1 VR stand and the P2 VR stand.



Step 1 Enter the **【Main Menu】** → **【I/O Test】**, Testing to see if it is functioning normally or not.(If the sensor is faulty, please replace it.)

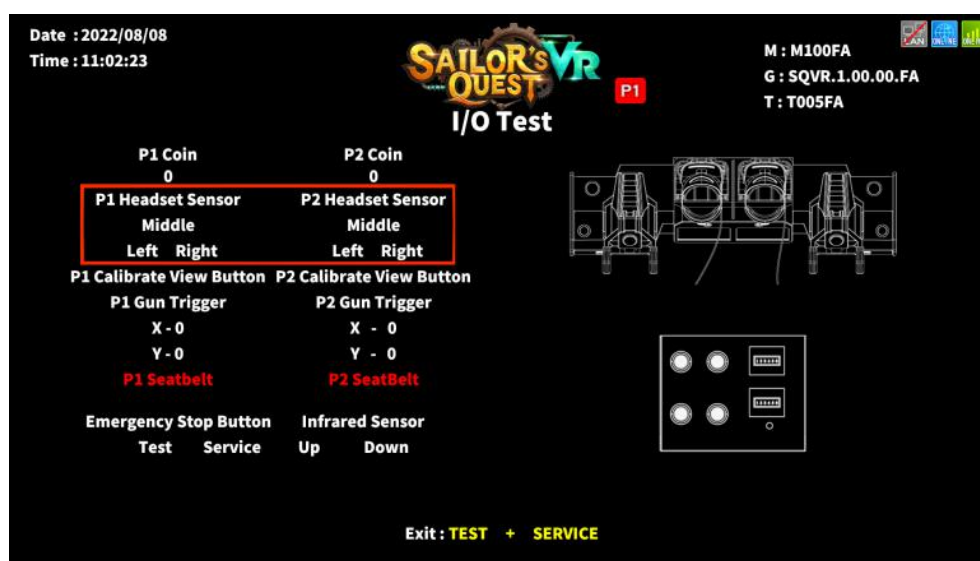

Step 2 After confirming the headset sensor buttons are working normally, please re-calibrate the headset.

Enter **【Main Menu】** → **【System Setting】** → **【VR Headset Environment Setting】**.
Place the VR Headset on the VR stand with the corresponding color.

Step 3 After confirming the VR Headset has been placed on the VR stand, press **【Environment Setting】** to begin calibrations.




8.6 VR Headset Calibration (Message shown on the screen)

When the message **【VR Headset Detection Failure, Please Inform Staff】** appears in the center of the screen, please follow the steps below:

Step 1 Press the **【Test】** button and enter **【Operator Settings】**.

Step 2 Enter [Main Menu]→ [System Setting]→ [VR Headset Environment Setting]to perform the environment settings and positioning calibration.

Step 3 After selecting and implementing [Environment Setting], [Settings Status] will appear, then the system will run automatically. Please follow the instructions on the screen to perform the VR headset calibration.

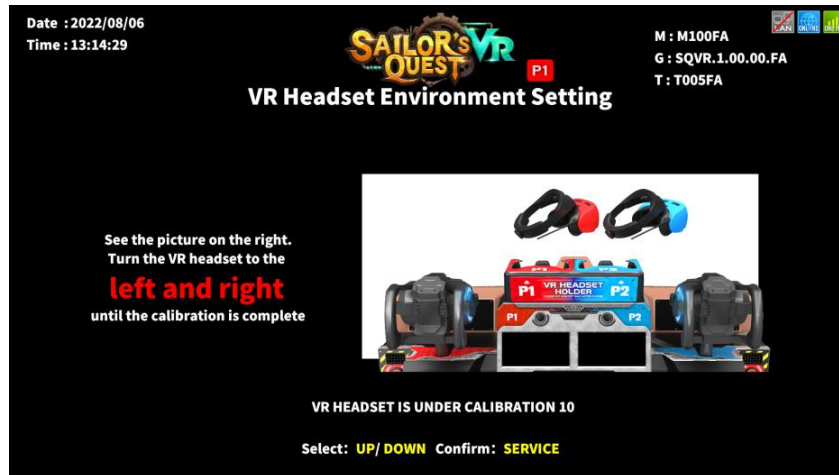


8.7 How to Stop The Game During Gameplay

If a player suddenly feels ill during gameplay and needs to stop the game:


Please press the **【Emergency】** button first and then remove the VR Headset.

Press and hold the **【P1 Gun Trigger】** and **【P1 Calibrate View Button】** simultaneously for 3 seconds to terminate the game early.

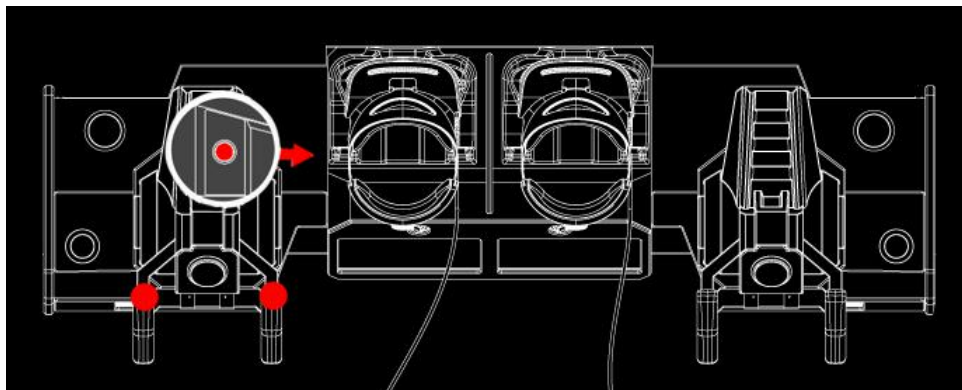

8.8 Software Update Online Instruction

Step 1 Open the Back upper door. Connect cabinets through the router and connect the router to the internet.

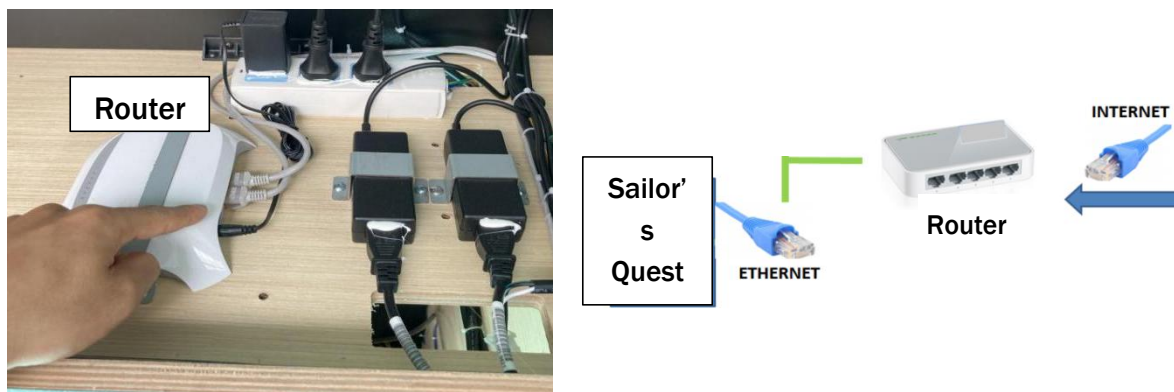


Step 2 Locate the monitor upper right side. If two ONLINE icons on. It means the the network is connected.



Step 3 Enter **【System Reset】** → **【Update Progress】**. In this settings will shown the latest software. The machine will download the latest software automatically after connecting the network.

Note: The game will work normally when downing software. You can back to the game for playing.

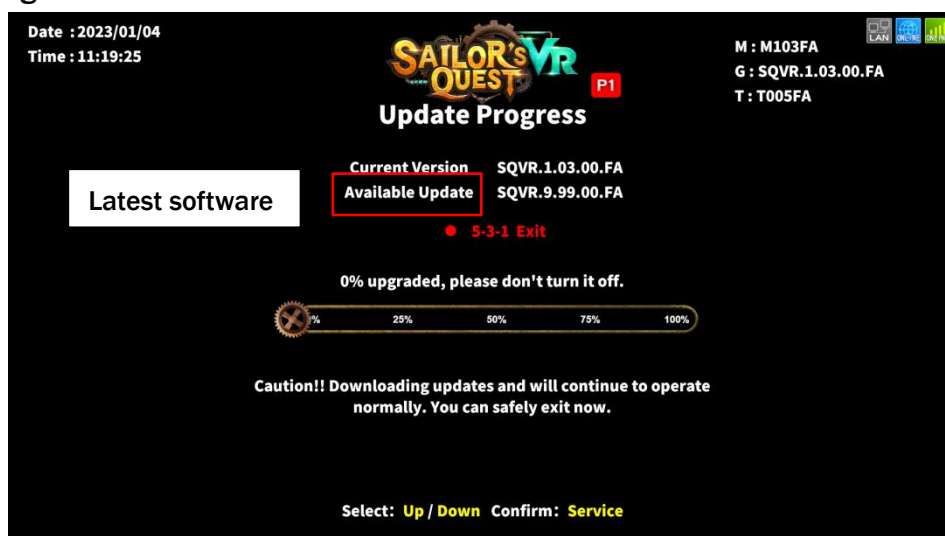


Step 4 After the software downloading is finished, the machine needs to be restarted to automatically install the new version of the software.

8.9 Seat Assembly Woofer Replacement Instruction

Step 1 Locate Seat Assembly Woofer, loosen screws to remove woofer fixing plate.

Step 2 Loosen screws to remove woofer, unplug the connectors.

Step 3 Replace it with new Woofer and install it in reversed order.

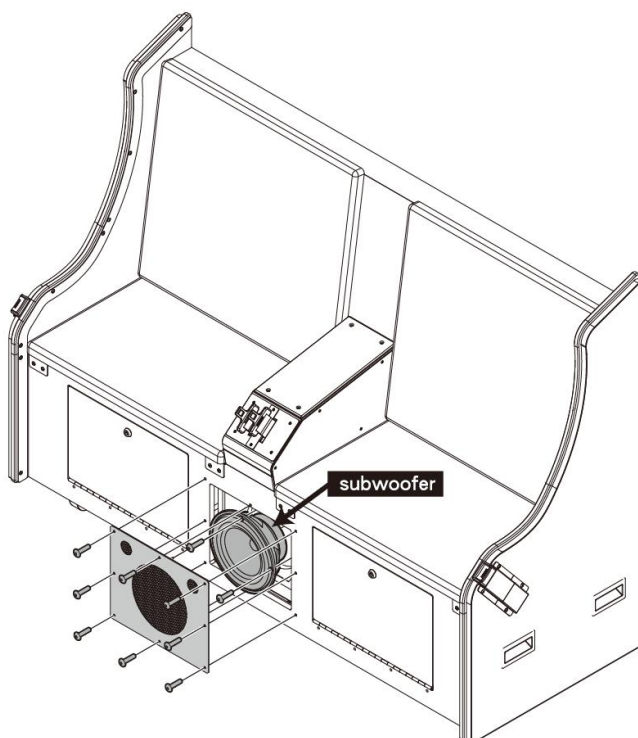


8.10 Seat Assembly Shaking Speaker Replacement Instruction


Step 1 Locate Seat Assembly, loosen screws to remove seat cushion. Unplug Shaking Speaker connector.

Step 2 Turn over the seat cushion, loosen screws to remove Shaking Speaker.

Step 3 Replace it with new speaker and install it in reversed order.

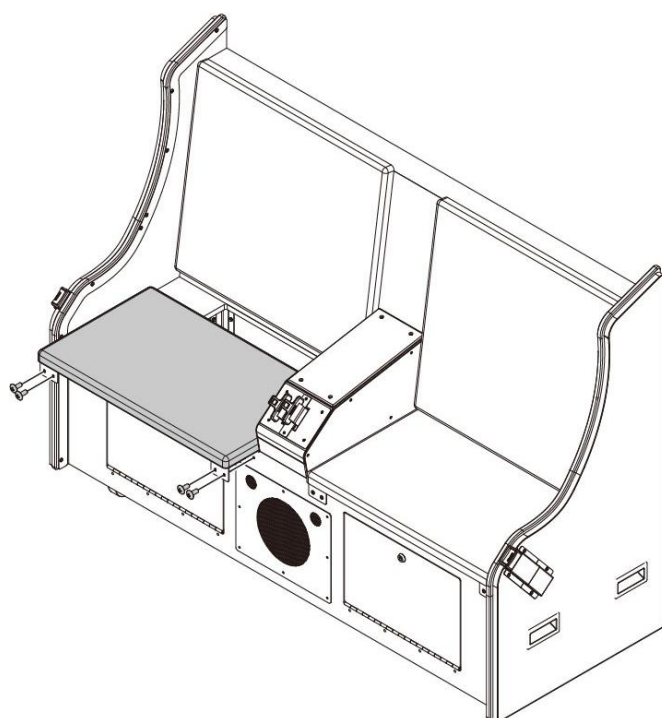


Shaking speaker

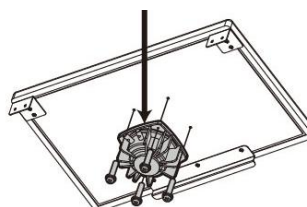

8.11 Amplifier Replacement Instruction

Step 1 Open back upper door. Unplug amplifier connectors. Loosen screws to remove amplifier.


Step 2 Replace it with new Amplifier and install it in reversed order.

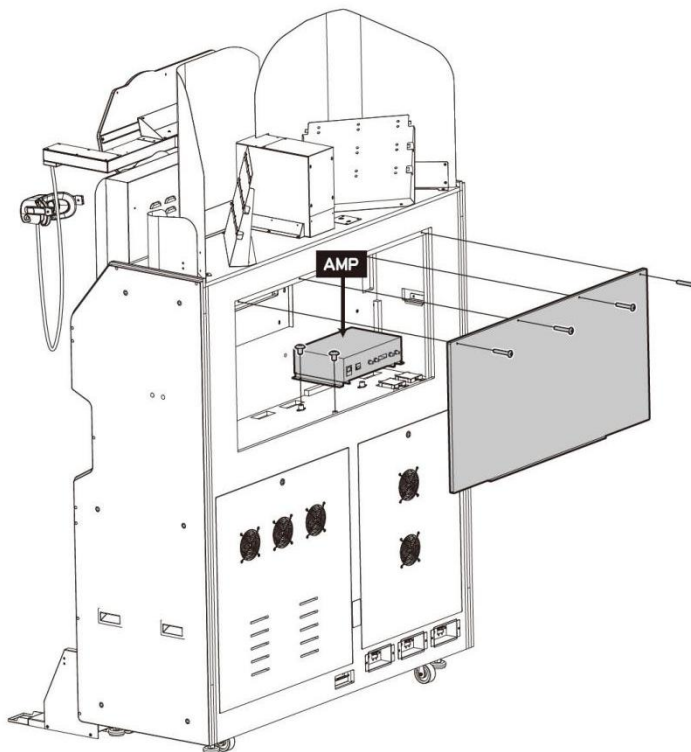

8.12 PC Replacement Instruction

Step 1 Open back R bottom door. Unplug PC connectors. Loosen screws to remove PC.

Step 2 Replace it with new PC and install it in reversed order.

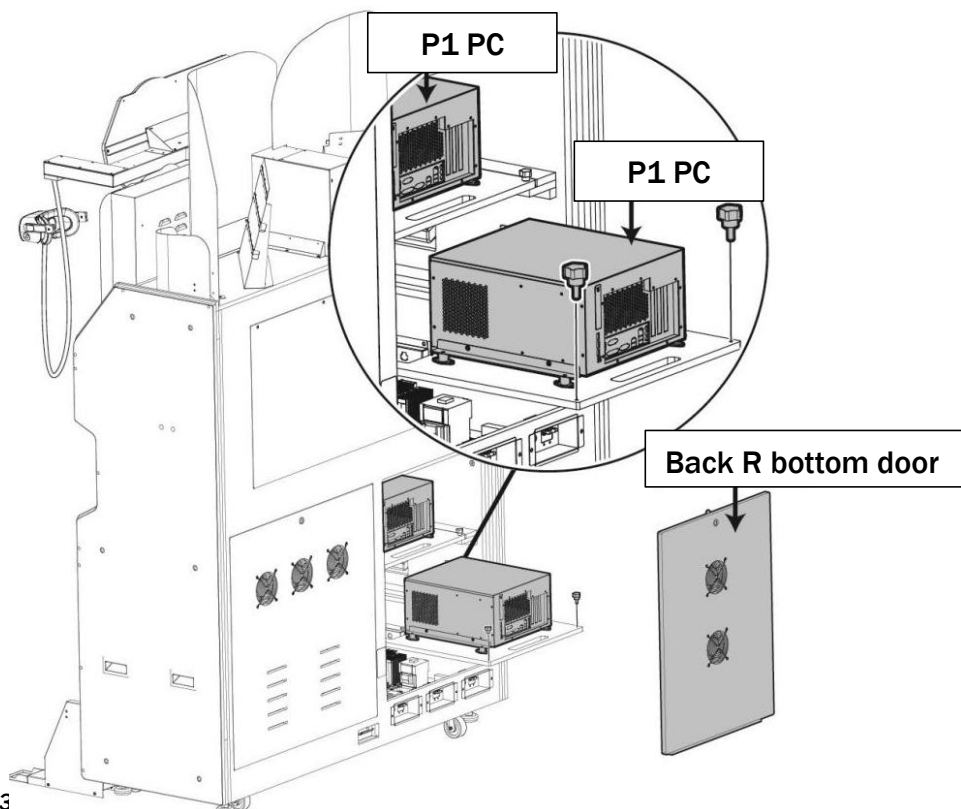


8.13 Back Platform Sensor Replacement Instruction

Step 1 Open Seat assembly service door. Loosen screws to remove Sensor fixing plate.

Step 2 Unplug Sensor connectors. Loosen screws to remove Sensor.

Step 3 Replace it with new Sensor and install it in reversed order.

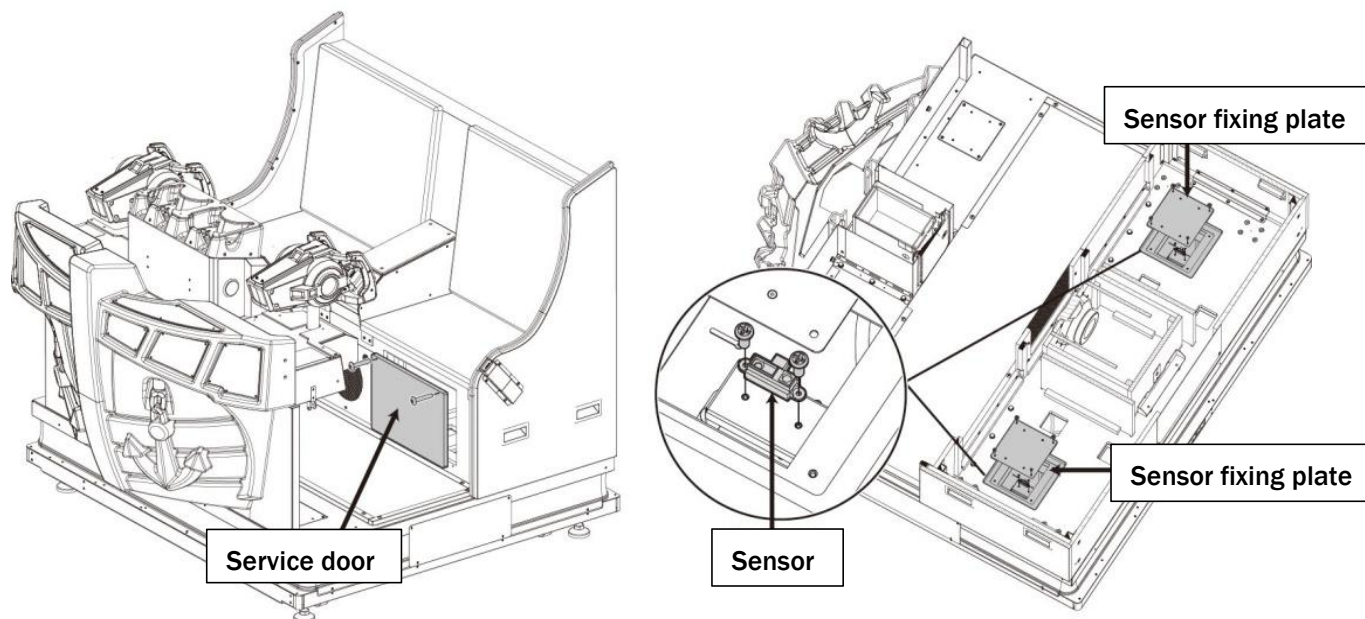


8.14 Platform IO Board Replacement Instruction

Step 1 Open Platform assembly service door.

Step 2 Unplug IO board connectors. Loosen screws to remove IO board.

Step 3 Replace it with new IO board and install it in reversed order.

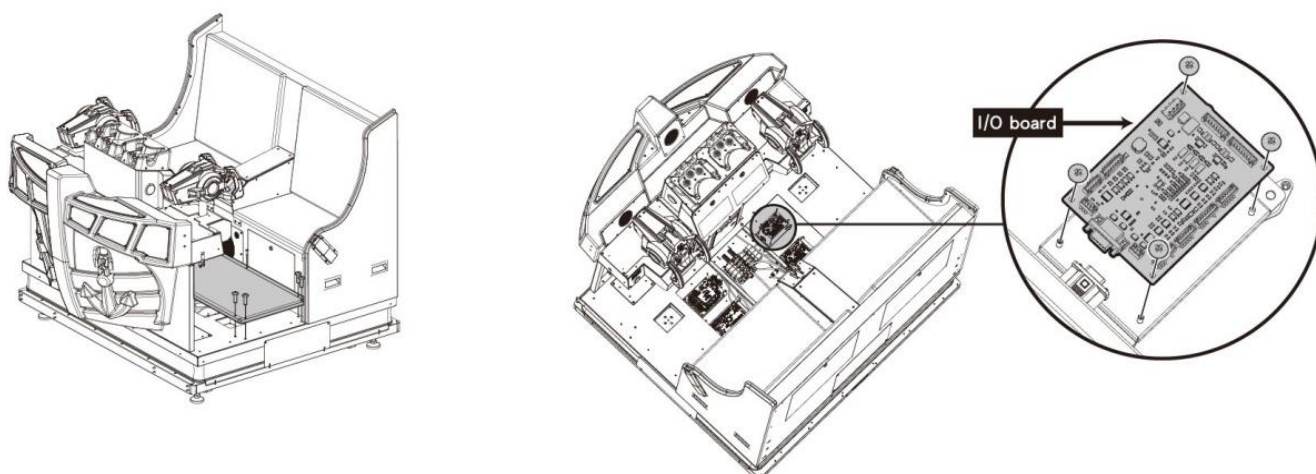


8.15 Platform Solenoid Valve Replacement Instruction

Step 1 Open platform assembly service door.

Step 2 . Loosen screws, unplug tube remove solenoid valve.

Step 3 Replace it with new Solenoid valve and install it in reversed order.

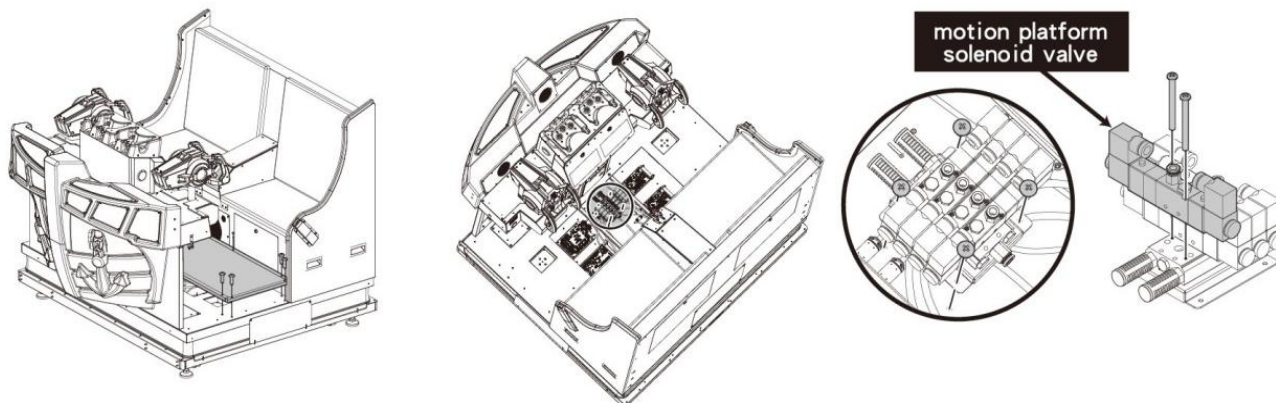


8.16 Platform Front Sensor Replacement Instruction

Step 1 Open motion platform assembly front service door.


Step 2 Unplug Sensor connectors. Loosen screws to remove Sensor.

Step 3 Replace it with new Sensor and install it in reversed order.

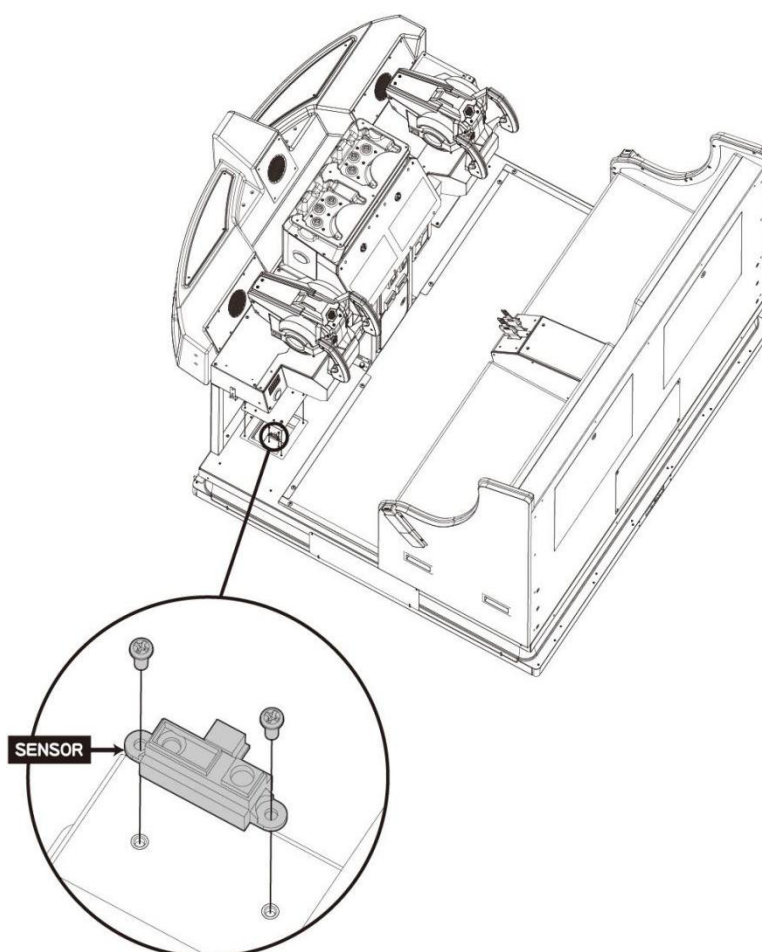


9. OVERALL CONSTRUCTION

9.1 General Assembly

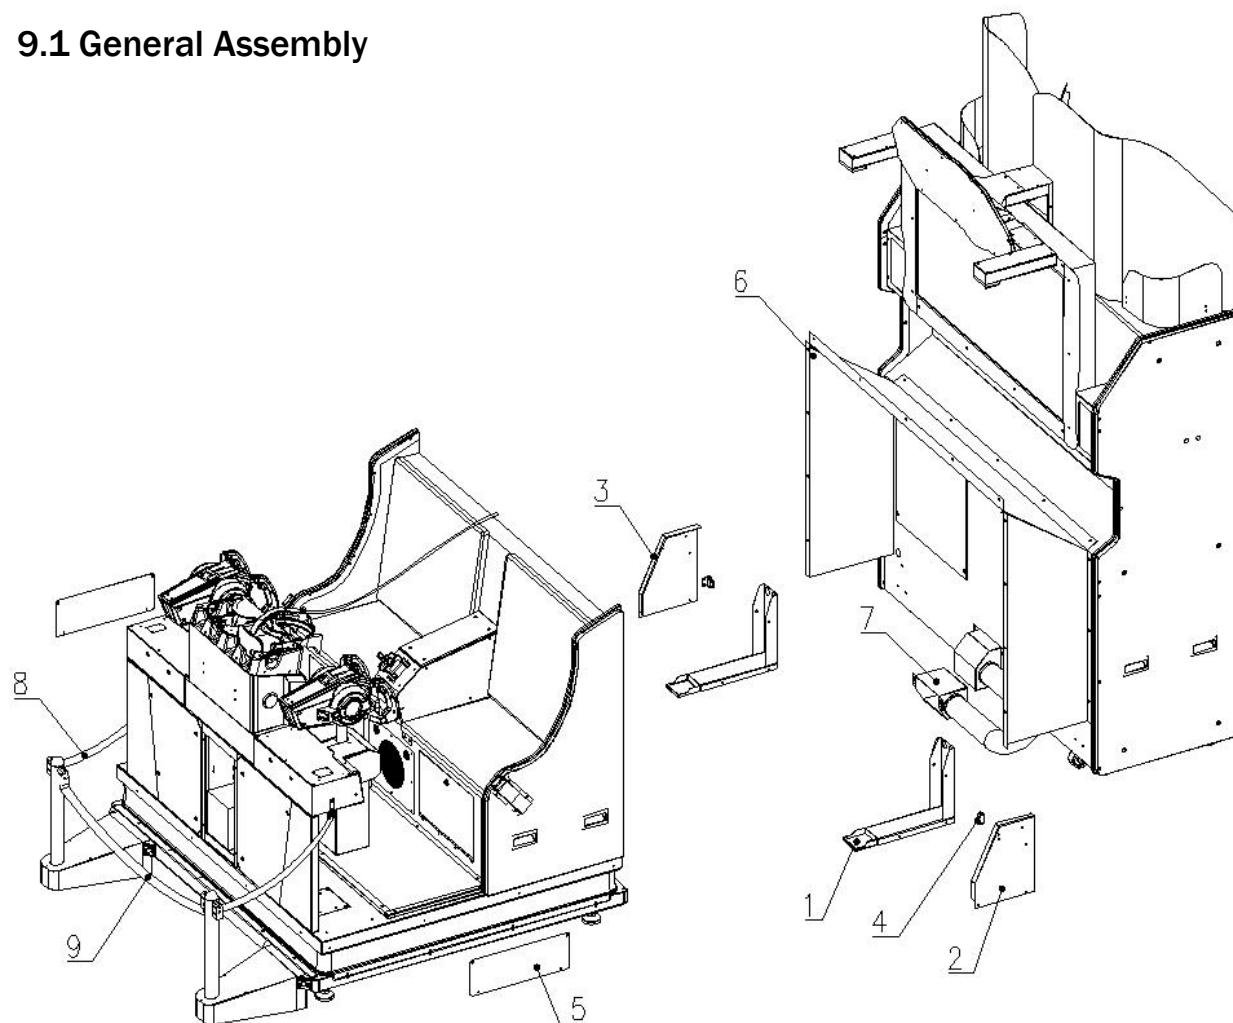


No.	Part No.	Code No.	Name	version	Qty
1	S185-0001-00	202.4.2141.285	Back cabinet side bracket	V1.1	2
2	S185-0002-00	202.4.2141.286	Back cabinet side bracket plate 1	V1.1	1
3	S185-0003-00	202.4.2141.287	Back cabinet side bracket plate 2	V1.1	1
4	S185-0004-00	202.4.2141.288	Sensor detect plate	V1.1	2
5	S185-0005-00	202.4.2141.329	Motion platform fixing plate	V1.1	2
6	S185-1201-00	206.4.2141.090	Anti-drop net cloth	V1.1	1
7	S185-0006-00	206.4.2141.096	Skirt PVC	V1.1	1
8	S185-0007-00	2.51.08.010017	Fence nylon rope(0.8m)	V1.1	2
9	S185-0008-00	2.51.08.010018	Fence nylon rope(1.2m)	V1.1	1

9.2 Gun assembly

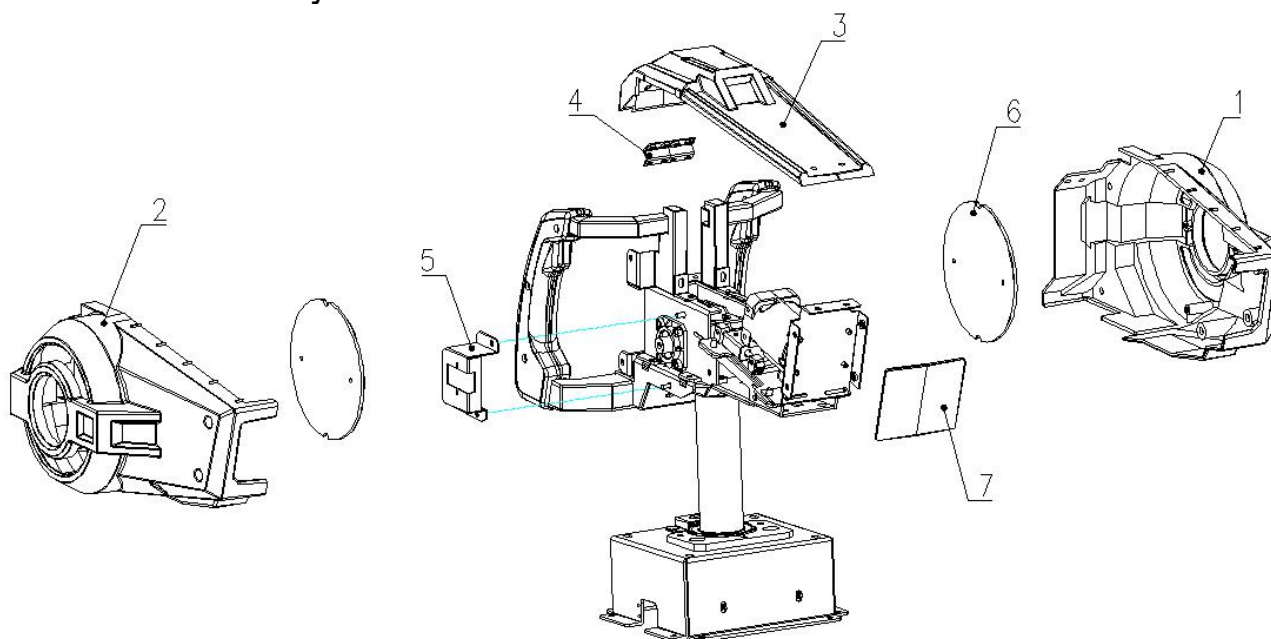


No.	Part No.	Code No.	Name	version	Qty
1	S185-0102-00	206.4.2141.106	L gun shell	V1.1	2*2
2	S185-0103-00	206.4.2141.107	R gun shell	V1.2	1*2
3	S185-0104-00	206.4.2141.036	Mid gun shell	V1.1	1*2
4	S185-0142-00	202.4.2141.167	Gun shell fixing plate	V1.1	2*2
5	S185-0143-00	202.4.2141.168	Solenoid fixing plate upper	V1.1	1*2
6	S185-0144-00	206.4.2141.080	Side light acrylic	V1.2	2*2
7	S185-0145-00	206.4.2141.081	Front light acrylic	V1.2	1*2

9.3 Turning Assembly

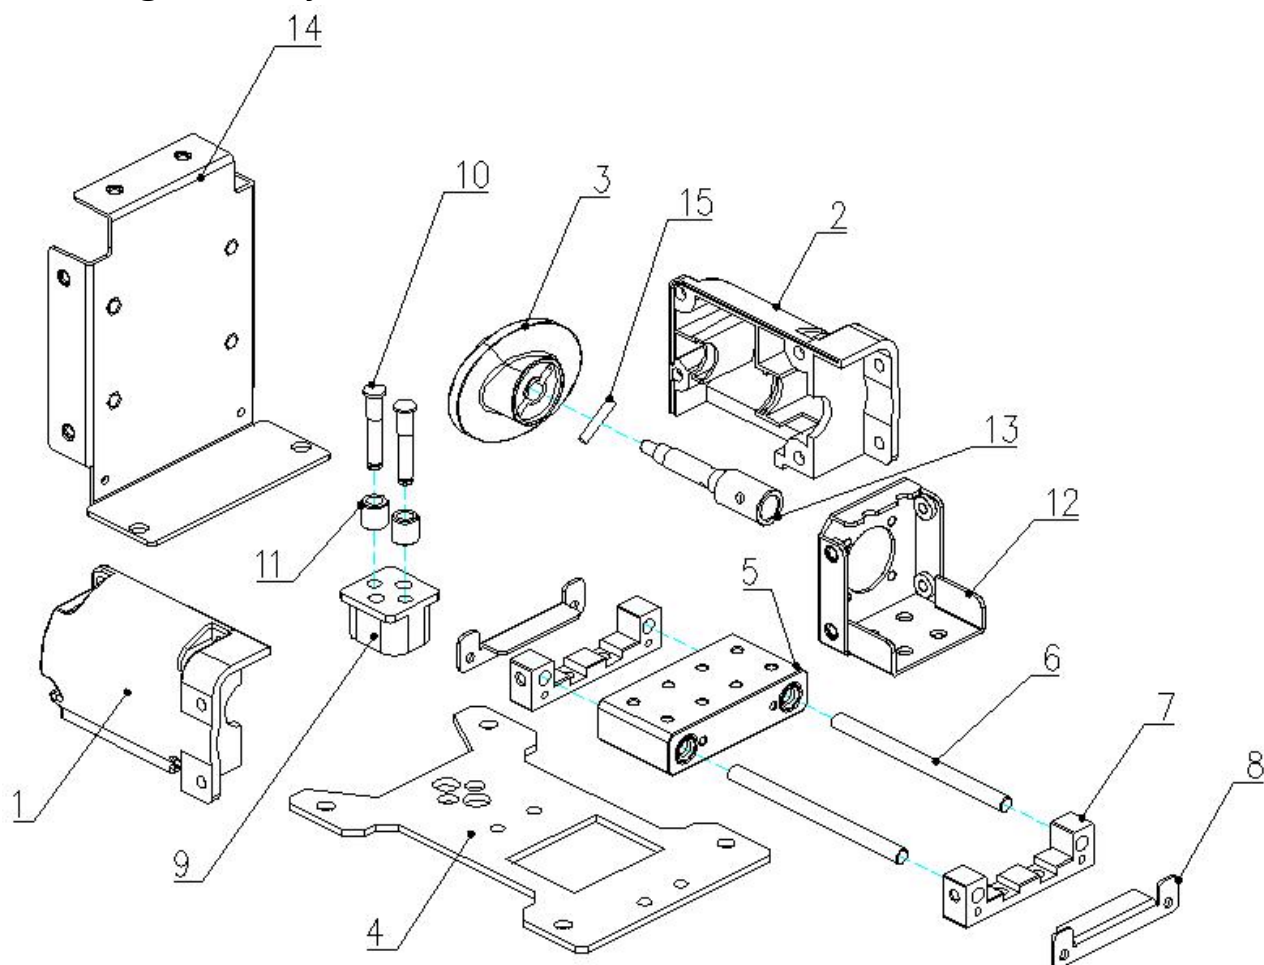


No.	Part No.	Code No.	Name	version	Qty
1	S185-0106-00	206.4.2141.120	Spiral cover L	V1.1	1*2
2	S185-0107-00	206.4.2141.121	Spiral cover R	V1.1	1*2
3	S185-0108-00	206.4.2141.039	Motor spiral column	V1.1	1*2
4	S185-0109-00	202.4.2141.139	Turning assy. base plate	V1.3	1*2
5	S185-0110-00	202.4.2141.337	sliding plate	V1.1	1*2
6	S185-0111-00	202.4.2141.338	sliding axle	V1.2	2*2
7	S185-0112-00	202.4.2141.332	Sliding axle fixing plate	V1.1	2*2
8	S185-0113-00	202.4.2141.143	Sliding blocking plate	V1.1	2*2
9	S185-0114-00	202.4.2141.144	Turning fixing plate	V1.1	1*2
10	S185-0115-00	202.4.2141.145	Turning column plate	V1.1	2*2
11	S185-0116-00	202.4.2141.146	Turning shaft	V1.1	2*2
12	S185-0117-00	202.4.2141.334	Motor fixing plate	V1.1	1*2
13	S185-0118-01	202.4.2141.148	Gun motor shaft	V1.3	1*2
14	S185-0119-00	202.4.2141.149	Gun motor light plastic fixing plate	V1.2	1*2
15	S185-0120-00	202.4.2141.304	Limit column	V1.1	1*2

9.3 Gun Front Assembly

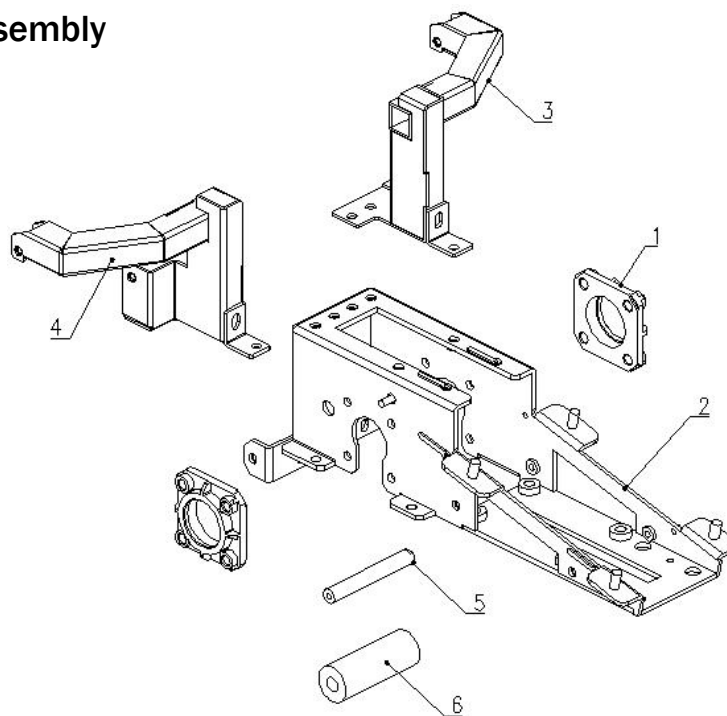


No.	Part No.	Code No.	Name	version	Qty
1	S185-0147-00	206.4.2141.040	Bearing plate	V1.1	2*2
2	S185-0148-00	202.4.2141.150	Gun plate	V1.2	1*2
3	S185-0149-00	202.4.2141.151	Gun handle upper fixing plate 1	V1.1	1*2
4	S185-0150-00	202.4.2141.152	Gun handle upper fixing plate 2	V1.1	1*2
5	S185-0151-00	202.4.2141.331	PU sleeve	V1.1	1*2
6	S185-0152-00	206.4.2141.116	PU rubber	V1.1	1*2

9.4 Gun Handle Assembly

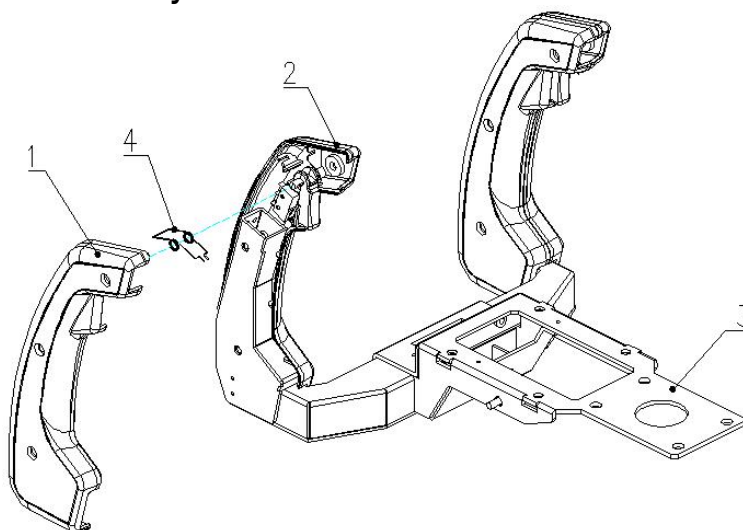


No.	Part No.	Code No.	Name	version	Qty
1	S185-0155-00	206.4.2141.042	Handle cover L	V1.1	2*2
2	S185-0156-00	206.4.2141.043	Handle cover R	V1.2	2*2
3	S185-0157-00	202.4.2141.346	Handle plate	V1.1	1*2
4	S185-0158-00	202.4.2141.154	Trigger spring	V1.1	2*2

9.5 Gun Main Axle Assembly

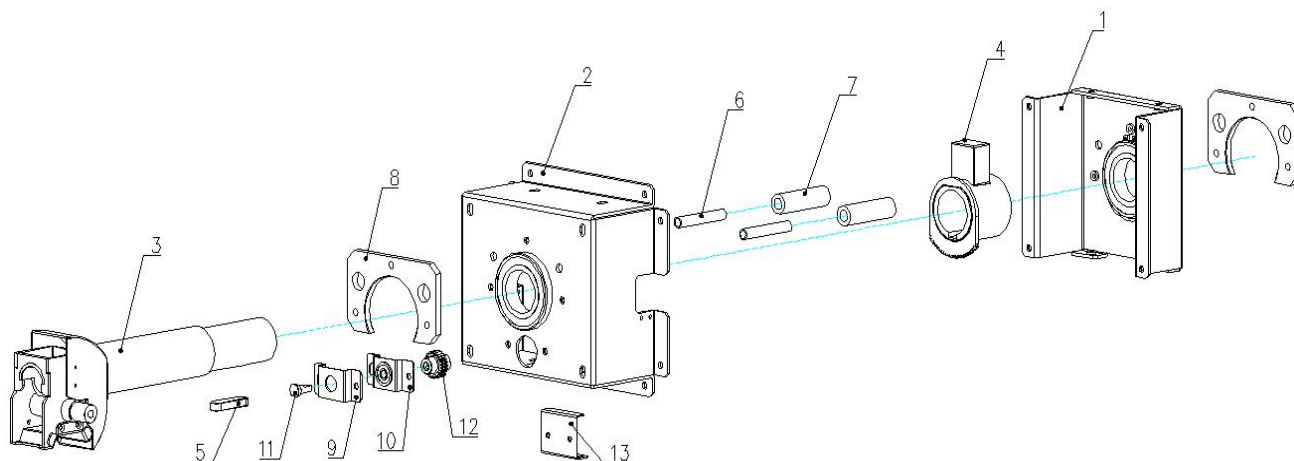


No.	Part No.	Code No.	Name	version	Qty
1	S185-0127-00	202.4.2141.155	Gun base bottom cover	V1.2	1*2
2	S185-0128-00	202.4.2141.156	Gun base upper cover	V1.2	1*2
3	S185-0129-00	202.4.2141.345	Gun main axle plate	V1.1	1*2
4	S185-0130-00	202.4.2141.158	Gun main axle gear	V1.2	1*2
5	S185-0131-00	202.4.2141.159	Fixing key	V1.1	1*2
6	S185-0132-00	202.4.2141.160	L&R PU sleeve	V1.1	2*2
7	S185-0133-00	206.4.2141.044	L&R PU	V1.1	2*2
8	S185-0134-00	206.4.2141.103	Bearing fixing plate	V1.1	2*2
9	S185-0135-00	202.4.2141.162	Turning shaft fixing plate 1	V1.1	1*2
10	S185-0136-00	202.4.2141.163	Turning shaft fixing plate 2	V1.1	1*2
11	S185-0137-00	202.4.2141.164	Turning shaft	V1.1	1*2
12	S185-0138-00	202.4.2141.165	Gear	V1.1	1*2
13	S185-0139-00	202.4.2141.166	Solenoid fixing plate bottom	V1.1	1*2

9.6 Boat Assembly

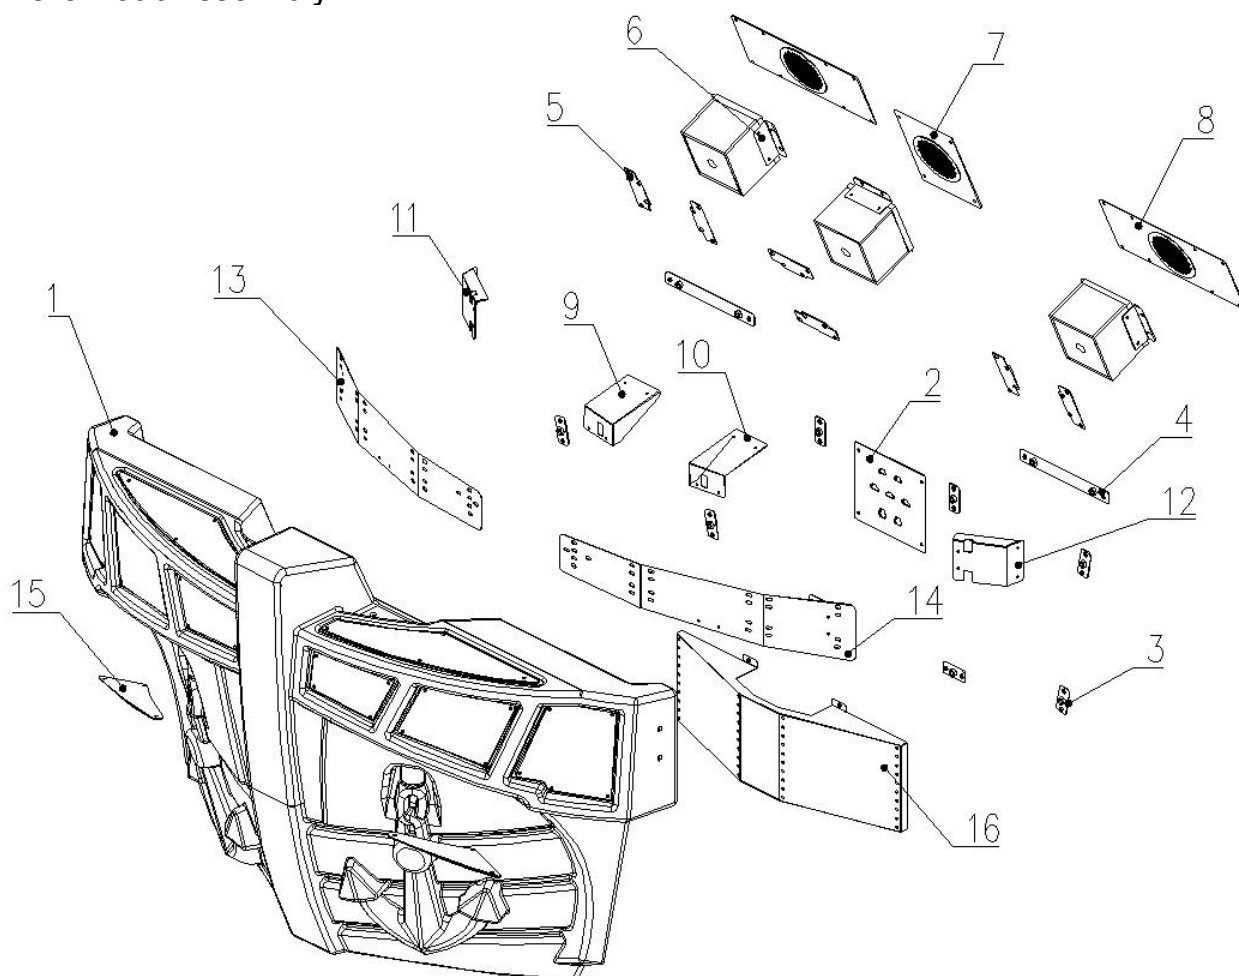


No.	Part No.	Code No.	Name	version	Qty
1	S185-0202-00	206.4.2141.041	Boat moulding	V1.2	1
2	S185-0203-00	202.4.2141.169	Boat panel plate	V1.2	1
3	S185-0204-00	202.4.2141.170	Boat locking plate 1	V1.1	8
4	S185-0205-00	202.4.2141.171	Boat locking plate 2	V1.1	2
5	S185-0206-00	202.4.2141.172	Boat speaker lock pin	V1.1	6
6	S185-0207-00	202.4.2141.173	Boat speaker fixing plate	V1.1	6
7	S185-0208-00	202.4.2141.174	Boat mid speaker net	V1.1	1
8	S185-0209-00	202.4.2141.175	Boat L&R speaker net	V1.1	2
9	S185-0210-00	202.4.2141.176	Boat light plastic fixing plate 1	V1.1	1
10	S185-0211-00	202.4.2141.177	Boat light plastic fixing plate 2	V1.1	1
11	S185-0212-00	202.4.2141.178	Boat light plastic fixing plate 3	V1.1	1
12	S185-0213-00	202.4.2141.179	Boat light plastic fixing plate 4	V1.1	1
13	S185-0214-00	202.4.2141.180	Boat binding light plastic fixing plate 1	V1.2	1
14	S185-0215-00	202.4.2141.181	Boat binding light plastic fixing plate 2	V1.2	1
15	S185-0221-00	206.4.2141.083	Boat bottom acrylic	V1.1	2
16	S185-0222-00	202.4.2141.327	Boat light plate	V1.1	1

9.7 Front Speaker Assembly

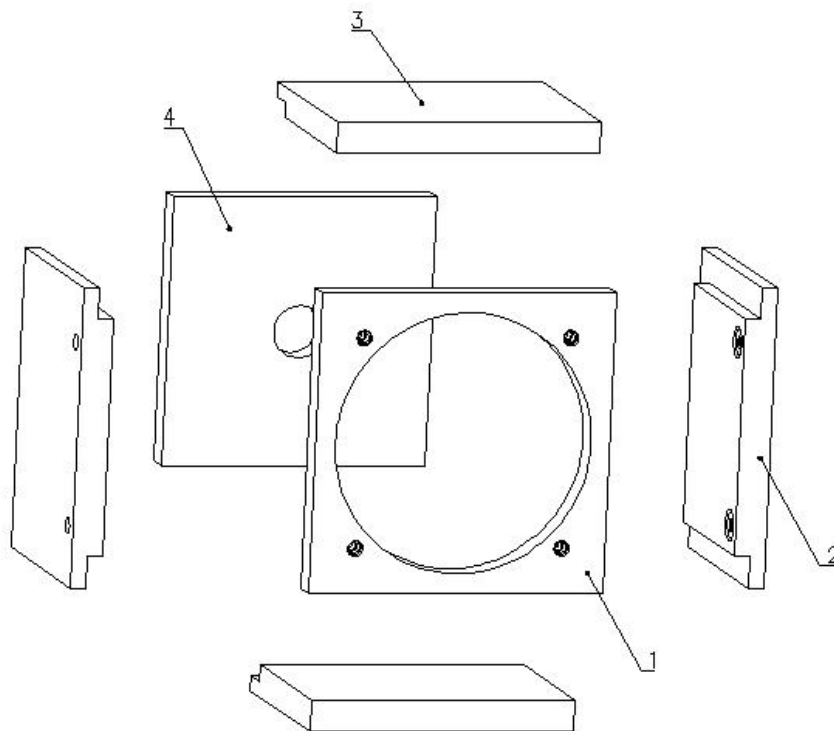


No.	Part No.	Code No.	Name	version	Qty
1	S185-0217-00	203.4.2141.001	Front speaker front board	V1.1	1*3
2	S185-0218-00	203.4.2141.002	Front speaker L&R board	V1.1	2*3
3	S185-0219-00	203.4.2141.003	Front speaker up&down board	V1.1	2*3
4	S185-0220-00	203.4.2141.004	Front speaker back board	V1.1	1*3

9.8 Control Panel Assembly

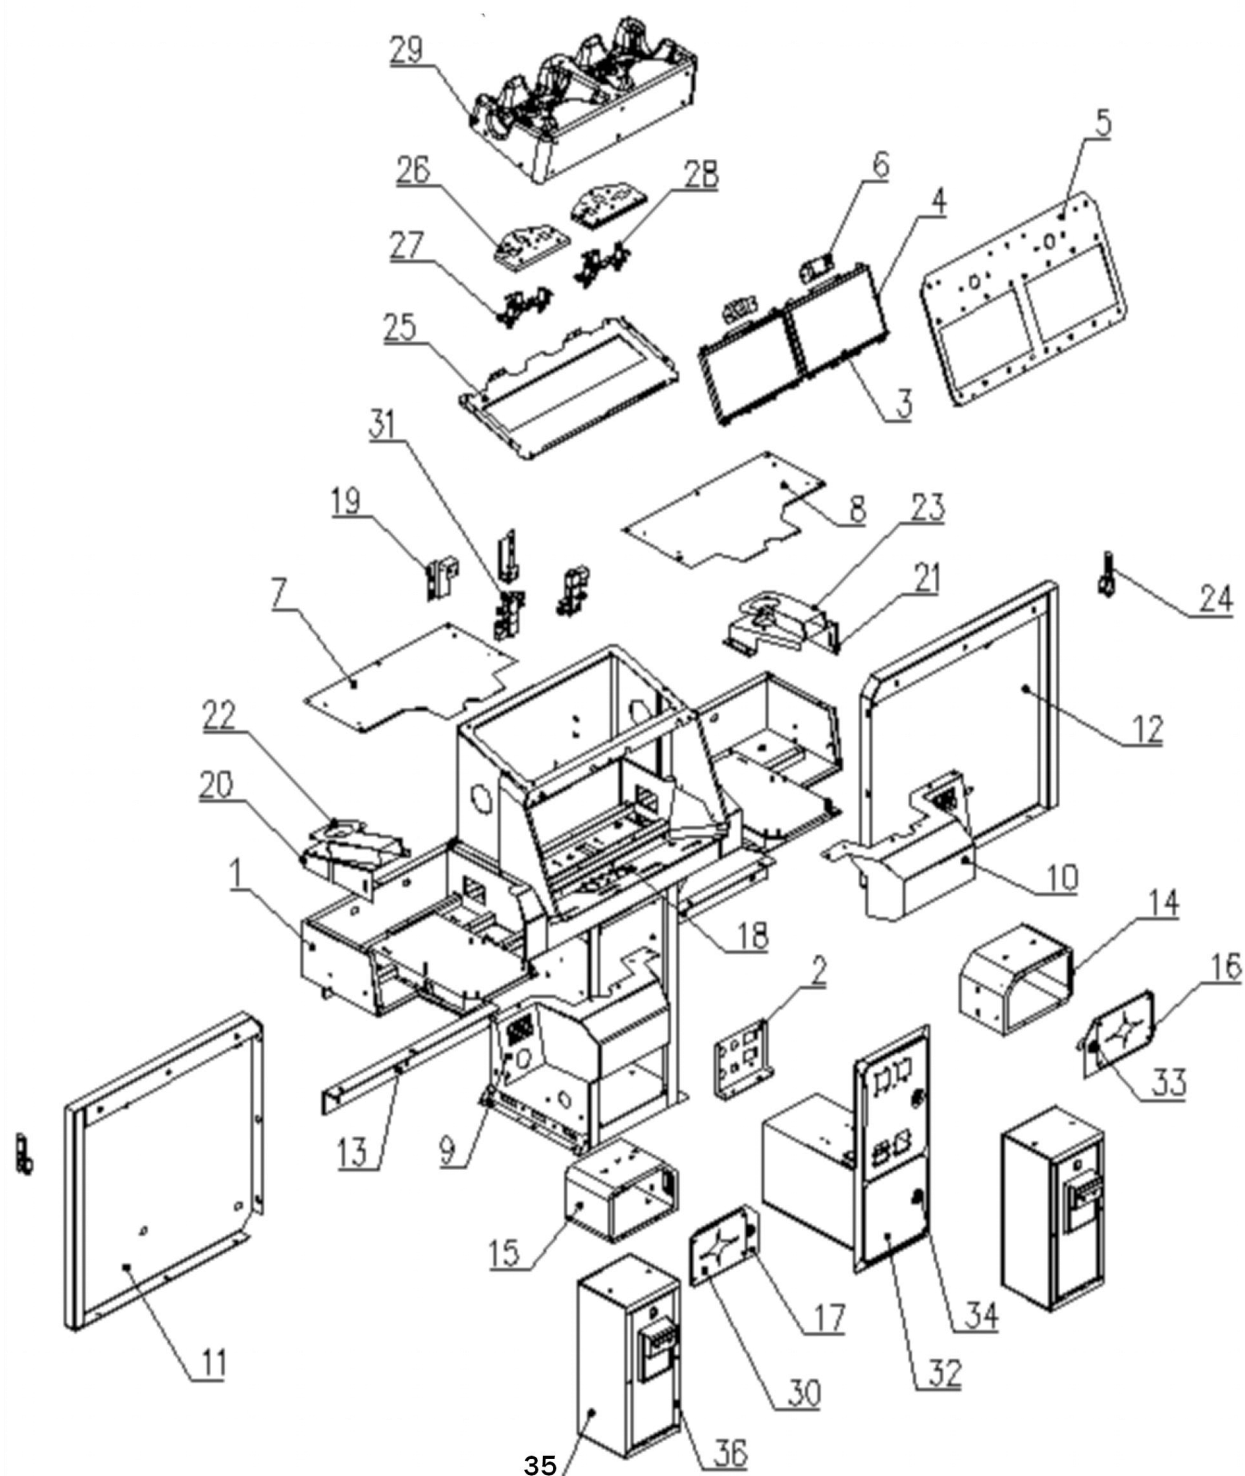


No.	Part No.	Code No.	Name	version	Qty
1	S185-0302-00	202.4.2211.002	Control bracket	V1.1	1
2	S185-0303-00	202.4.2141.185	Control panel plate	V1.2	1
3	S185-0304-00	206.4.2141.117	Control panel monitor EVA 1	V1.1	4
4	S185-0305-00	206.4.2141.118	Control panel monitor EVA 2	V1.1	4
5	S185-0306-00	202.4.2141.187	Control panel monitor cover plate	V1.1	1
6	S185-0307-00	202.4.2141.188	Jet fixing plate	V1.1	2
7	S185-0308-00	202.4.2141.189	Control panel upper cover L	V1.1	1
8	S185-0309-00	202.4.2141.190	Control panel upper cover R	V1.1	1
9	S185-0310-00	202.4.2141.191	Control panel front cover L	V1.2	1
10	S185-0311-00	202.4.2141.192	Control panel front cover R	V1.2	1
11	S185-0312-00	202.4.2141.193	Control panel side cover plate 1	V1.1	1
12	S185-0313-00	202.4.2141.194	Control panel side cover plate 2	V1.1	1
13	S185-0314-00	202.4.2141.195	Control panel connect plate	V1.1	2
14	S185-0315-00	202.4.2141.196	Control panel headset bracket L	V1.2	1
15	S185-0316-00	202.4.2141.197	Control panel headset bracket R	V1.2	1
16	S185-0317-00	202.4.2141.198	Headset cover L	V1.1	1
17	S185-0318-00	202.4.2141.199	Headset cover R	V1.1	1
18	S185-0319-00	202.4.2141.200	Jet control plate	V1.2	1
19	S185-0320-00	202.4.2141.201	Jet fixing bracket	V1.1	2
20	S185-0321-00	202.4.2141.202	Fan fixing base bracket L	V1.1	1
21	S185-0322-00	202.4.2141.203	Fan fixing base bracket R	V1.1	1
22	S185-0323-00	202.4.2141.204	Fan fixing upper bracket L	V1.2	1
23	S185-0324-00	202.4.2141.205	Fan fixing upper bracket R	V1.2	1
24	S185-0325-00	202.4.2141.206	Rope hook bracket	V1.1	2
25	S185-0326-00	202.4.2141.293	Headset bracket fixing plate	V1.1	1
26	S185-0327-00	202.4.2141.294	Headset sensor fixing plate 1	V1.1	2
27	S185-0328-00	202.4.2141.295	Headset sensor fixing plate 2	V1.1	6
28	S185-0329-00	206.4.2141.066	Headset sensor POM	V1.1	6
29	S185-0330-00	206.4.2141.067	Headset bracket ABS	V1.1	1
30	S185-0331-00	206.4.2141.079	Eyecover box	V1.1	2
31	S185-0339-00	2.51.01.12.0053	3 way 2 position solenoid valve	V1.1	2
32	S185-0345-00	2.60.00045000	Coin door assy.	V1.1	1
33	S185-0347-00	2.53.00171001	171A lock	V1.1	4
34	S185-0348-00	2.53.00172001	171B lock	V1.1	1
35	S185-0356-00	202.4.2141.321	DBV back box	V1.1	2
36	S185-0355-00	202.4.2141.320	DBV frame	V1.1	2

9.9 Coin Box

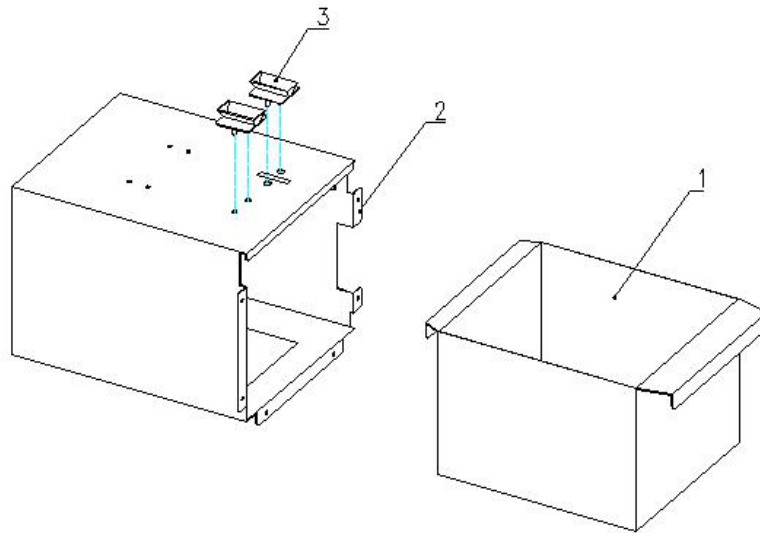


No.	Part No.	Code No.	Name	version	Qty
1	S185-0350-00	202.4.2141.316	Coin inner box	V1.1	1
2	S185-0351-00	202.4.2141.317	Coin outer box	V1.1	1
3	S185-0352-00	2.60.00046002	Coin slot	V1.2	2

9.10 Woofer Assembly

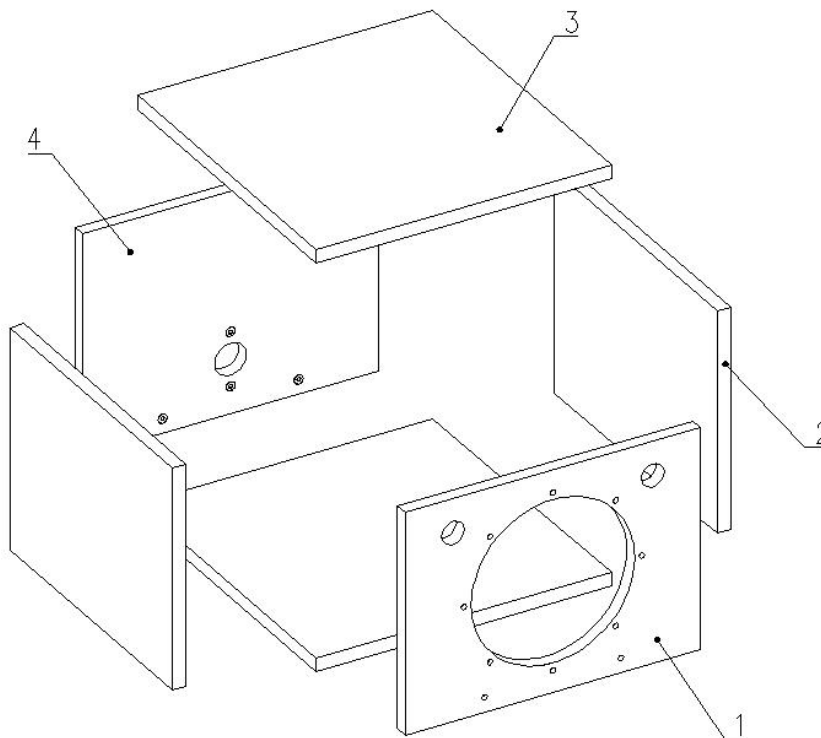


No.	Part No.	Code No.	Name	version	Qty
1	S185-0426-00	203.4.2141.023	Woofer front board	V1.1	1
2	S185-0427-00	203.4.2141.024	Woofer L&R board	V1.1	2
3	S185-0428-00	203.4.2141.025	Woofer up&down board	V1.1	2
4	S185-0429-00	203.4.2141.026	Woofer back board	V1.1	1

9.11 Seat Assembly

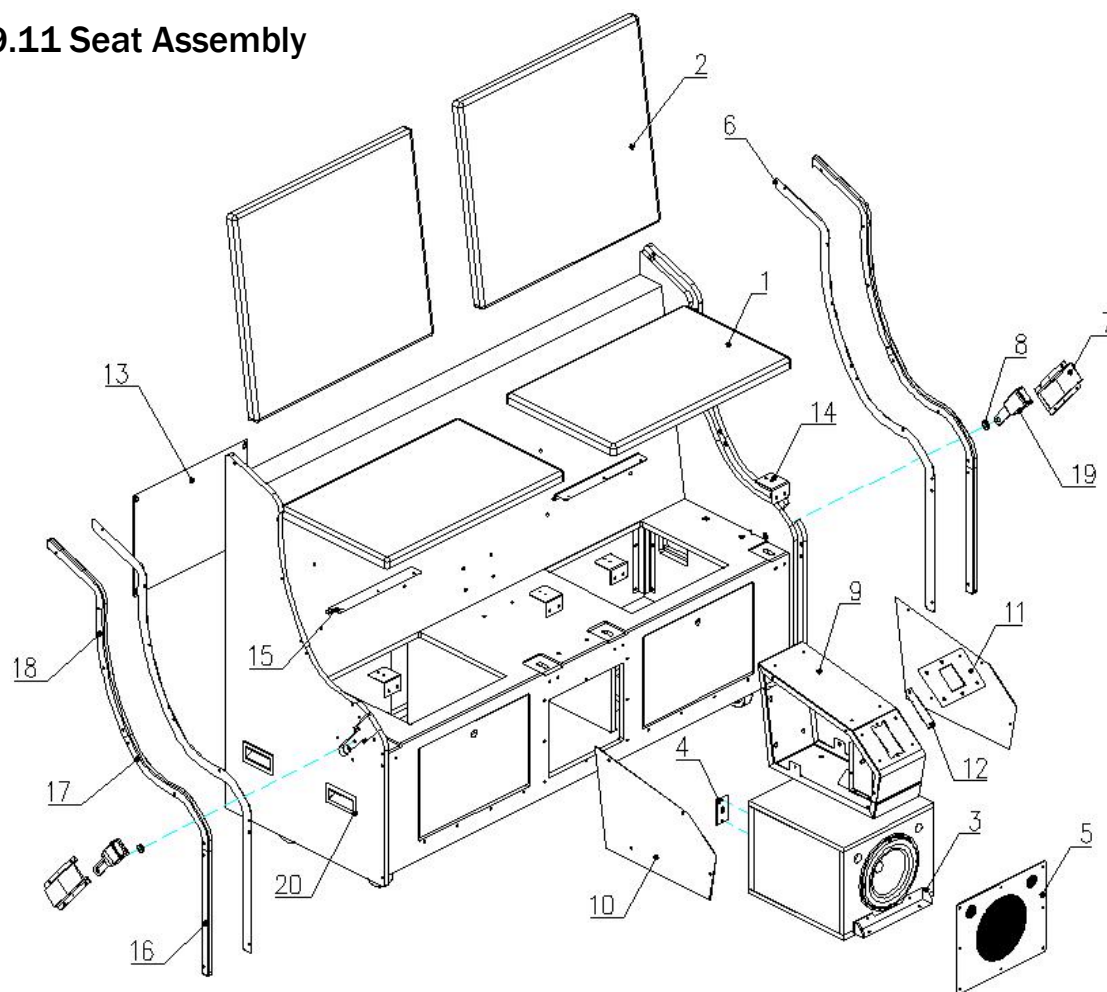


No.	Part No.	Code No.	Name	version	Qty
1	S185-0430-00	206.4.2141.050	Cushion	V1.2	2
2	S185-0432-00	206.4.2141.051	Seat cushion	V1.2	2
3	S185-0434-00	202.4.2141.209	Woofer fixing plate	V1.1	2
4	S185-0435-00	202.4.2141.210	Woofer panel plate	V1.1	1
5	S185-0436-00	202.4.2141.211	Woofer net	V1.1	1
6	S185-0437-00	202.4.2141.212	Seat acrylic fixing plate	V1.1	2
7	S185-0438-00	202.4.2141.335	Safety belt cover plate	V1.1	2
8	S185-0439-00	206.4.2141.052	Safety belt pad POM	V1.1	2
9	S185-0440-00	202.4.2141.315	Seat handle plate	V1.1	1
10	S185-0441-00	202.4.2141.215	Seat handle side plate	V1.1	2
11	S185-0442-00	202.4.2141.216	Buckle protect plate 1	V1.1	1
12	S185-0443-00	202.4.2141.217	Buckle protect plate 2	V1.1	1
13	S185-0444-00	202.4.2141.218	Seat back door bottom	V1.1	1
14	S185-0445-00	202.4.2141.219	Seat fixing bracket	V1.1	4
15	S185-0446-00	202.4.2141.220	Seat fixing bracket back	V1.1	2
16	S185-0447-00	206.4.2141.053	Seat light plastic 1	V1.1	2
17	S185-0448-00	206.4.2141.054	Seat light plastic 2	V1.1	2
18	S185-0449-00	206.4.2141.055	Seat light plastic 3	V1.1	2
19	S185-0453-00	206.5.1401A.004	Safety belt	V1.1	2
20	S185-0454-00	2.51.02.000098	Handle	V1.1	4

9.12 Seat Wooden Case Assembly

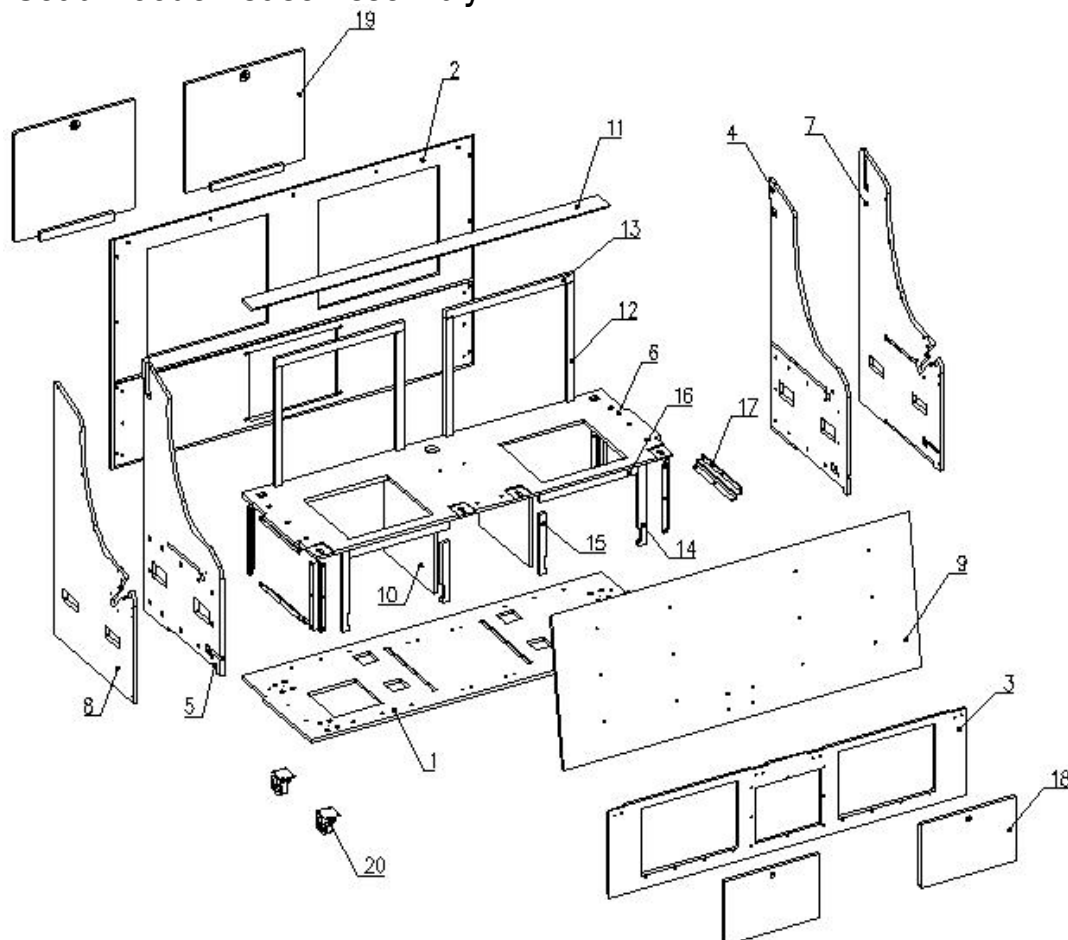


No.	Part No.	Code No.	Name	version	Qty
1	S185-0403-00	203.4.2141.005	Seat base board	V1.1	1
2	S185-0404-00	203.4.2141.006	Seat back board	V1.2	1
3	S185-0405-00	203.4.2141.007	Seat front board	V1.1	1
4	S185-0406-00	203.4.2141.008	Seat R inner board	V1.2	1
5	S185-0407-00	203.4.2141.009	Seat L inner board	V1.1	1
6	S185-0408-00	203.4.2141.010	Seat mid board	V1.2	1
7	S185-0409-00	203.4.2141.011	Seat R outer board	V1.1	1
8	S185-0410-00	203.4.2141.012	Seat L outer board	V1.1	1
9	S185-0411-00	203.4.2141.013	Seat board	V1.1	1
10	S185-0412-00	203.4.2141.014	Seat blocking board	V1.2	2
11	S185-0413-00	203.4.2141.015	Seat upper board	V1.1	1
12	S185-0414-00	203.4.2141.016	Seat back door vertical board	V1.1	4
13	S185-0415-00	203.4.2141.017	Seat back door horizontal board	V1.1	2
14	S185-0416-00	203.4.2141.018	Seat front door L vertical board	V1.1	2
15	S185-0417-00	203.4.2141.019	Seat front door R vertical board	V1.1	2
16	S185-0418-00	203.4.2141.020	Seat front door horizontal board	V1.1	2
17	S185-0419-00	202.4.2141.207	Strengthen plate	V1.1	8
18	S185-0420-00	203.4.2141.021	Seat front door	V1.1	2
19	S185-0421-00	203.4.2141.022	Seat back door	V1.1	2
20	S185-0422-00	2.55.01.000003	2" caster	V1.1	4

9.13 Platform Assembly(Upper)

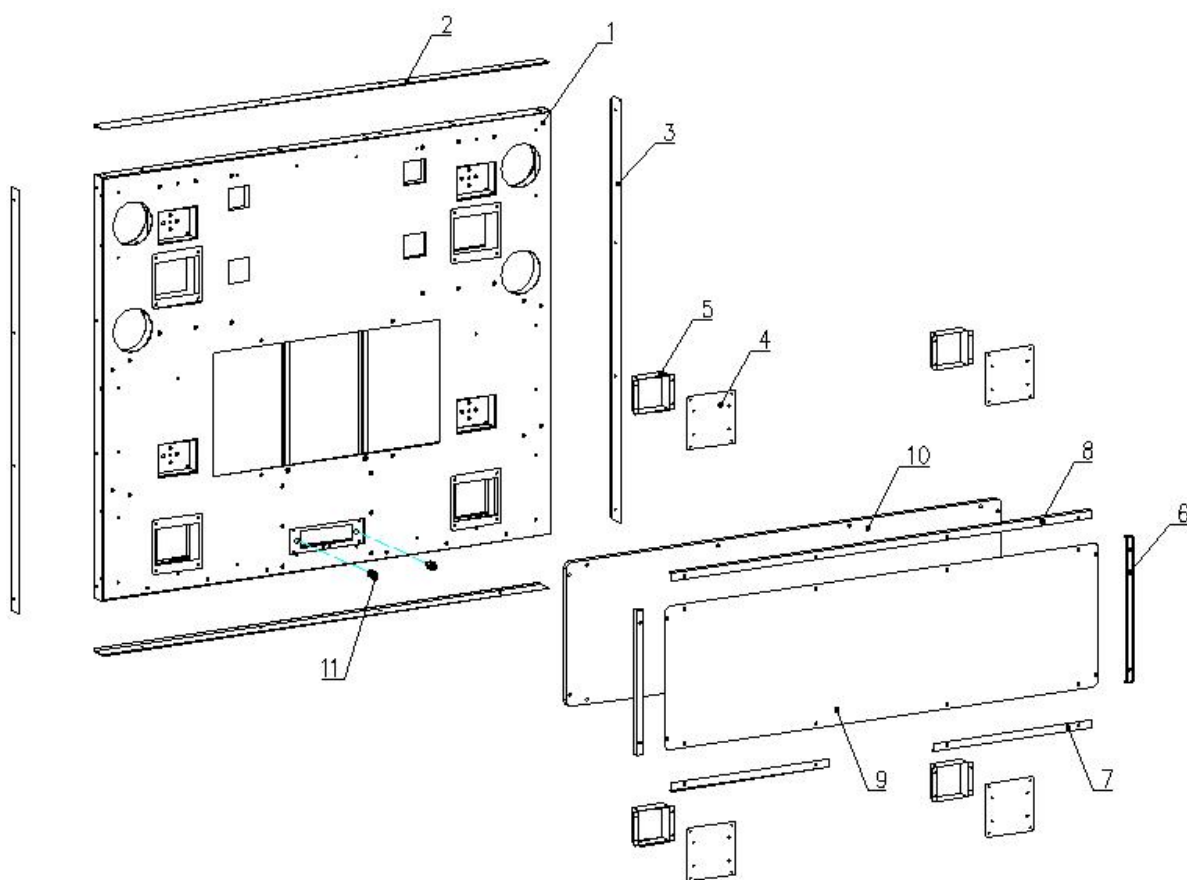


No.	Part No.	Code No.	Name	version	Qty
1	S185-0502-00	202.4.2141.330	Platform upper base bracket	V1.1	1
2	S185-0503-00	202.4.2141.222	Platform assembly(upper) cover fixing plate 1	V1.1	2
3	S185-0504-00	202.4.2141.223	Platform assembly(upper) cover fixing plate 2	V1.1	2
4	S185-0505-00	202.4.2141.224	Height sensor cover plate	V1.1	4
5	S185-0506-00	202.4.2141.225	Height sensor cover box	V1.1	4
6	S185-0507-00	202.4.2141.226	Pedal fixing plate 1	V1.1	2
7	S185-0508-00	202.4.2141.227	Pedal fixing plate 2	V1.1	2
8	S185-0509-00	202.4.2141.228	Pedal fixing plate 3	V1.1	1
9	S185-0510-00	202.4.2141.229	Anti-skip pad	V1.1	1
10	S185-0511-00	203.4.2141.029	Platform assembly(upper) pedal	V1.1	1
11	S185-0512-00	2.51.01.01.0202	Through-plate connect(APM8)	V1.1	2

9.14 Platform Assembly(Bottom)

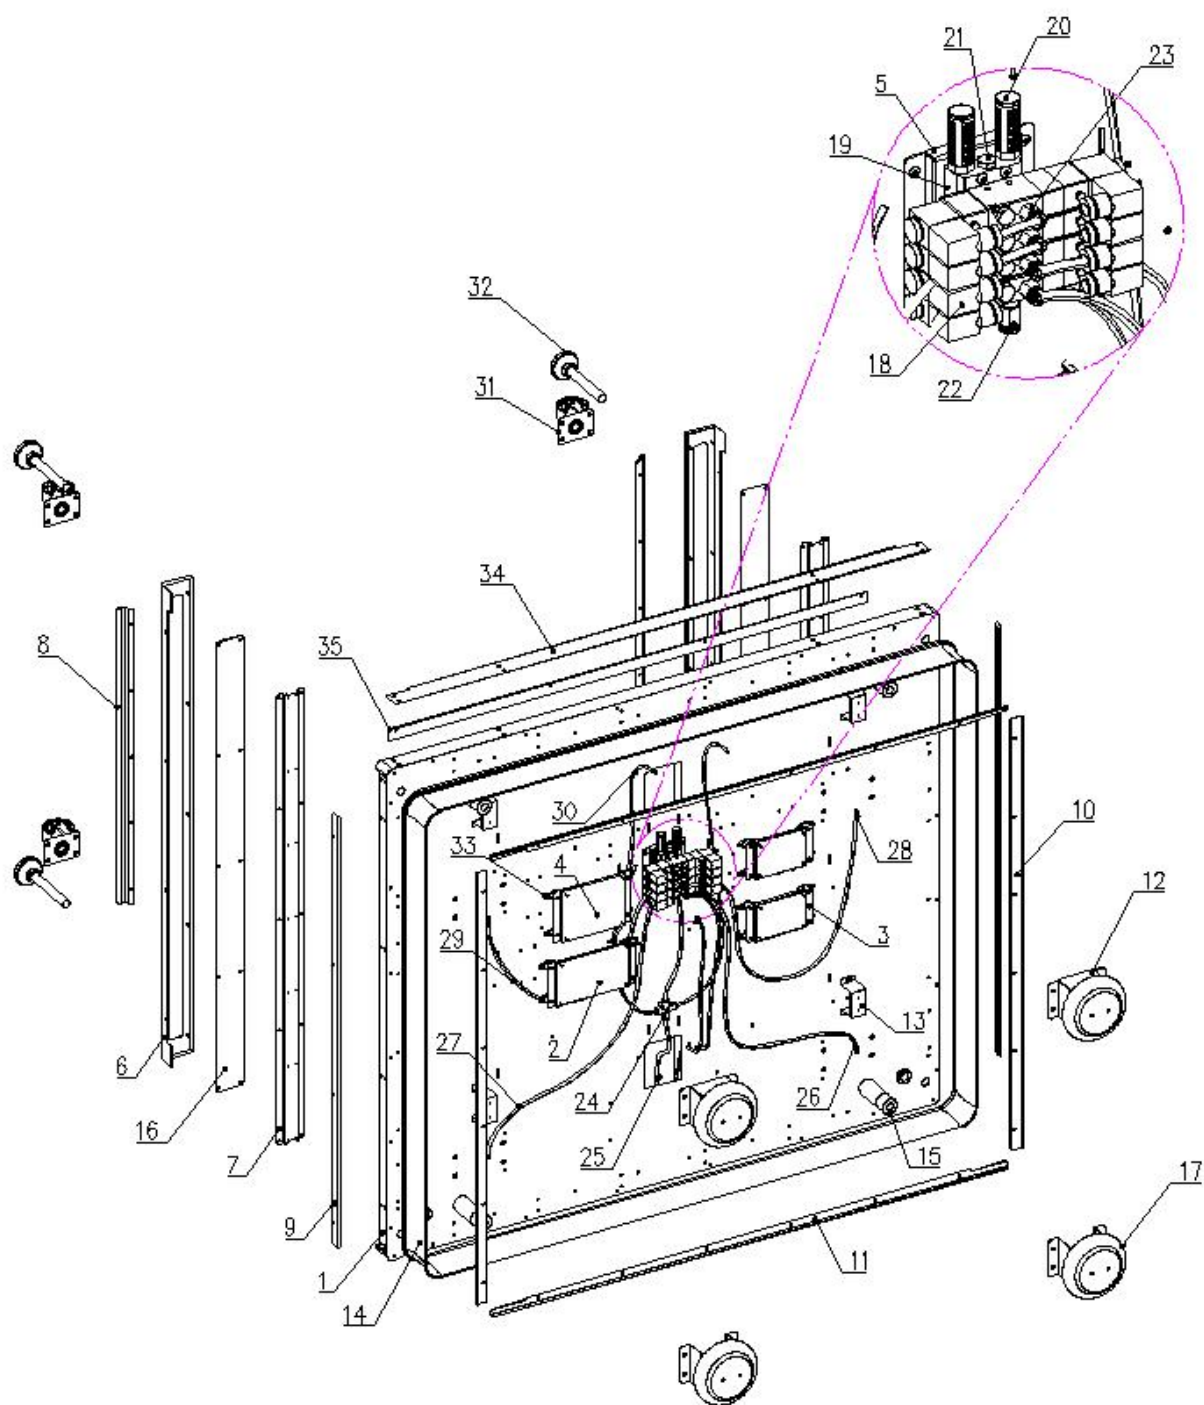


No.	Part No.	Code No.	Name	version	Qty
1	S185-0602-00	202.4.2141.313	Platform bottom base bracket	V1.2	1
2	S185-0603-00	202.4.2141.231	OL board fixing plate	V1.1	1
3	S185-0604-00	202.4.2141.232	KI-E fixing plate	V1.1	2
4	S185-0605-00	202.4.2141.233	LP fixing plate	V1.1	1
5	S185-0606-00	202.4.2141.234	Solenoid valve plate	V1.1	1
6	S185-0607-00	202.4.2141.235	Platform LED outer fixing plate	V1.2	2
7	S185-0608-00	202.4.2141.236	Platform LED inner fixing plate	V1.1	2
8	S185-0609-00	202.4.2141.237	Ground light fixing plate	V1.1	2
9	S185-0610-00	202.4.2141.238	Platform dust-free cover pressing plate(bottom)	V1.1	2
10	S185-0611-00	202.4.2141.239	Platform dust-free cover inner plate 1	V1.1	2
11	S185-0612-00	202.4.2141.240	Platform dust-free cover inner plate 2	V1.1	2
12	S185-0613-00	202.4.2141.241	Air spring fixing bracket	V1.1	4
13	S185-0614-00	202.4.2141.242	Platform sensor fixing plate	V1.3	4
14	S185-0615-00	206.4.2141.056	Shaking bracket skirt	V1.1	1
15	S185-0617-00	206.4.2141.057	Limit block	V1.1	4
16	S185-0618-00	206.4.2141.082	Ground light acrylic	V1.1	2
17	S185-0619-00	206.4.2141.101	Electrical cover L	V1.1	4
18	S185-0622-00	2.51.01.12.5009	Solenoid	V1.1	4
19	S185-0623-00	2.51.01.12.5010	Plate	V1.1	1
20	S185-0624-00	2.51.01.17.0007	Silencer	V1.1	2
21	S185-0625-00	2.51.01.18.0001	8 plug	V1.1	7
22	S185-0626-00	2.51.01.11.1004	10mm pipe(1/4)	V1.1	1
23	S185-0627-00	2.51.01.11.0132	8mm pipe(1/4)	V1.1	8
24	S185-0628-00	2.51.01.04.1004	cross type 4 port	V1.1	1
25	S185-0630-00	2.51.06.02.5003	PU clear pipe(10×6.5mm)	V1.1	2.2
26	S185-0631-00	2.51.06.03.0620	PU red pipe	V1.1	1.2
27	S185-0632-00	2.51.06.03.0622	PU yellow pipe	V1.1	1.2
28	S185-0633-00	2.51.06.03.0621	PU blue pipe	V1.1	0.8
29	S185-0634-00	2.51.06.03.0619	PU black pipe	V1.1	0.8
30	S185-0344-00	2.51.06.03.0623	PU clear pipe(8×5mm)	V1.1	2
31	S185-0635-00	2.55.01.000047	2.5" caster	V1.1	4
32	S185-0636-00	2.51.00.010017	Anti-skip leveller	V1.1	4
33	S185-0639-00	2.51.10.010016	Rubber silencer	V1.1	16
34	S185-0640-00	202.4.2141.328	Front ground light fixing plate	V1.1	1
35	S185-0641-00	206.4.2141.108	Front ground light PVC	V1.1	1

9.15 Boat Fence Assembly

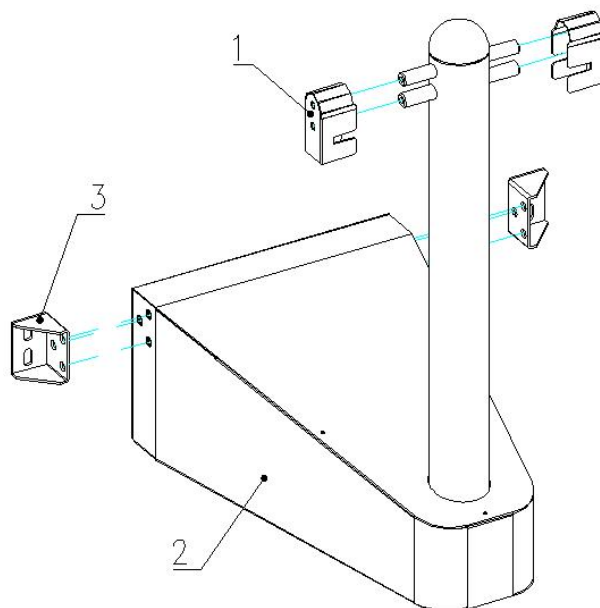


No.	Part No.	Code No.	Name	version	Qty
1	S185-0702-00	202.4.2141.246	Rope cover	V1.1	2*2
2	S185-0703-00	202.4.2141.308	Boat fence plate	V1.1	1*2
3	S185-0704-00	202.4.2141.309	Fence corner	V1.1	2*2

9.16 Monitor Assembly

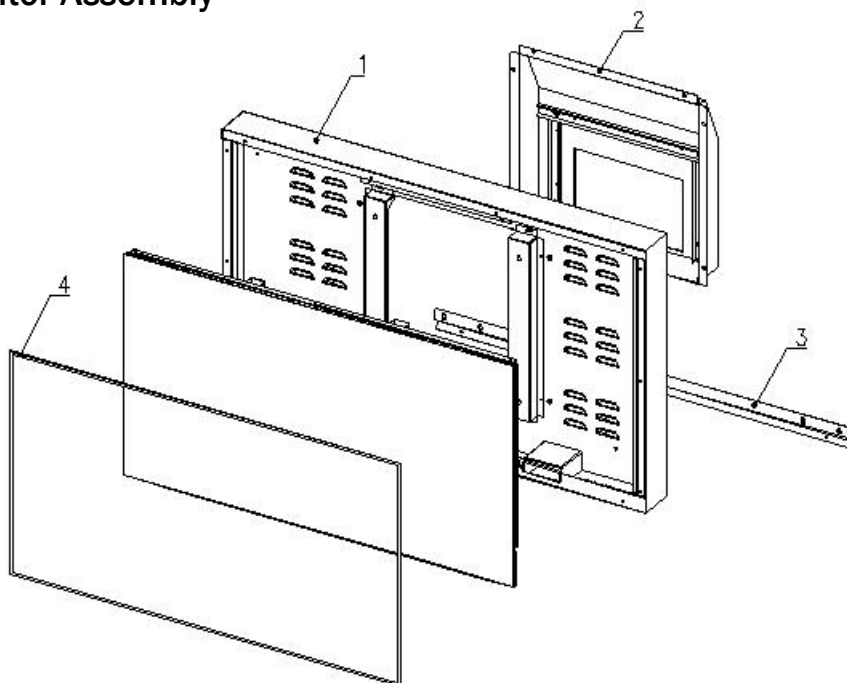

No.	Part No.	Code No.	Name	version	Qty
1	S185-0902-00	202.4.2141.333	Monitor fixing plate	V1.1	1
2	S185-0903-00	202.4.2141.271	Monitor back cover	V1.2	1
3	S185-0904-00	202.4.2141.272	Monitor light cover plate	V1.1	1
4	S185-0905-00	206.3.1901.006	monitor foam	V1.1	1


9.17 Back Cabinet Assembly

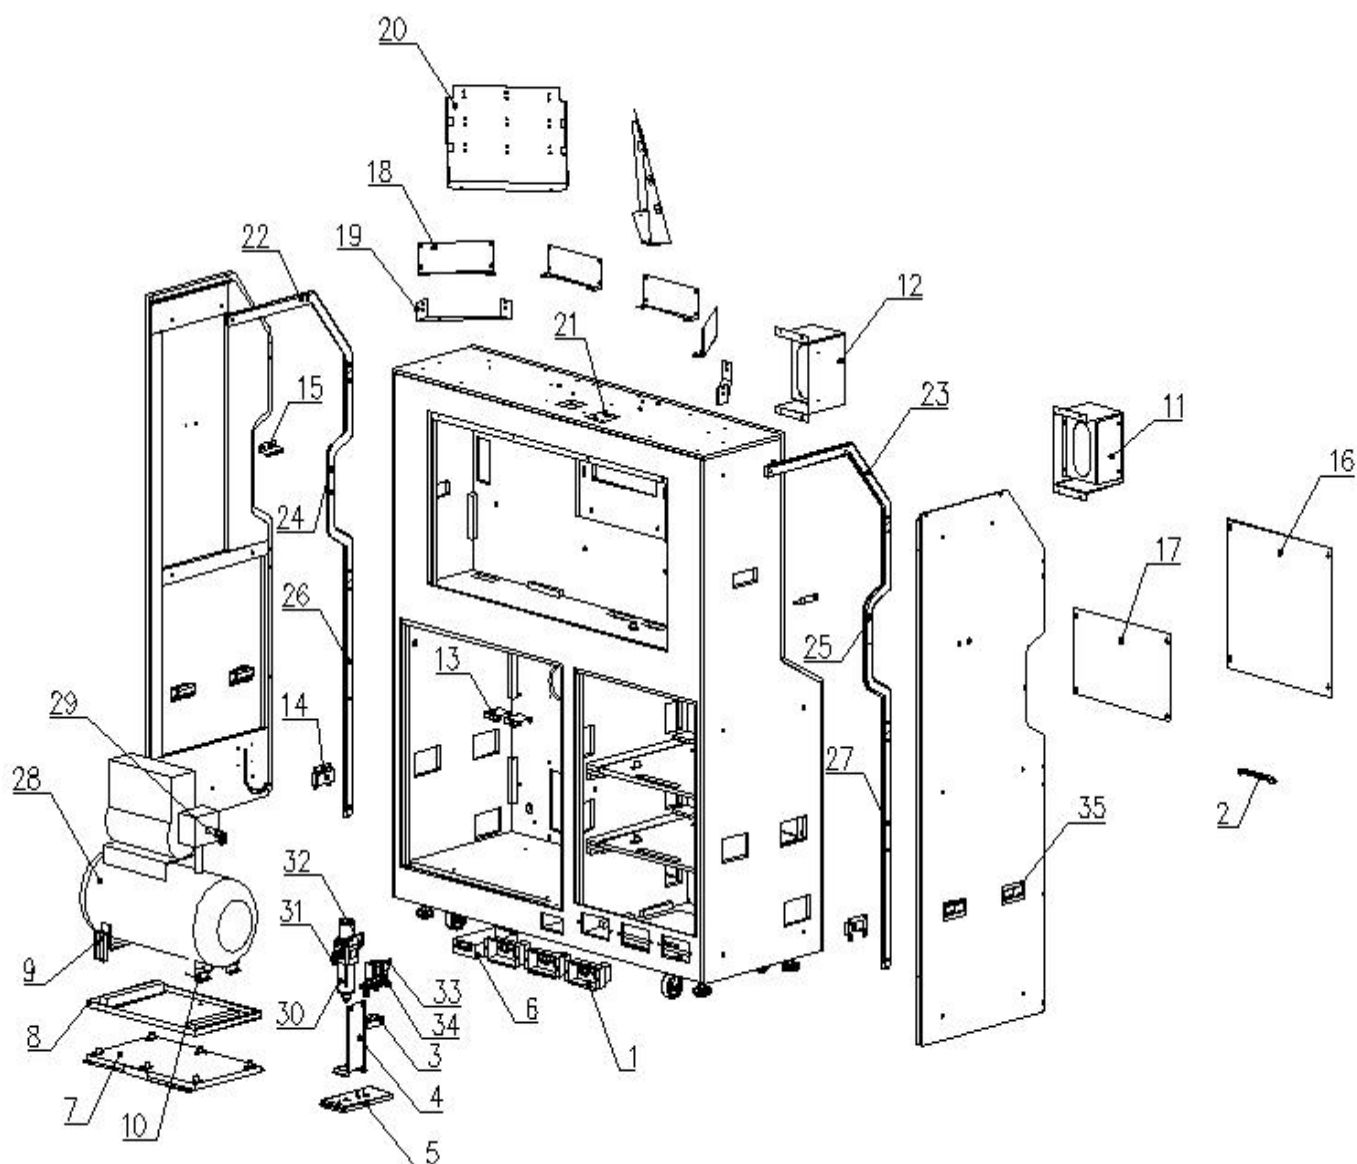

No.	Part No.	Code No.	Name	version	Qty
1	S185-0849-00	202.4.2141.249	Power supply plate	V1.1	3
2	S185-0850-00	202.4.2141.250	Mounting plate limit bracket	V1.1	1
3	S185-0851-00	202.4.2141.251	Air-press valve plate 1	V1.1	1
4	S185-0852-00	202.4.2141.252	Air-press valve plate 2	V1.1	1
5	S185-0853-00	202.4.2141.253	Air-press valve base plate	V1.1	1
6	S185-0854-00	202.4.2141.254	Water slot	V1.1	1
7	S185-0855-00	202.4.2141.340	Air compressor bottom fixing plate	V1.1	1
8	S185-0856-00	202.4.2141.341	Air compressor upper fixing plate	V1.1	1
9	S185-0857-00	202.4.2141.325	Air compressor fixing plate 1	V1.1	2
10	S185-0858-00	202.4.2141.258	Air compressor fixing plate 2	V1.2	2
11	S185-0859-00	202.4.2141.259	Speaker plate 1	V1.1	2
12	S185-0860-00	202.4.2141.260	Speaker plate 2	V1.1	2


No.	Part No.	Code No.	Name	version	Qty
13	S185-0861-00	202.4.2141.261	VR power cover	V1.1	2
14	S185-0862-00	202.4.2141.262	Side board connect plate	V1.1	2
15	S185-0863-00	202.4.2141.263	Side board fixing plate	V1.1	2
16	S185-0864-00	202.4.2141.339	Front service door plate 1	V1.1	1
17	S185-0865-00	202.4.2141.265	Front service door plate 2	V1.1	1
18	S185-0866-00	202.4.2141.266	Big decoration plate	V1.1	4
19	S185-0867-00	202.4.2141.267	Small decoration plate	V1.1	2
20	S185-0868-00	202.4.2141.268	Light strip fixing plate	V1.1	2
21	S185-0869-00	202.4.2141.269	Marquee panel plate	V1.1	1
22	S185-0870-00	206.4.2141.058	Side board light plastic 1A	V1.1	1
23	S185-0871-00	206.4.2141.059	Side board light plastic 1B	V1.1	1
24	S185-0872-00	206.4.2141.060	Side board light plastic 2A	V1.1	1
25	S185-0873-00	206.4.2141.061	Side board light plastic 2B	V1.1	1
26	S185-0874-00	206.4.2141.062	Side board light plastic 3A	V1.1	1
27	S185-0875-00	206.4.2141.063	Side board light plastic 3B	V1.1	1
28	S185-0883-00	4.06.11.01.0200	Air compressor	V1.1	1
29	S185-0884-00	2.51.01.11.0130	10mm connect pipe(1/4)	V1.1	1
30	S185-0885-00	2.51.01.13.0074	Filter regulator	V1.1	1
31	S185-0886-00	2.51.01.11.0061	10mm pipe(1/2)	V1.1	1
32	S185-0887-00	2.51.01.11.0131	10mm pipe(1/2)	V1.1	1
33	S185-0888-00	2.51.01.12.3008	Speed throttle valve	V1.1	1
34	S185-0889-00	2.51.01.11.3011	10mm pipe(3/8)	V1.1	2
35	S185-0454-00	2.51.02.000098	Handle	V1.1	4

9.18 Back Cabinet Wooden Case

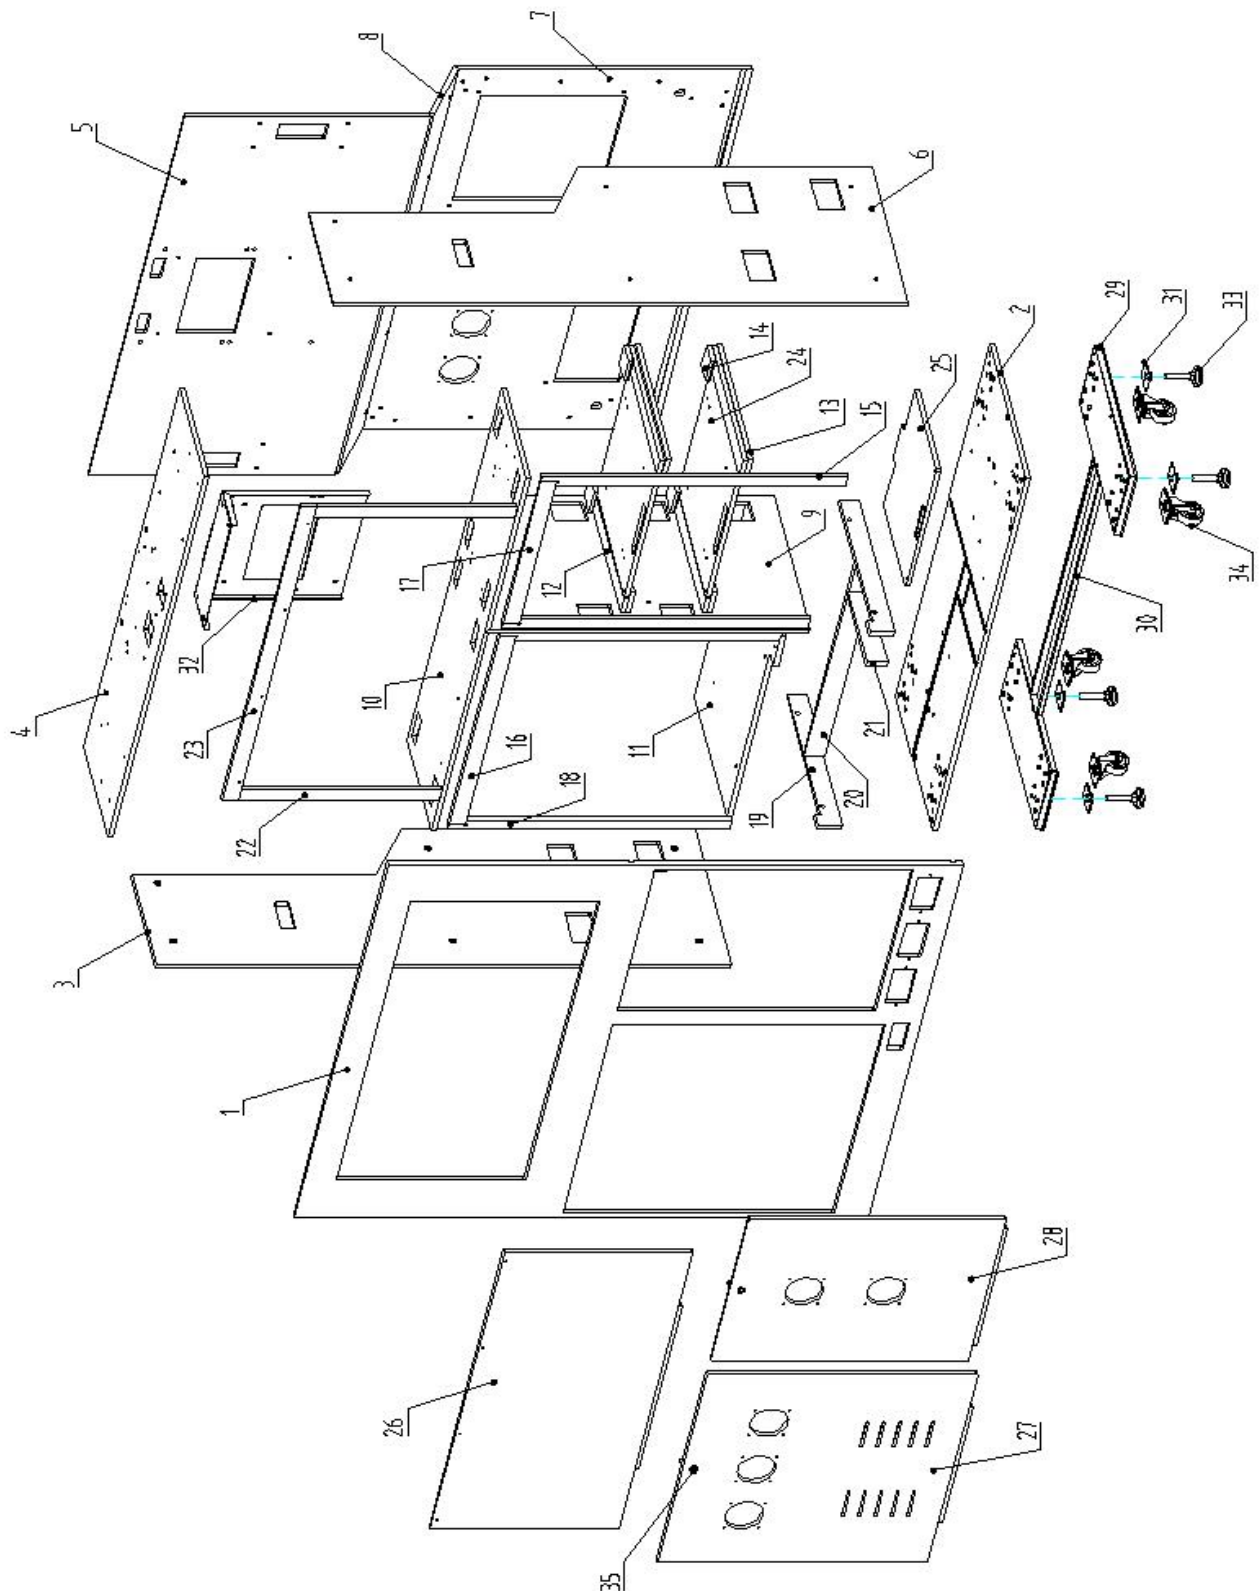


No.	Part No.	Code No.	Name	version	Qty
1	S185-0803-00	203.4.2141.030	Back board	V1.1	1
2	S185-0804-00	203.4.2141.031	Base board	V1.1	1
3	S185-0805-00	203.4.2141.032	R board	V1.1	1
4	S185-0806-00	203.4.2141.033	Top board	V1.1	1
5	S185-0807-00	203.4.2141.034	Front upper board	V1.1	1
6	S185-0808-00	203.4.2141.035	L board	V1.1	1
7	S185-0809-00	203.4.2141.036	Front bottom board	V1.1	1
8	S185-0810-00	203.4.2141.037	Front mid board	V1.1	1
9	S185-0811-00	203.4.2141.038	Mid vertical board	V1.1	1
10	S185-0812-00	203.4.2141.039	Long horizontal board	V1.1	1
11	S185-0813-00	203.4.2141.040	Short horizontal board	V1.1	1
12	S185-0814-00	203.4.2141.041	Block board 1	V1.1	1
13	S185-0815-00	203.4.2141.042	Block board 2	V1.1	4
14	S185-0816-00	203.4.2141.043	Block board 3	V1.1	4
15	S185-0817-00	203.4.2141.044	Door blocking board 1	V1.1	2
16	S185-0818-00	203.4.2141.045	Door blocking board 2	V1.1	1
17	S185-0819-00	203.4.2141.046	Door blocking board 3	V1.1	1
18	S185-0820-00	203.4.2141.047	Door blocking board 4	V1.1	2
19	S185-0821-00	203.4.2141.048	Base board 1	V1.1	2
20	S185-0822-00	203.4.2141.049	Base board 2	V1.1	1
21	S185-0823-00	203.4.2141.050	Base board 3	V1.1	1
22	S185-0824-00	203.4.2141.051	Upper door vertical board	V1.1	2
23	S185-0825-00	203.4.2141.052	Upper door horizontal board	V1.1	1
24	S185-0826-00	203.4.2141.053	PC fixing plate	V1.1	2
25	S185-0827-00	203.4.2141.054	Mounting board	V1.1	1
26	S185-0828-00	203.4.2141.055	Service door upper board	V1.1	1
27	S185-0829-00	203.4.2141.056	Service door L board	V1.1	1
28	S185-0830-00	203.4.2141.057	Service door R board	V1.1	1
29	S185-0831-00	202.4.2141.247	Caster fixing plate	V1.1	2
30	S185-0832-00	202.4.2141.248	Strengthen plate	V1.1	1
31	S185-0833-00	202.4.2141.297	Leveller bracket	V1.1	4
32	S185-0834-00	202.4.2141.296	Monitor L type plate	V1.1	1
33	S185-0835-00	2.60.00008000	Caster bracket	V1.1	4
34	S185-0635-00	2.55.01.000047	2.5" caster	V1.1	4
35	S185-0347-00	2.53.00171001	171A lock	V1.1	2

9.19 Back Cabinet R Side Board

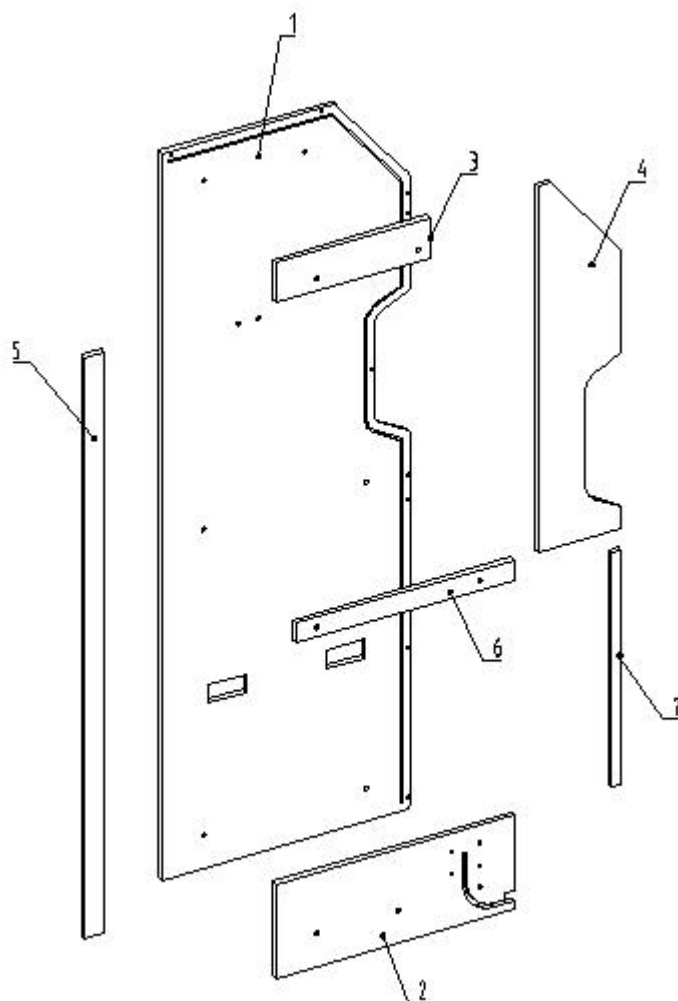


No.	Part No.	Code No.	Name	version	Qty
1	S185-0837-00	203.4.2141.058	R Side base board	V1.1	1
2	S185-0838-00	203.4.2141.059	R Side bottom board	V1.2	1
3	S185-0839-00	203.4.2141.060	R Side upper board	V1.2	1
4	S185-0840-00	203.4.2141.061	RL Side vertical board 1	V1.2	1
5	S185-0841-00	203.4.2141.062	RL Side vertical board 2	V1.2	1
6	S185-0842-00	203.4.2141.063	RL Side mid board 2	V1.2	1
7	S185-0843-00	203.4.2141.067	RL Side vertical board 3	V1.1	1

9.20 Back Cabinet L Side Board

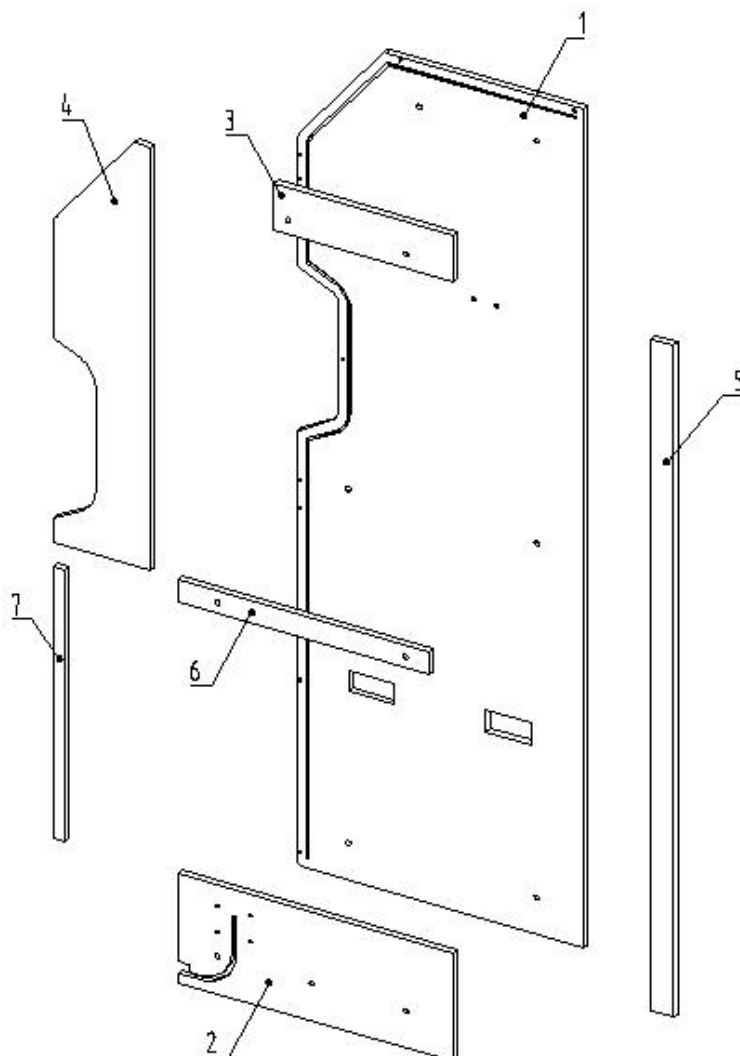


No.	Part No.	Code No.	Name	version	Qty
1	S185-0846-00	203.4.2141.064	L Side base board	V1.1	1
2	S185-0847-00	203.4.2141.065	L Side bottom board	V1.2	1
3	S185-0848-00	203.4.2141.066	L Side upper board	V1.2	1
4	S185-0840-00	203.4.2141.061	RL Side vertical board 1	V1.2	1
5	S185-0841-00	203.4.2141.062	RL Side vertical board 2	V1.2	1
6	S185-0842-00	203.4.2141.063	RL Side mid board 2	V1.2	1
7	S185-0843-00	203.4.2141.067	RL Side vertical board 3	V1.1	1

9.21 Headset Overhead Assembly

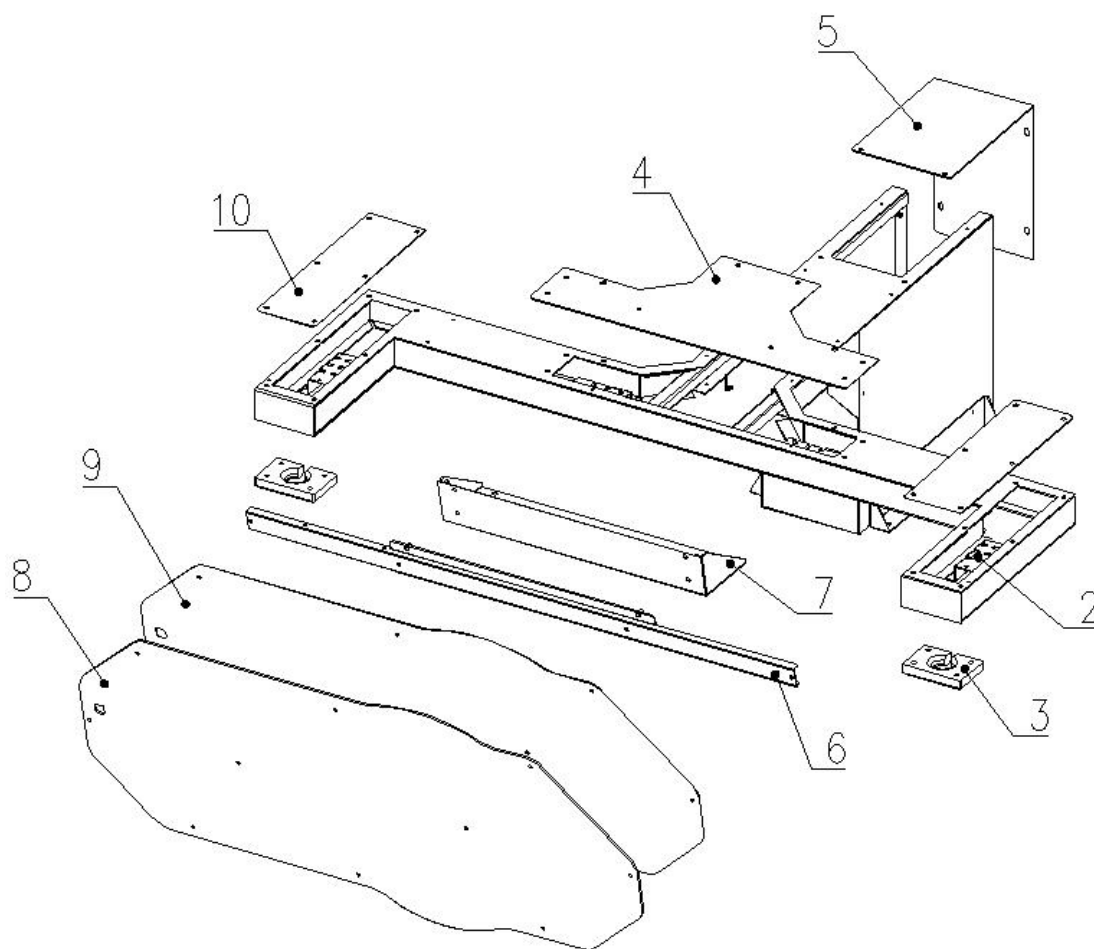

No.	Part No.	Code No.	Name	version	Qty
1	S185-1002-00	202.4.2141.314	Overhead bracket	V1.1	1
2	S185-1003-00	202.4.2141.276	Bending bracket	V1.2	2
3	S185-1004-00	206.4.2141.065	Wiring POM	V1.1	2
4	S185-1005-00	202.4.2141.278	Marquee upper cover	V1.1	1
5	S185-1006-00	202.4.2141.279	Bracket back cover plate	V1.1	1
6	S185-1007-00	202.4.2211.001	Upper light fixing plate 1	V1.1	1
7	S185-1008-00	202.4.2141.281	bracket light fixing plate 1	V1.1	1
8	S185-1009-00	206.4.2141.097	LOGO back acrylic	V1.1	1
9	S185-1010-00	206.4.2141.100	Shading board ABS	V1.1	1
10	S185-1011-00	202.4.2141.311	Wiring cover plate	V1.1	2

9.22 Headset Assembly

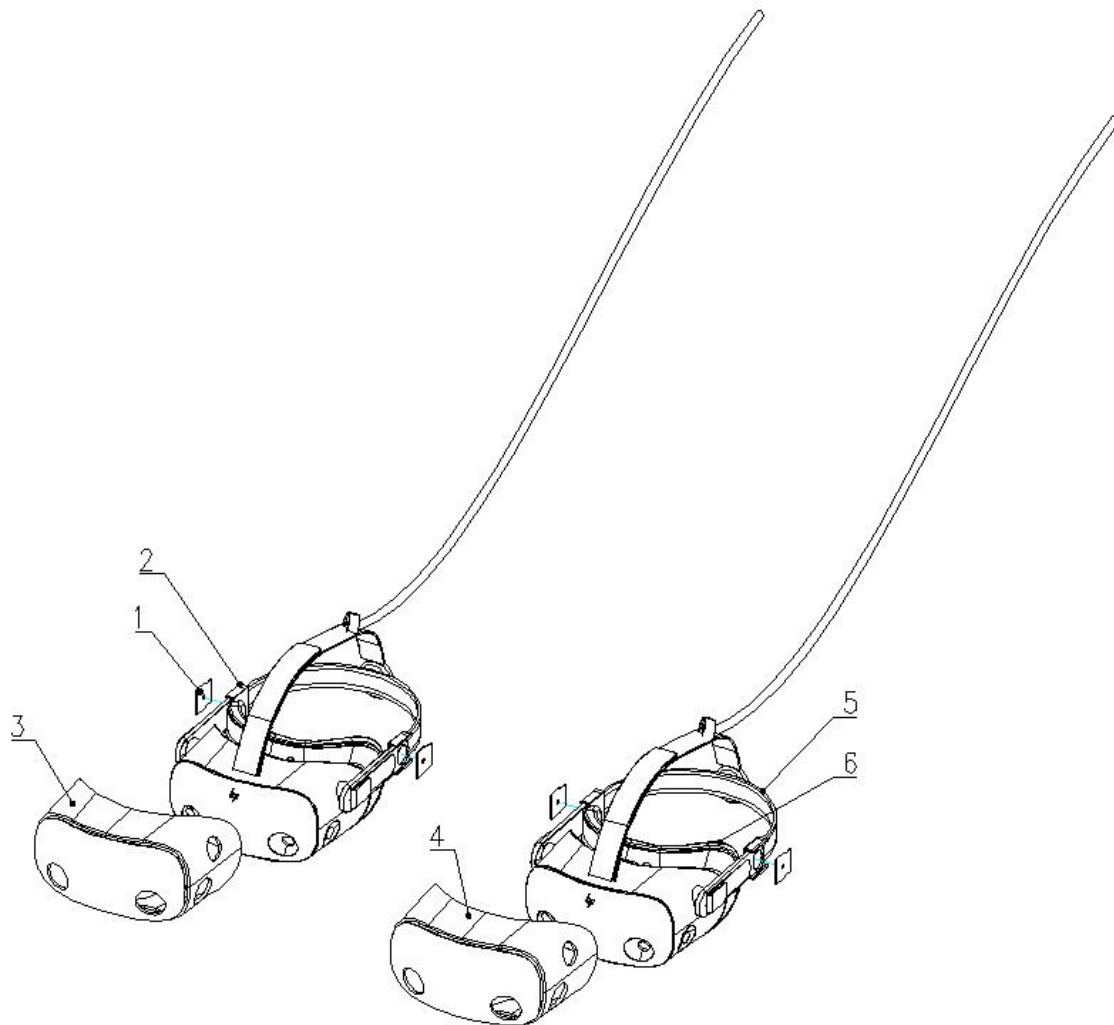


No.	Part No.	Code No.	Name	version	Qty
1	S185-1102-00	202.4.2141.305	Headset side pressing plate	V1.1	4
2	S185-1103-00	206.4.2141.085	Headset side strengthen plate	V1.1	4
3	S185-1104-00	206.4.2141.091	Headset red cover	V1.1	1
4	S185-1105-00	206.4.2141.092	Headset blue cover	V1.1	1
5	S185-1107-00	2.51.08.040316	Steel wire(φ1.5mm-0.5m)	V1.1	2
6	S185-1114-00	2.11.07.280024	Eyecover	V1.1	2


9.23 Decal Part





No.	Part No.	Code No.	Name	version	Qty
1	S185-0882-00	205.4.2141.008	L small PET	V1.1	1
2	S185-0880-00	205.4.2141.079	Monitor upper plastic 2	V1.1	1
3	S185-0879-00	205.4.2141.078	Monitor upper plastic 1	V1.1	1
4	S185-0881-00	205.4.2141.007	R small PET	V1.1	1
5	S185-1012-00	205.4.2141.001	LOGO acrylic	V1.1	1
6	S185-1013-00	205.4.2141.002	Logo mid board acrylic	V1.1	1
7	S185-1630-00	205.4.2141.105	Handle L decal	V1.1	1
8	S185-0451-00	205.4.2141.005	Handle acrylic	V1.1	1
9	S185-1629-00	205.4.2141.104	Handle R decal	V1.1	1
10	S185-0906-00	205.4.2141.112	Monitor plastic	V1.1	1
11	S185-0225-00	205.4.2141.084	Boat side light plastic 1	V1.1	1
12	S185-0226-00	205.4.2141.085	Boat side light plastic 2	V1.1	1
13	S185-0227-00	205.4.2141.086	Boat side light plastic 3	V1.1	1
14	S185-0228-00	205.4.2141.087	Boat side light plastic 4	V1.1	1
15	S185-0229-00	205.4.2141.088	Boat side light plastic 5	V1.1	1
16	S185-0230-00	205.4.2141.089	Boat side light plastic 6	V1.1	1
17	S185-1611-00	205.4.2141.018	Overhead warning PVC	V1.1	2
18	S185-0223-00	205.4.2141.082	Boat upper L acrylic	V1.1	1
19	S185-0224-00	205.4.2141.083	Boat upper R acrylic	V1.1	1
20	S185-1625-00	205.4.2141.053	Headset bracket decal	V1.1	1
21	S185-1628-00	205.4.2141.101	Boat bottom left PVC	V1.1	1
22	S185-1627-00	205.4.2141.100	Boat bottom right PVC	V1.1	1
23	S185-1616-00	205.4.2141.040	Monitor decal L	V1.1	1
24	S185-1618-00	205.4.2141.042	Seat L side PVC	V1.1	1
25	S185-1620-00	205.4.2141.045	Gun L decal	V1.1	2
26	S185-1621-00	205.4.2141.046	Gun R decal	V1.1	2
27	S185-1622-00	205.4.2141.047	Gun upper decal	V1.1	2
28	S185-1604-00	205.4.2141.011	Boat bottom decal	V1.1	2
29	S185-1612-00	205.4.2141.111	Monitor back PVC	V1.1	1
30	S185-1619-00	205.4.2141.043	Seat R side PVC	V1.1	1
31	S185-1617-00	205.4.2141.041	Monitor decal 1	V1.1	1

No.	Part No.	Code No.	Name	version	Qty
1	S185-0333-00	205.4.2141.070	Gun axle decoration plastic P1	V1.1	1
2	S185-1624-00	205.4.2141.049	Calibrate decal P1	V1.1	1
3	S185-1603-00	205.4.2141.010	Emergency stop button decal 1P	V1.1	1
4	S185-0335-00	205.4.2141.003	Eyecover box acrylic P1	V1.1	1
5	S185-0337-00	205.4.2141.006	Headset placing acrylic	V1.1	1
6	S185-0338-01	206.4.2141.124	HP_VR plastic	V1.1	1
7	S185-0338-00	205.4.2141.092	HP_VR plastic	V1.1	1
8	S185-1606-00	205.4.2141.013	Seat tilt alarm PVC	V1.1	1
9	S185-1610-00	205.4.2141.017	Control panel tilt alarm PVC	V1.1	2
10	S185-1607-00	205.4.2141.014	Base warning PVC	V1.1	2
11	S185-1608-00	205.4.2141.015	Mid right warning PVC	V1.1	1
12	S185-1609-00	205.4.2141.016	Mid left warning PVC	V1.1	1
13	S185-0336-00	205.4.2141.004	Eyecover box acrylic P2	V1.1	1
14	S185-1602-00	205.4.2141.009	Emergency stop button decal 2P	V1.1	1
15	S185-1623-00	205.4.2141.048	Calibrate decal P2	V1.1	1
16	S185-1626-00	205.4.2141.056	Stop decal	V1.1	2
17	S185-1605-00	205.4.2141.012	Calibrate button PVC	V1.1	2
18	S185-0334-00	205.4.2141.071	Gun axle decoration plastic P2	V1.1	1
19	S185-0332-00	205.4.2141.069	Control panel monitor acrylic	V1.1	1

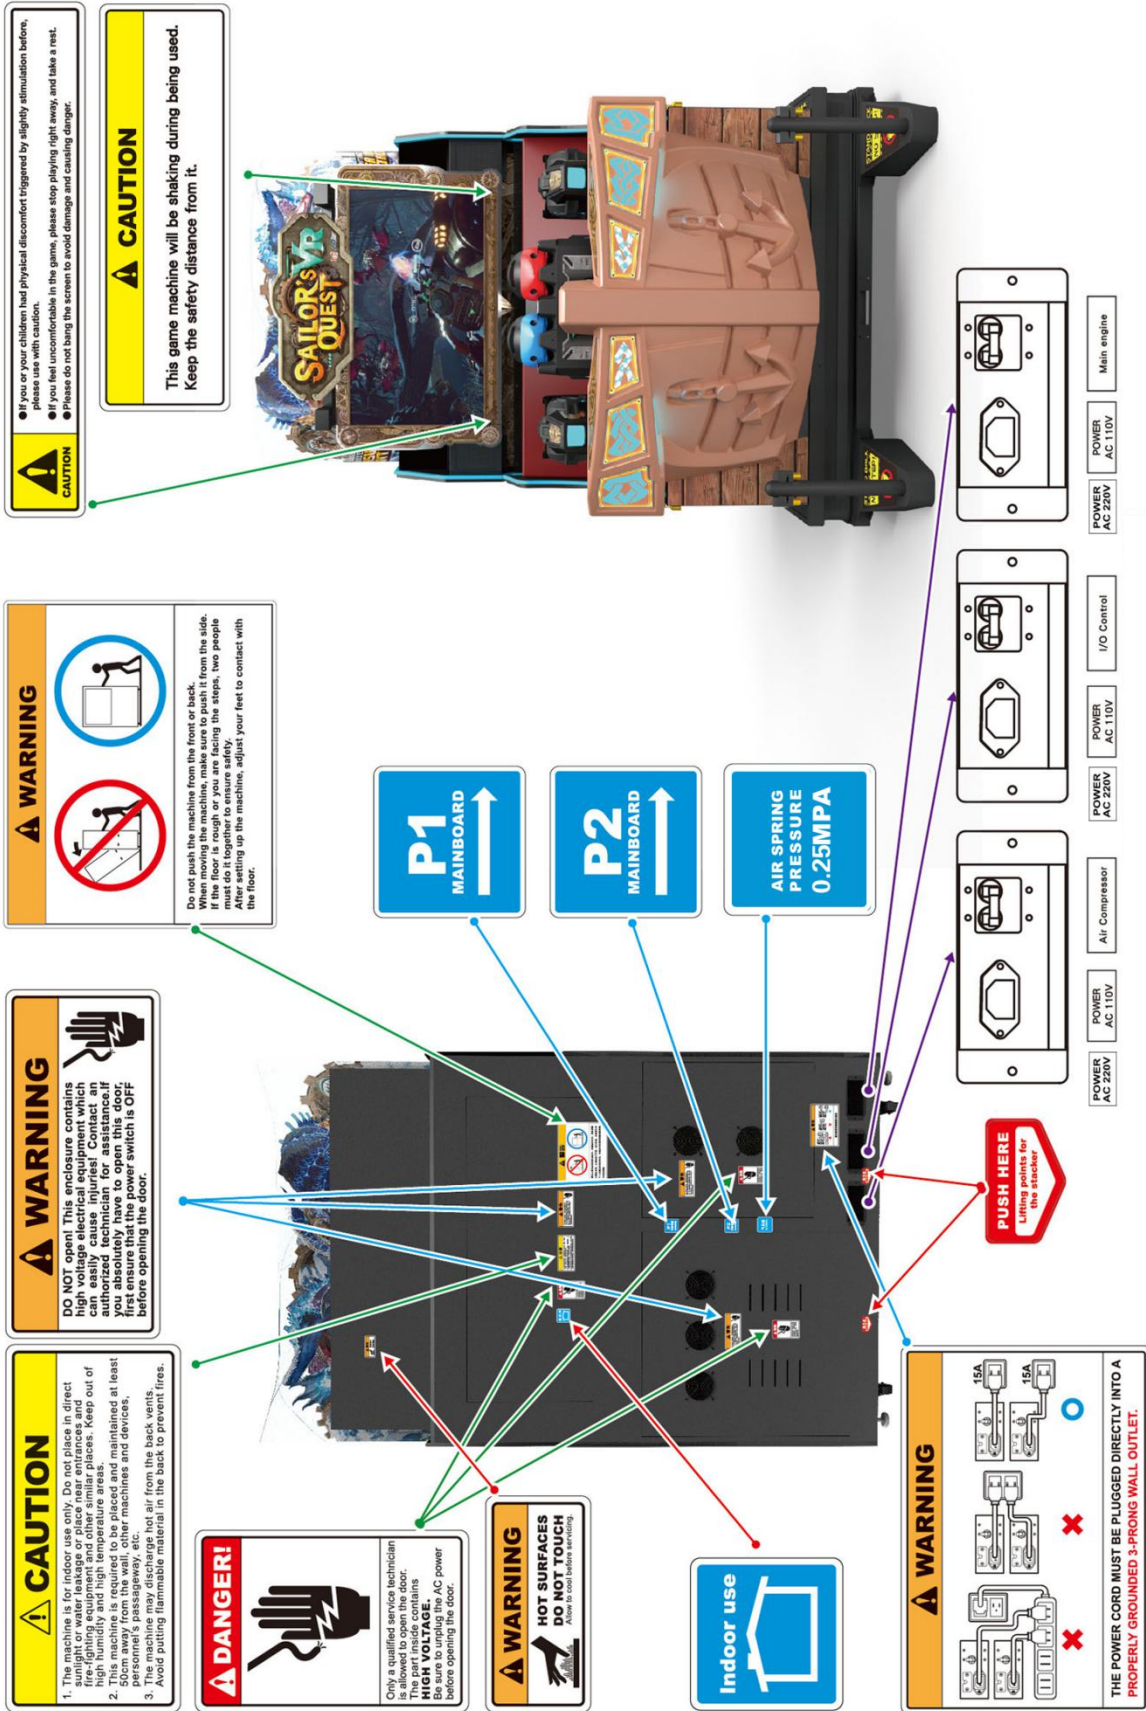

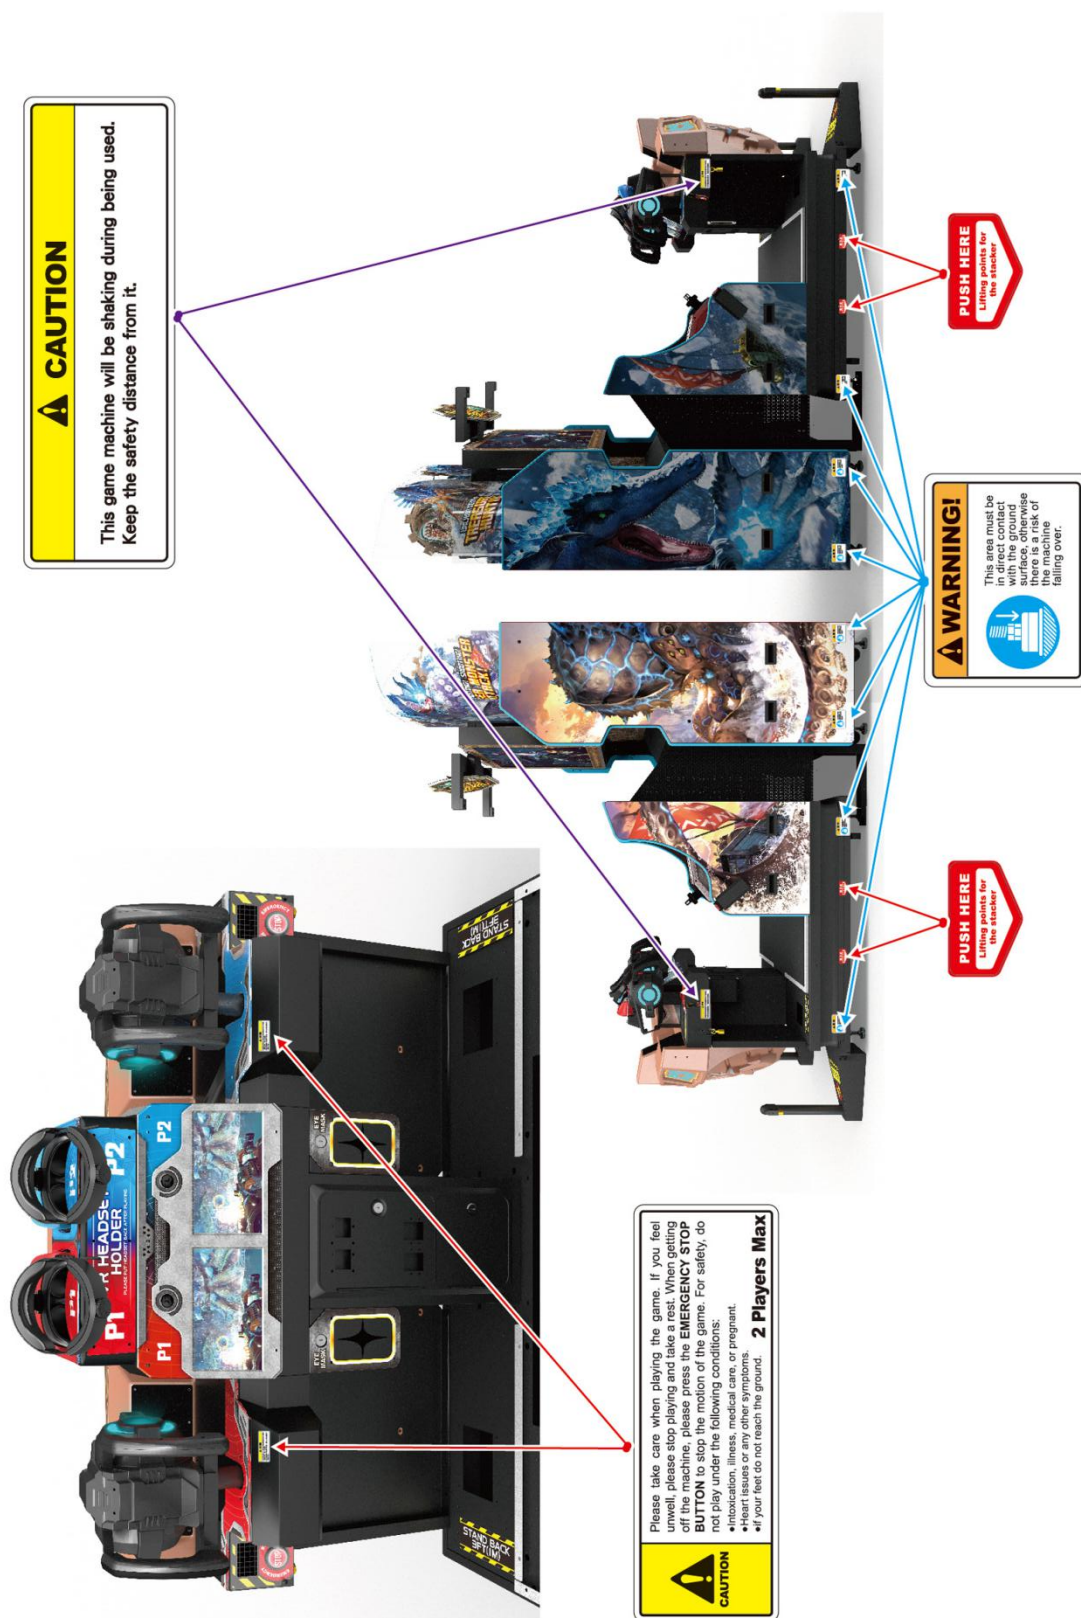


No.	Part No.	Code No.	Name	version	Qty
1	S185-1613-00	205.4.2141.020	Warning PVC(1 Set for machine)	V1.1	1

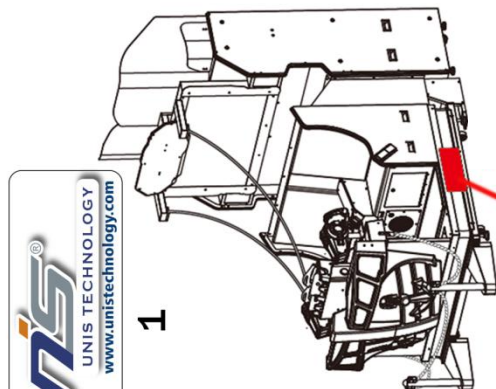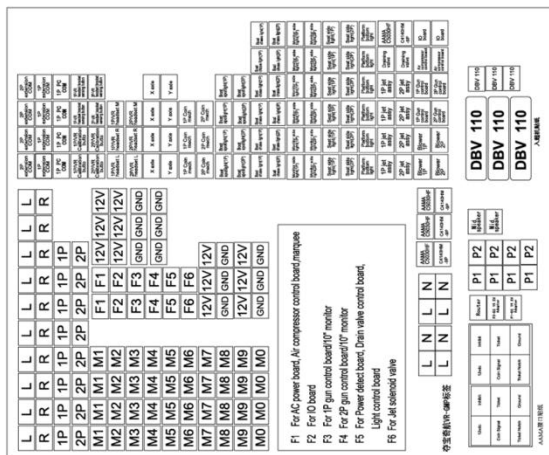

Suitable for Indoor Use Only	
NAME: Silent Quest VR CIP	MAX POWER: 1850W
MODEL: V-029	MIN POWER: 400W
VOLTAGE: AC 110V ~	FREQUENCY: 50/60HZ
S/N:	DATE:
Guangdong UNIS Technology Co., Ltd.	

No.	Part No.	Code No.	Name	version	Qty
1	S185-1614-00	205.4.2141.021	UNIS decal	V1.1	4
2	S185-1639-00	205.4.2141.028	Red transition decal	V1.1	2
3	S185-1615-00	205.4.2141.024	Wiring decal	V1.1	1
4	S185-1640-00	205.4.2141.025	110V nameplate	V1.1	1
5	S185-1642-00	2.56.00.000117	DBV decal	V1.2	2
6	S185-1638-00	205.4.2141.027	Coin decal	V1.1	1

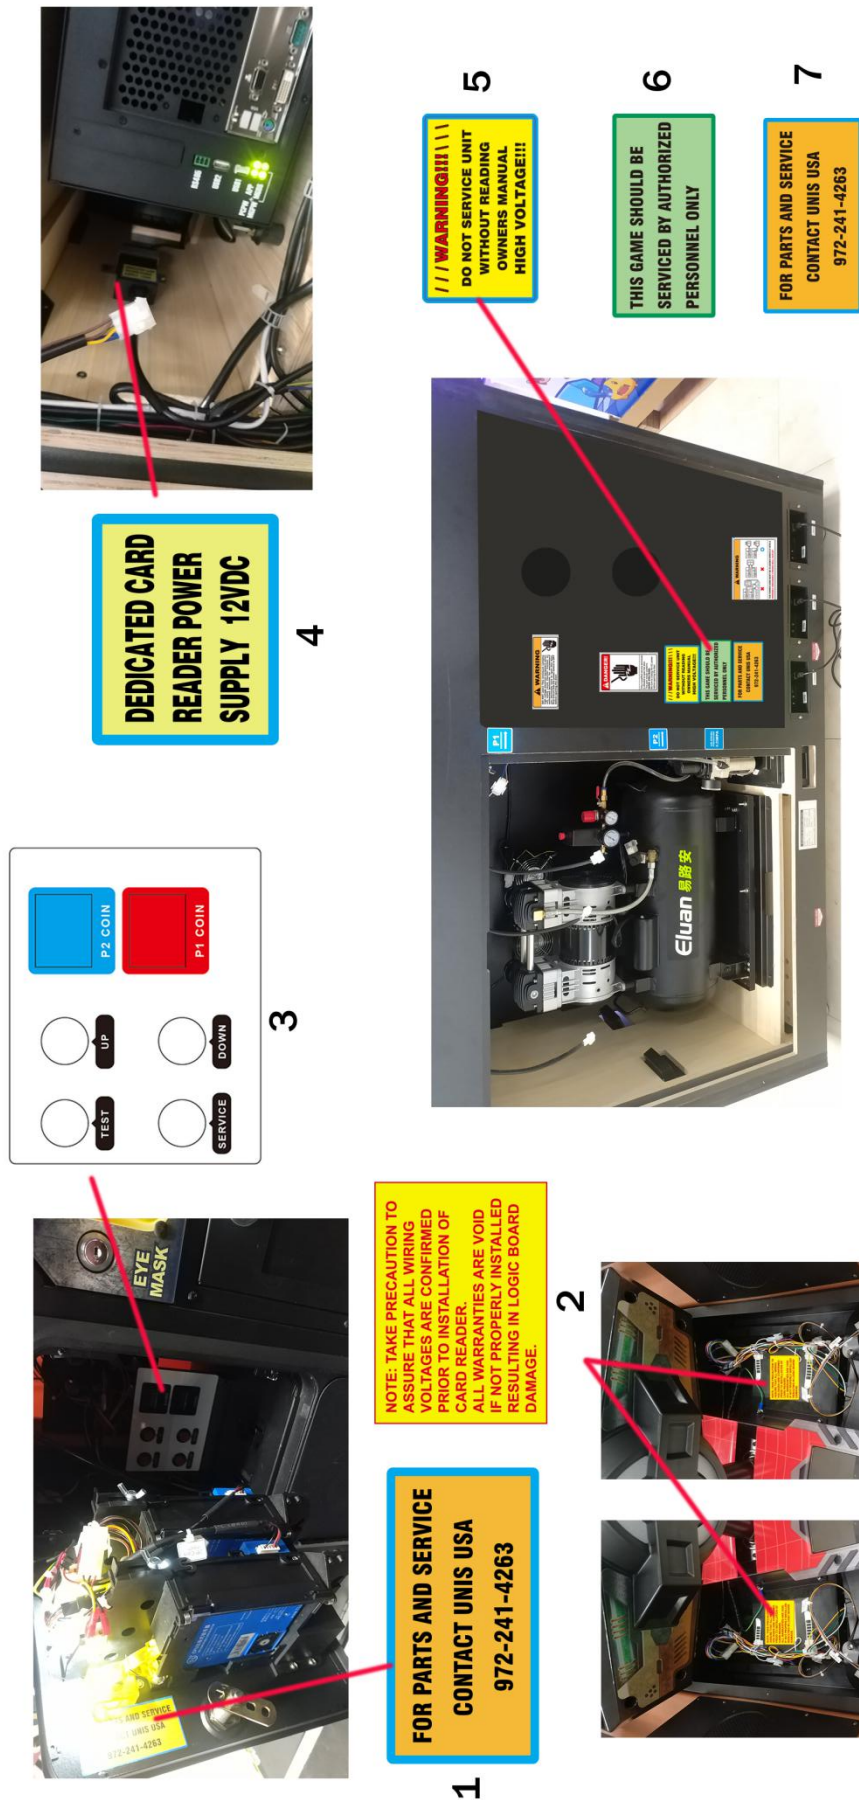

No.	Part No.	Code No.	Name	version	Qty
1	S185-1634-00	2.56.00.000096A	Maintenance decal(S)	V1.1	1
2	S185-1635-00	2.56.00.000120	AAMA decal	V1.1	2
3	S185-1637-00	205.4.2141.026	Service panel decal	V1.1	1
4	S185-1636-00	2.56.00.000121	Adapter PVC	V1.1	1
5	S185-1632-00	2.56.00.000067A	Service decal	V1.1	1
6	S185-1631-00	2.56.00.000042A	Service decal 1	V1.1	1
7	S185-1633-00	2.56.00.000095A	Maintenance decal(L)	V1.1	1

9.24 Electrical Component




No.	Part No.	Code No.	Name	version	Qty
1	S185-1543-00	2.20.02.000047	TG5050NW light strip	V1.1	55.11 in*2 (1400mm*2)
2	S185-1524-00	2.12.01.000028	49" monitor	V1.1	1
3	S185-1532-00	2.20.02.019001	LPD6803S lights strip	V1.1	90.55 in*2 (2300mm*2)
4	S185-1538-00	2.20.03.230028	RGB light	V1.1	1
5	S185-1552-00	2.11.07.280019	Headset	V1.1	2
6	S185-1529-00	297.6.2107001	Square orange light board	V1.1	1*2
	S185-1530-00	297.6.2107002	Round orange light board	V1.1	2*2
	S185-1553-00	2.26.04.000093	Micro SW	V1.1	2*2
	S185-1410-00	208.4.2141.006	Sensor set		2*2
7	S185-1532-00	2.20.02.019001	LPD6803S lights strip	V1.1	51.18 in*2 (1300mm*2)
8	S185-1541-00	2.28.06.010007	4" speaker	V1.1	2
9	S185-1532-00	2.20.02.019001	LPD6803S lights strip	V1.1	23.62 in*4 (600mm*4)
10	S185-1543-00	2.20.02.000047	TG5050NW light strip	V1.1	57.08 in *2 (1450mm*2)
11	S185-1532-00	2.20.02.019001	LPD6803S lights strip	V1.1	47.24 in*3 (1200mm*3)
12	S185-1544-00	2.20.02.020046	4mm2835 white light strip	V1.1	74.80 in (1900mm)




No.	Part No.	Code No.	Name	version	Qty
1	S185-0342-00	2.51.01.10.0065	Jet connector	V1.1	2
2	S185-1527-00	2.12.01.000041	10.1" monitor	V1.1	2
	S185-1547-00	2.33.07.000036	HDMI cable	V1.1	2
	S185-1549-00	2.14.12.030006	HDMI connector	V1.1	2
3	S185-1531-00	2.34.01.000047	Blower	V1.1	2
4	S185-1519-00	2.24.01.300019	Button(45CM)	V1.1	2
5	S185-1561-00	2.22.01.000028	Light bulb	V1.1	2
	S185-1562-00	2.20.03.000018	LED bulb	V1.1	2
	S185-1518-00	2.23.01000008	Coin mechanism	V1.1	2




No.	Part No.	Code No.	Name	version	Qty
1	S185-1540-00	2.28.01.080016	Speaker	V1.1	3
2	S185-1520-00	2.24.01.300015	Button(63.2CM)	V1.1	2

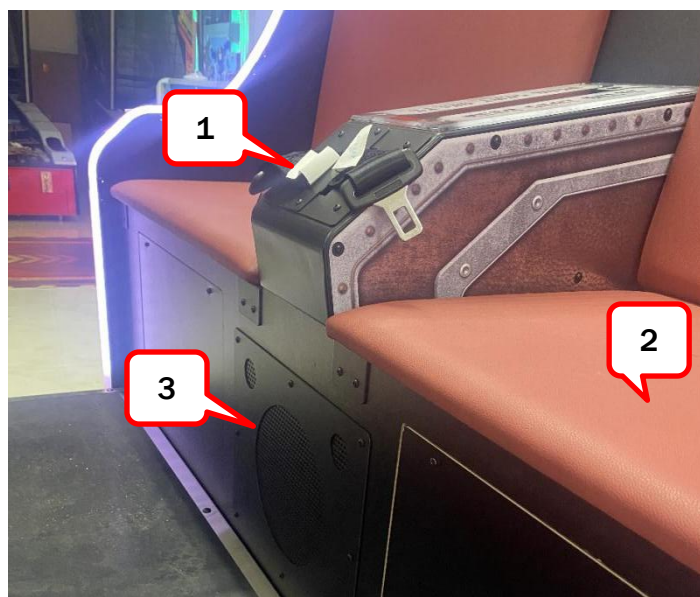


No.	Part No.	Code No.	Name	version	Qty
1	S185-0453-00	206.5.1401A.004	Safety belt	V1.1	2
2	S185-1504-00	2.28.01.080002	Shaking speaker	V1.1	2
3	S185-1542-00	2.28.01.080017	Woofer	V1.1	1

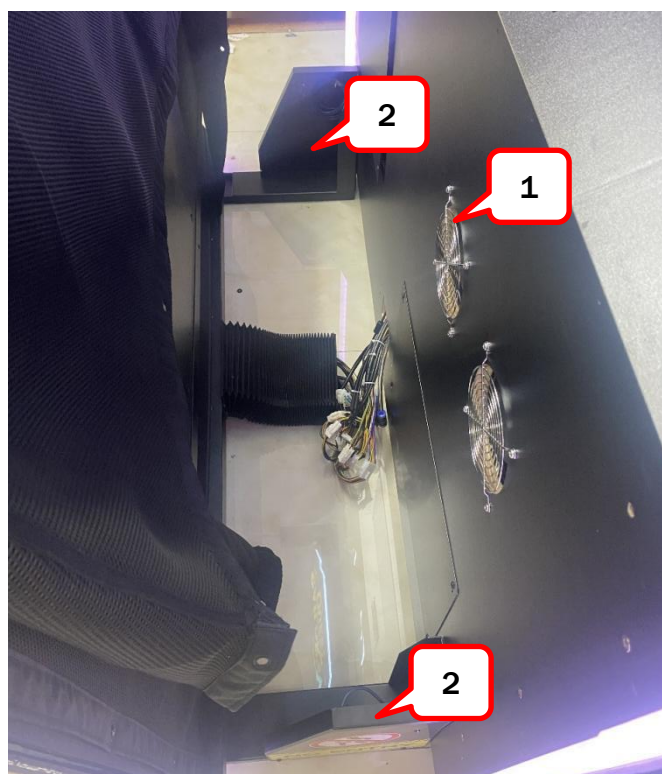


No.	Part No.	Code No.	Name	version	Qty
1	S185-1521-00	2.27.02.010032	Fan(for 110V)	V1.1	2
	S185-1522-00	2.27.02.000010	Fan net	V1.1	4
2	S185-1545-00	2.15.03.000093	Reflect sensor	V1.1	1

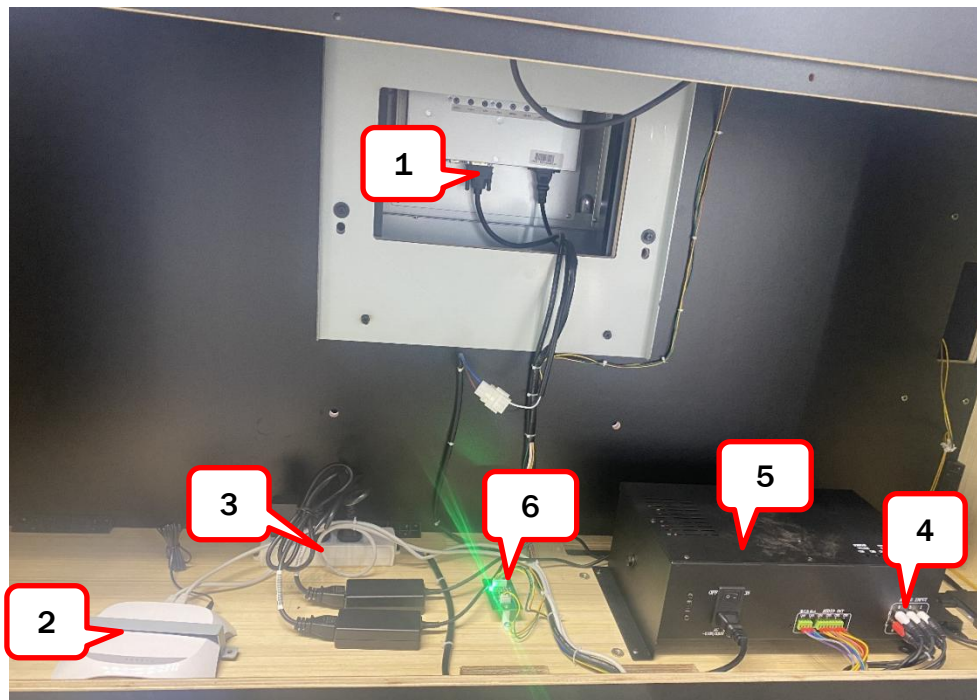


No.	Part No.	Code No.	Name	version	Qty
1	S185-1546-00	2.33.07.050011	DP-DVI cable	V1.1	1
2	S185-1558-00	2.11.08.000006	Router	V1.1	1
3	S185-1557-00	2.16.06.040023	Socket	V1.1	1
4	S185-1560-00	2.33.05.000003	Audio cable	V1.1	3
5	S185-1539-00	2.28.03.060016	5.1 amplifier	V1.1	1
6	S185-1563-00	297.9.2107001	PCB board	V1.1	1

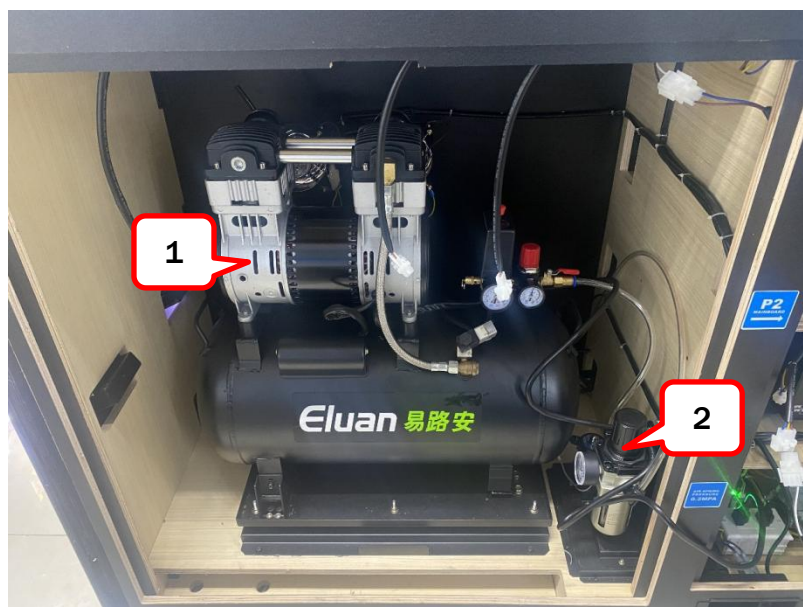


No.	Part No.	Code No.	Name	version	Qty
1	S185-0883-00	4.06.11.01.0200	Air compressor	V1.1	1
2	S185-1523-00	2.51.01.12.3010	Fluid control valve	V1.2	1

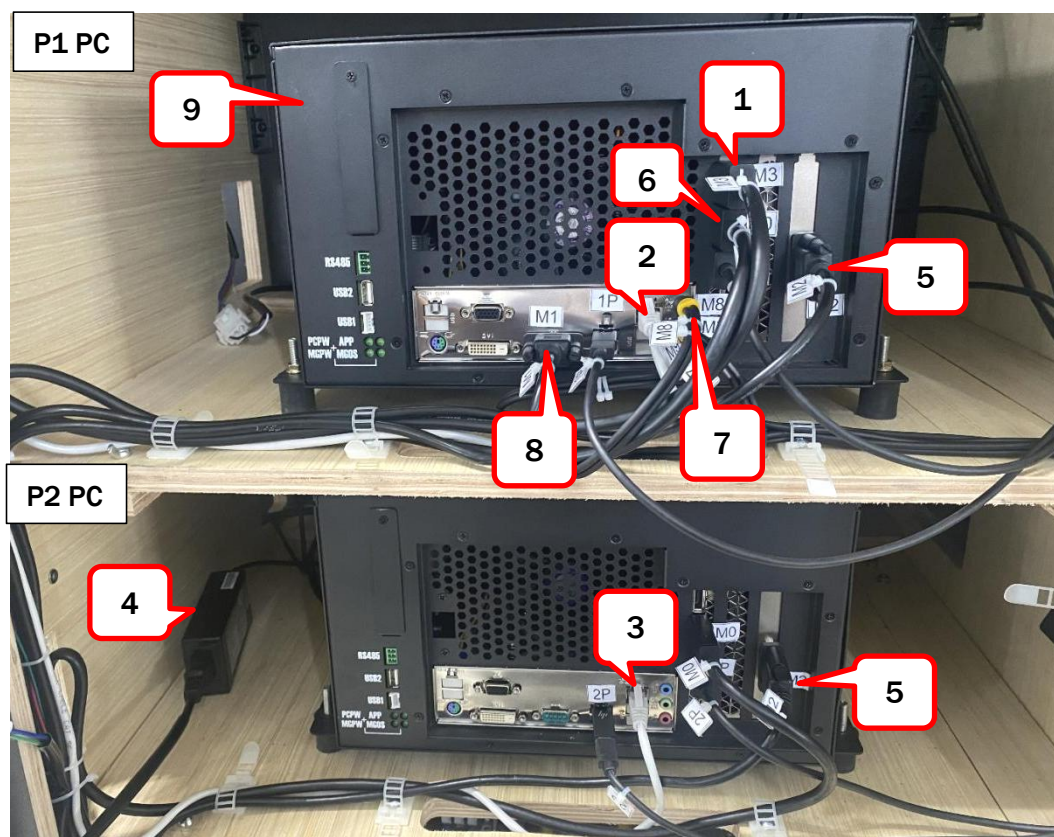


No.	Part No.	Code No.	Name	version	Qty
1	S185-1546-00	2.33.07.050011	DP-DVI cable	V1.1	1
2	S185-1565-00	2.33.02.000011	Network cable(1m)	V1.1	1
3	S185-1566-00	2.33.02.000014	Network cable(2m)	V1.1	1
4	S185-1591-00	2.16.03.000076	Adapter	V1.1	1
5	S185-1568-00	2.33.03.030013	Serial cable	V1.1	2
6	S185-1548-00	2.33.07.050014	DP-HDMI cable	V1.1	2
7	S185-1560-00	2.33.05.000003	Audio cable	V1.1	3
8	S185-1568-00	2.33.03.030013	Serial cable	V1.1	1
9	S185-1402-00	208.4.2141.007	PC board(with main board, CPU,SDRAM)	V1.1	1*2
	S185-1403-00	208.4.2141.008	Video card	V1.1	1*2
	S185-1404-00	208.4.2141.011	Protect board	V1.1	1*2
	S185-1533-00	2.11.07.270009C	PC case(with power supply,fan)	V1.1	1*2
	S185-1537-00	2.11.07.030103	Video card	V1.1	1*2

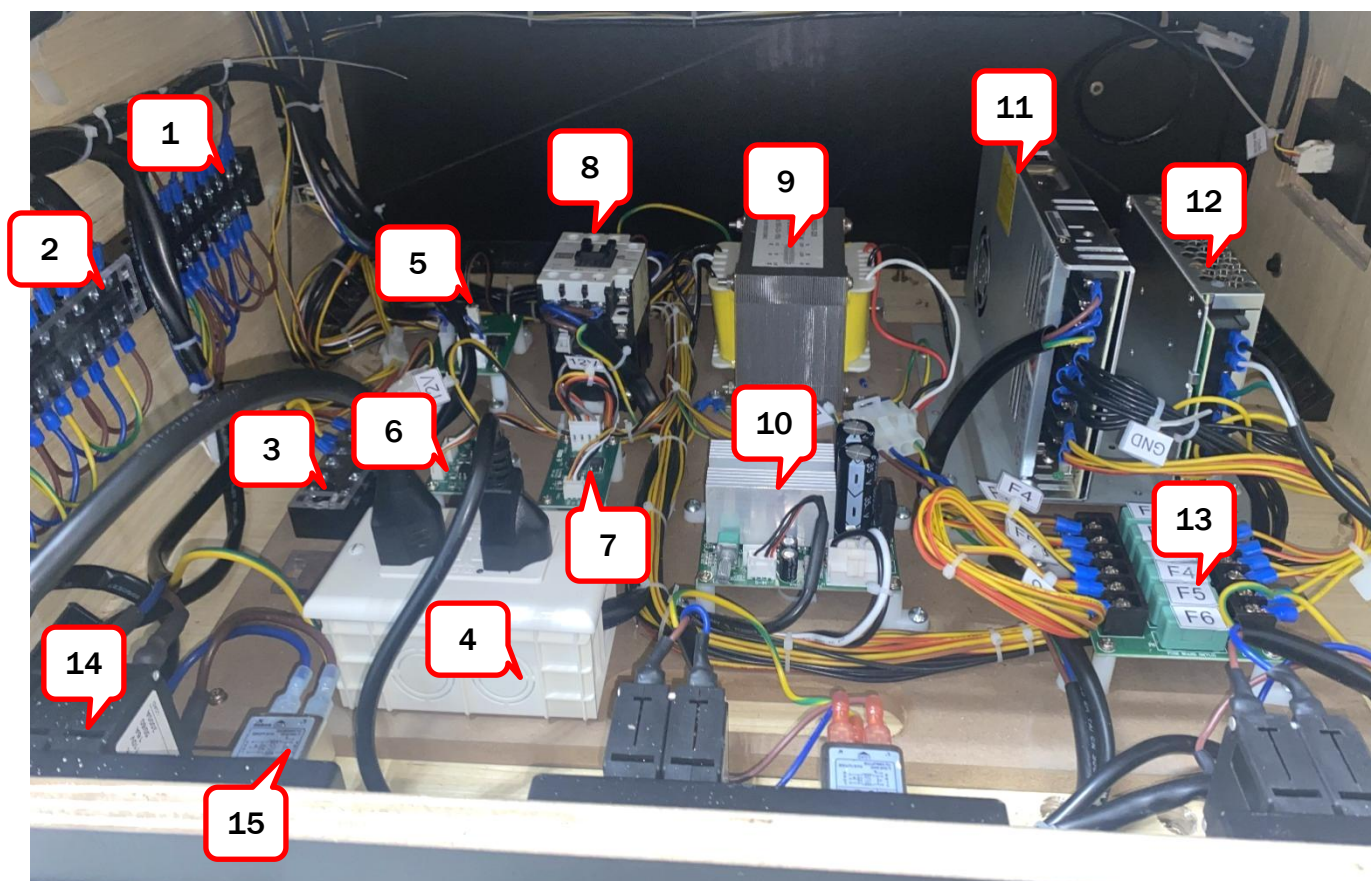


No.	Part No.	Code No.	Name	version	Qty
1	S185-1525-00	2.16.06.000117	Connector bar(9P)	V1.1	1
2	S185-1526-00	2.16.06.000118	Connector bar(12P)	V1.1	1
3	S185-1559-00	2.16.06.000116	Connector bar(6P)	V1.1	1
4	S185-1555-00	2.16.06.000111	Power socket	V1.1	1
	S185-1556-00	2.16.06.000112	Base box	V1.1	1
5	S185-1528-00	297.6.2107003	Motor control card	V1.1	1
6	S185-1509-00	297.4.1801010-A	Air compressor PCB	V1.1	1
7	S185-1507-00	297.4.1801011-A	NMOS PCB	V1.1	1
8	S185-1514-00	2.26.05.000059	AC contactor(110V)	V1.1	1
9	S185-1502-00	2.16.01.000123	Transformer	V1.1	1
10	S185-1503-00	2.28.03.010016	Shaking amplifier	V1.2	1
11	S185-1512-00	2.16.02.000117	Power supply(350-12)	V1.1	1
12	S185-1513-00	2.16.02.000120	Power supply(100-12)	V1.1	1
13	S185-1506-00	2.17.14.000148D	Fuse board	V1.1	1
14	S185-1554-00	2.26.02.000091	Breaker	V1.1	3
15	S185-1515-00	2.32.01000004	Filter	V1.1	3

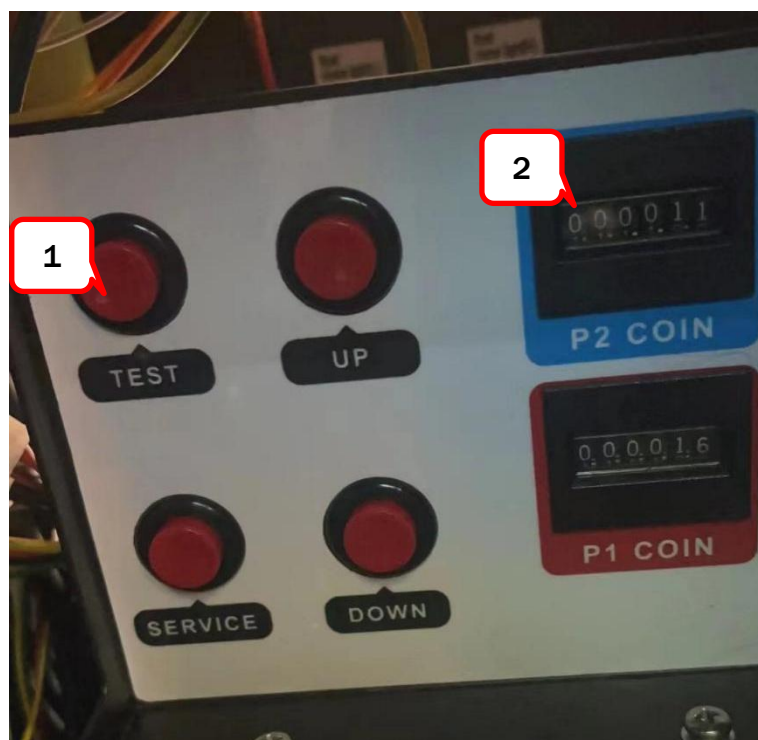

No.	Part No.	Code No.	Name	version	Qty
1	S185-1517-00	2.24.02.000005	Button	V1.1	4
2	S185-1505-00	2.30.00000006	Counter	V1.1	1

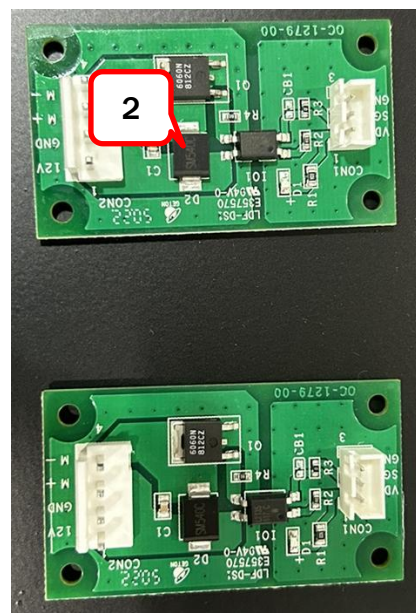

No.	Part No.	Code No.	Name	version	Qty
1	S185-1516-00	2.15.01.000043	Sensor	V1.1	4
2	S185-1563-00	297.9.2107001	PCB board	V1.1	3

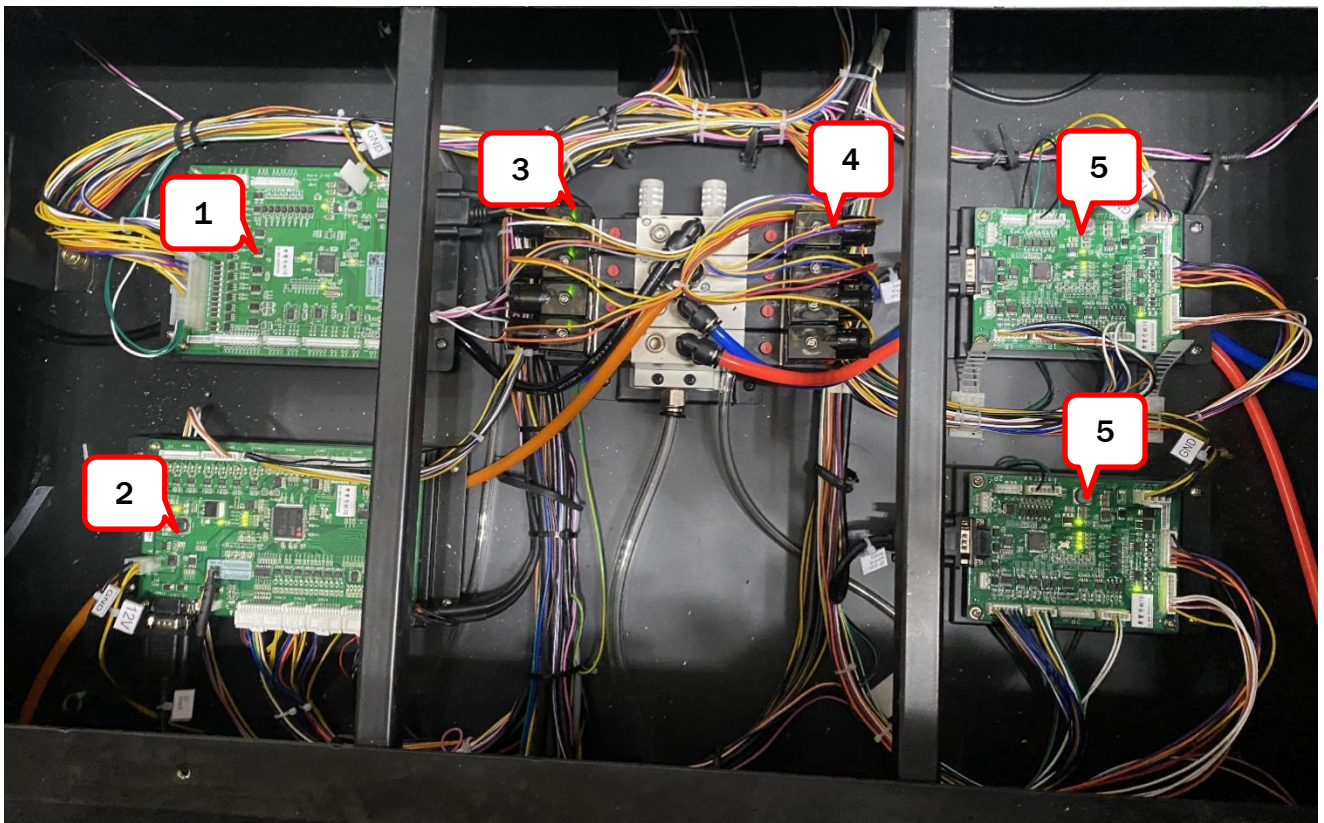


No.	Part No.	Code No.	Name	version	Qty
1	S185-1406-00	208.4.2141.002	IO control board	V1.1	1
2	S185-1407-00	208.4.2141.003	IO board	V1.1	1
3	S185-0622-00	2.51.01.12.5009	Solenoid	V1.1	1
4	S185-0622-00	2.51.01.12.5009	Solenoid	V1.1	1
5	S185-1408-00	208.4.2141.004	Gun IO board	V1.1	2





No.	Part No.	Code No.	Name	version	Qty
1	S185-1511-00	2.26.06.030004	Sensor Switch	V1.1	6


Gun:

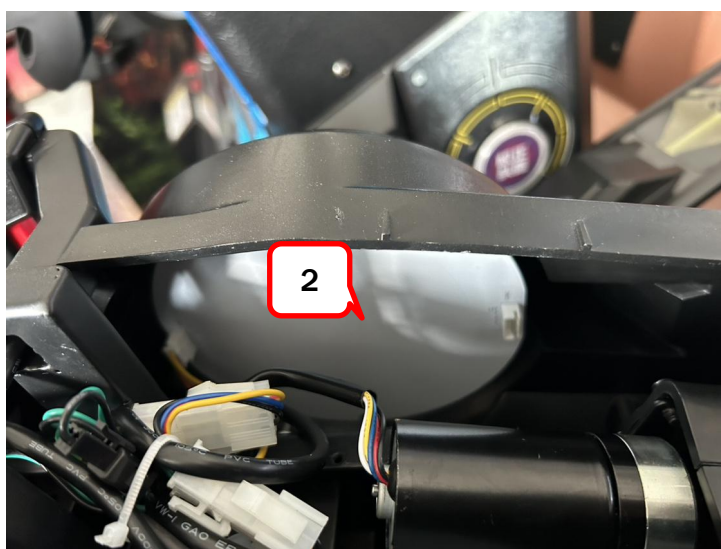

No.	Part No.	Code No.	Name	version	Qty
1	S185-1529-00	297.6.2107001	Square orange light board	V1.1	1*2
2	S185-1530-00	297.6.2107002	Round orange light board	V1.1	2*2
3	S185-1553-00	2.26.04.000093	Micro SW	V1.1	2*2
	S185-1409-00	208.4.2141.005	Trigger	V1.1	2*2
	S185-1410-00	208.4.2141.006	Sensor set	V1.1	2*2

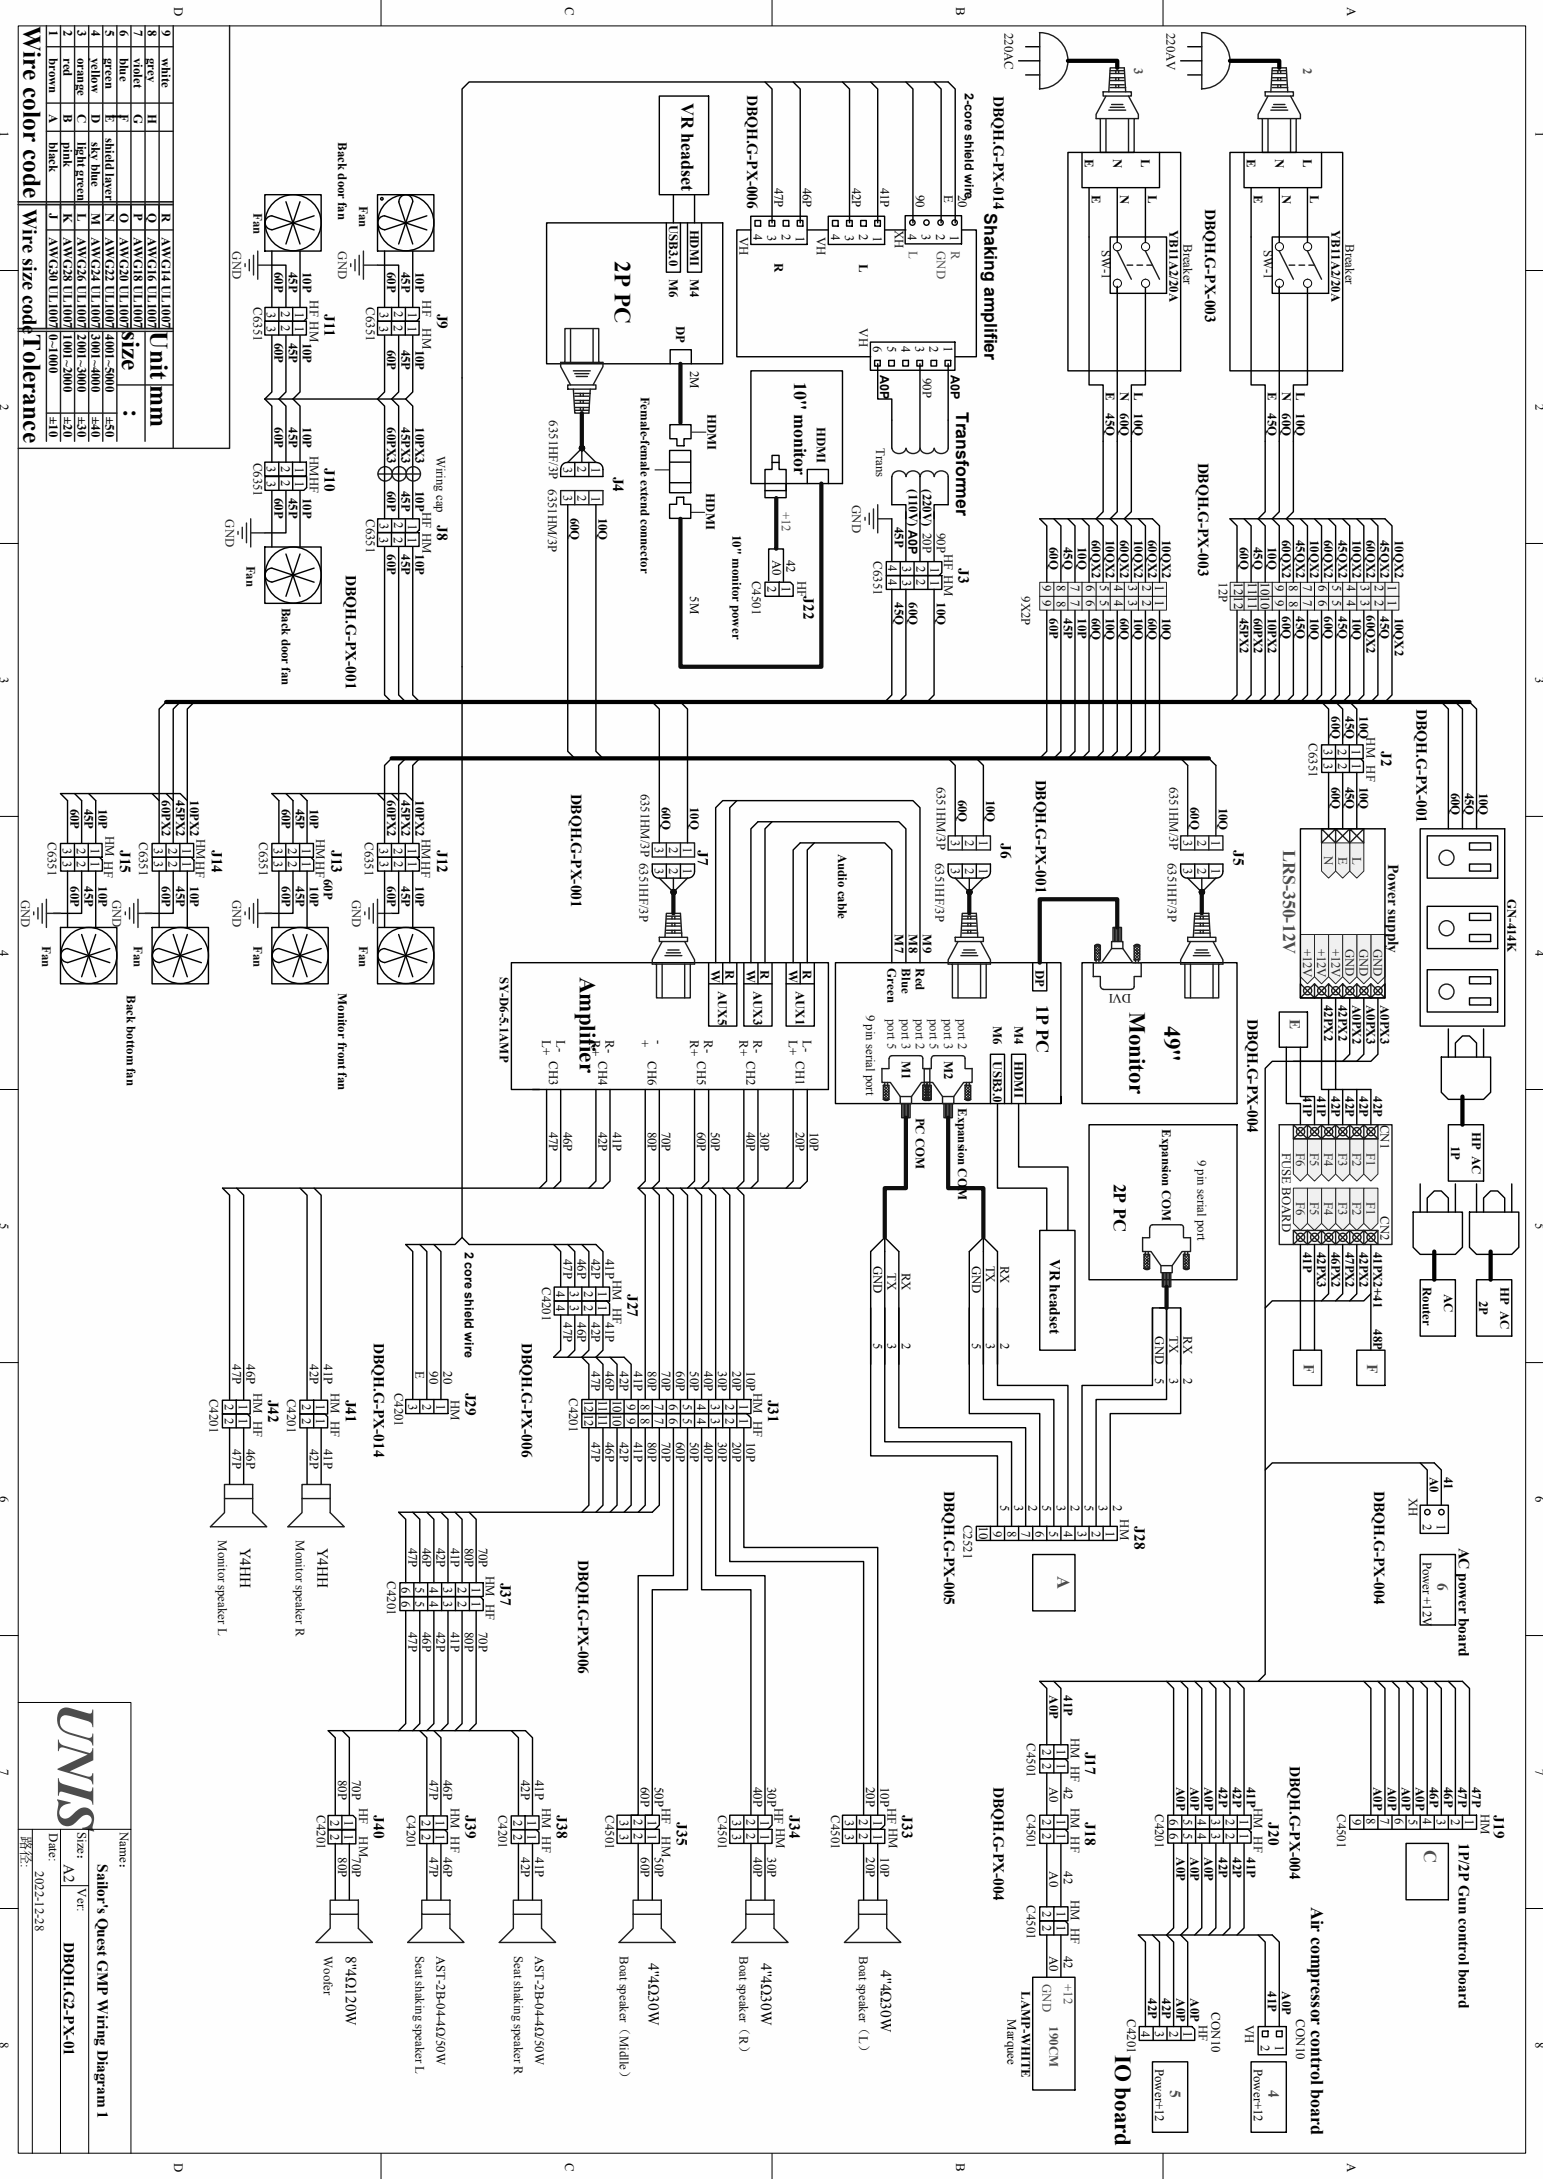


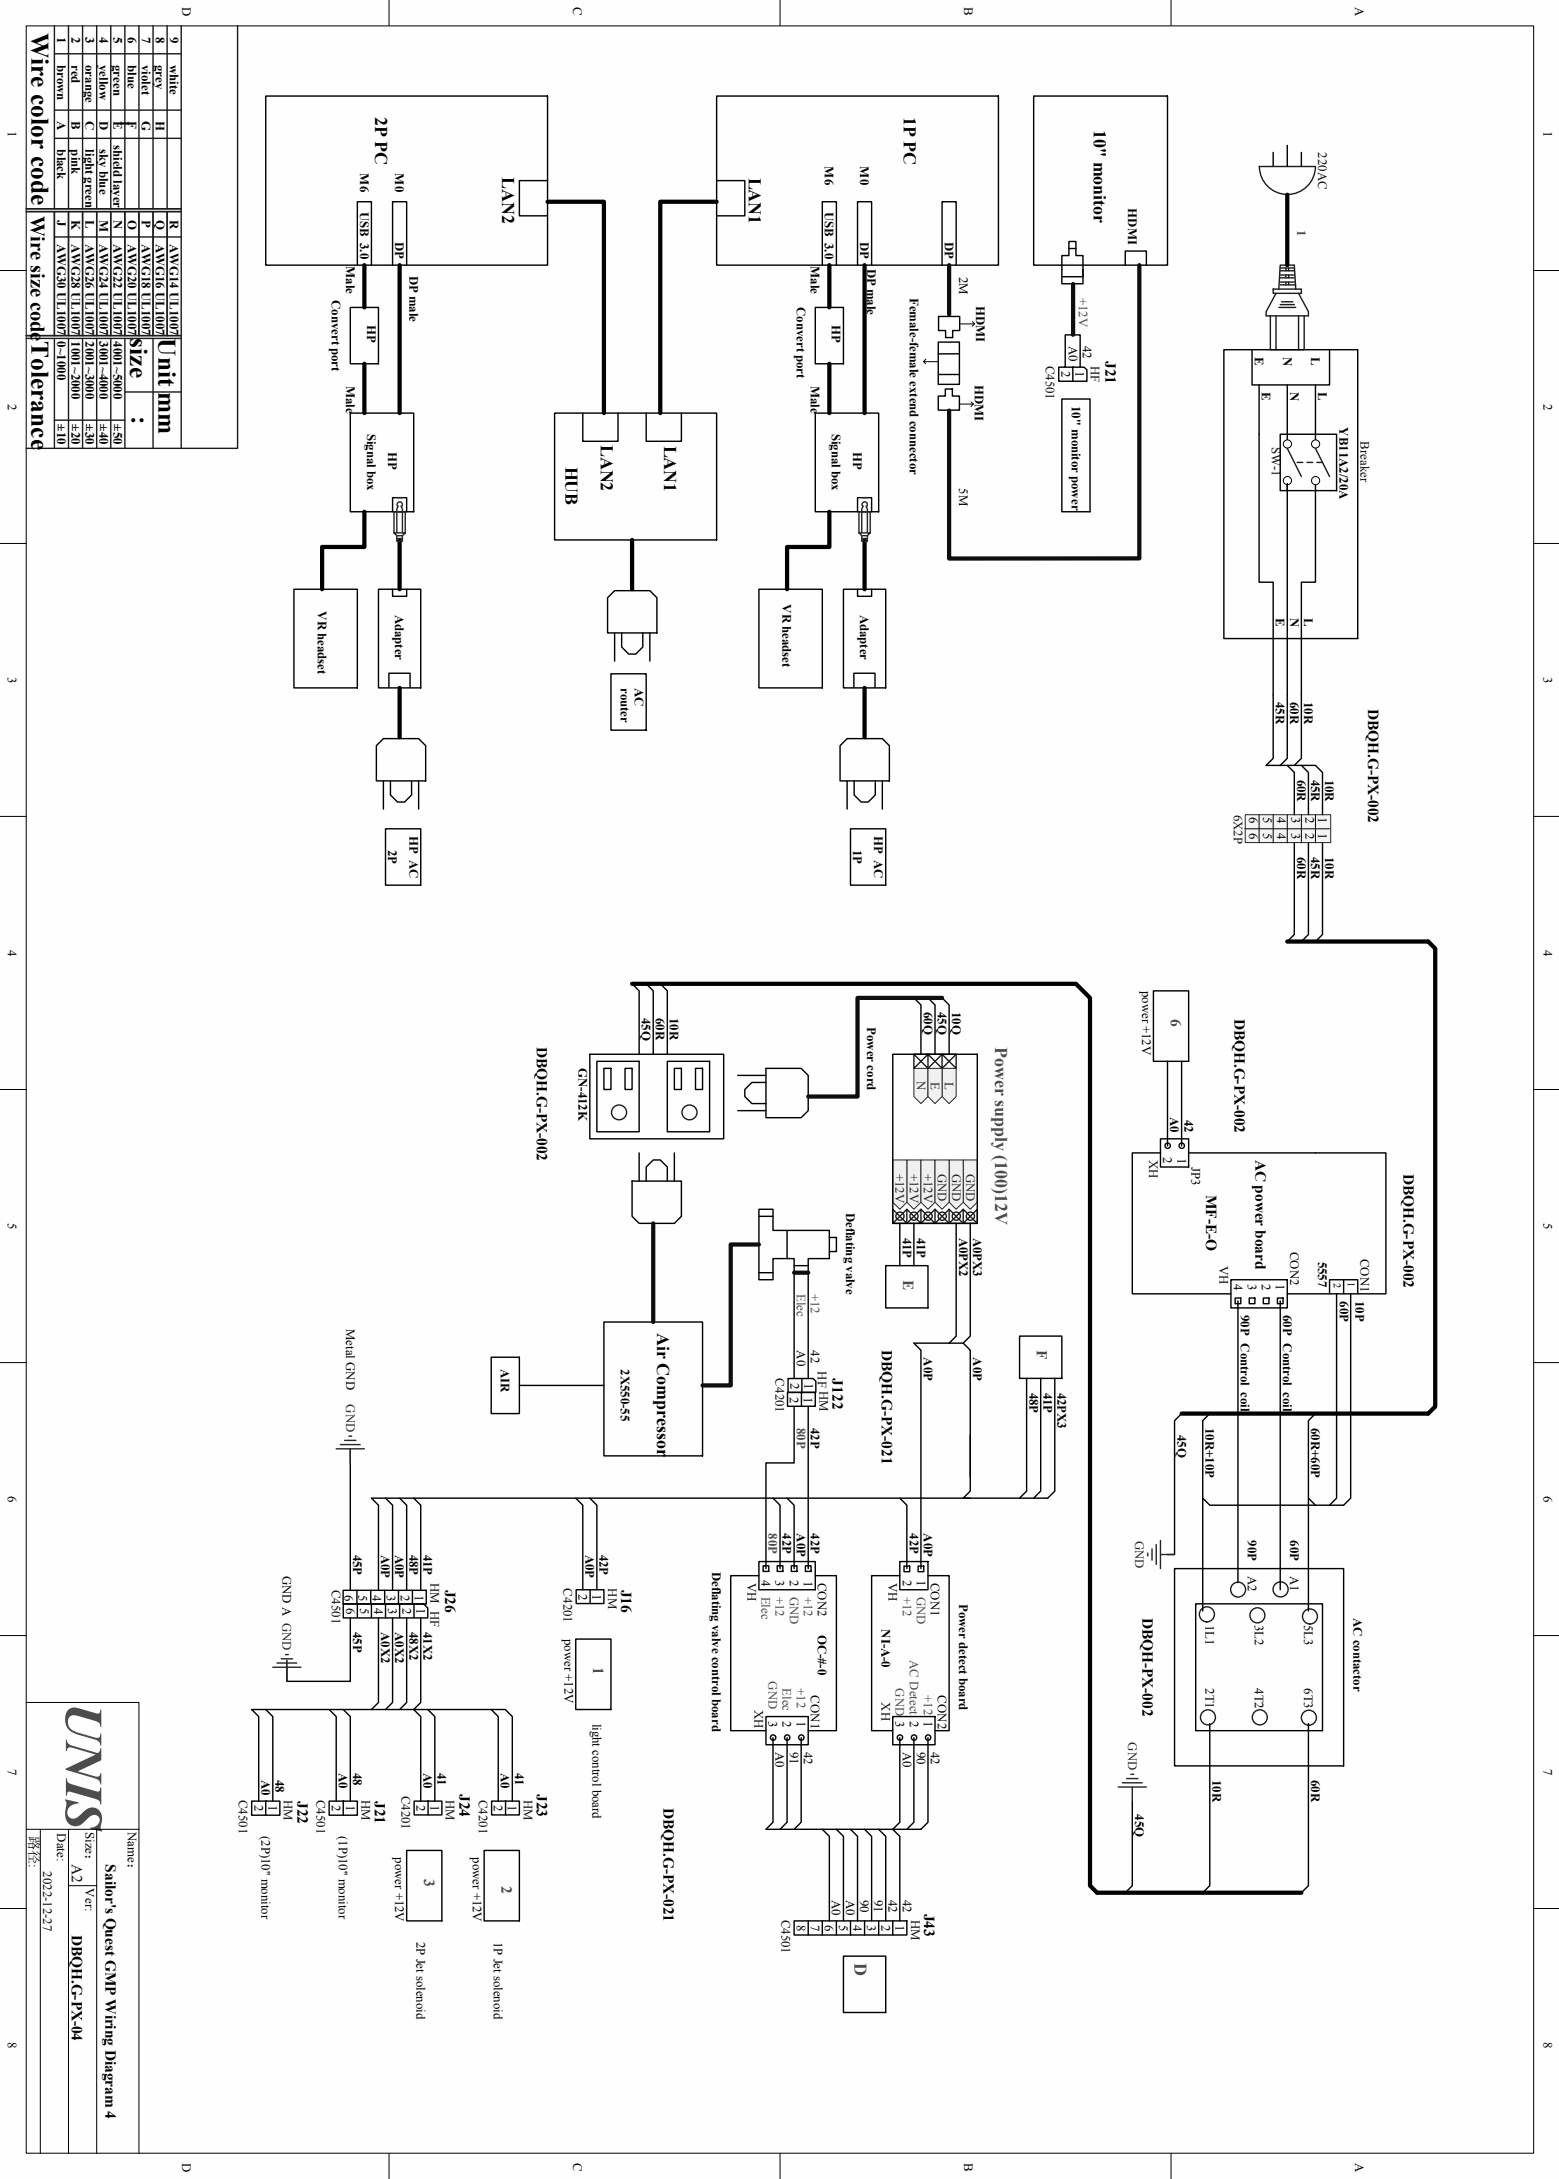

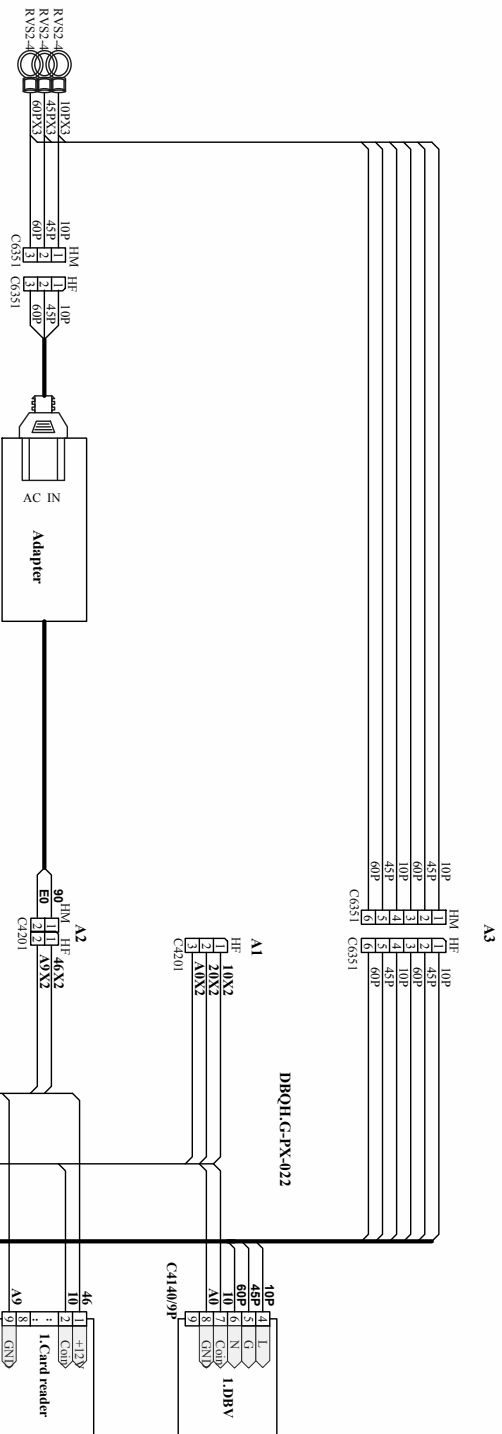

	Unit	mm
9 white	R	AWG14 UL1007
8 grey	R	AWG16 UL1007
7 violet	P	AWG18 UL1007
6 blue	O	AWG30 UL1007
5 green	N	AWG22 UL1007
4 yellow	E	shielded
3 orange	D	shield green
2 red	B	pink
1 brown	A	black
	J	AWG32 UL1007
	K	AWG30 UL1007
		0-1000
		±10

Wire color code	Wire size code	Tolerance
-----------------	----------------	-----------

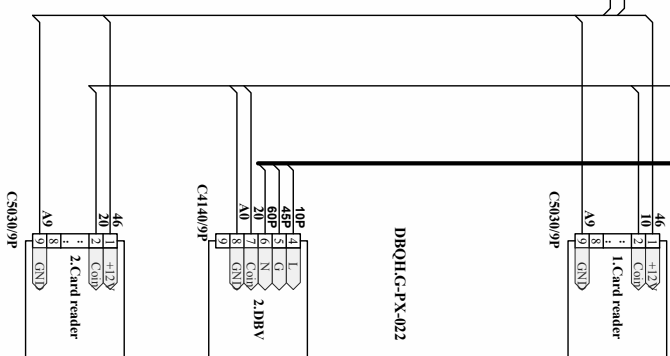

Name:		Salter's Quest GMP Wiring Diagram 5	
Size:	Ver:	A2 DB0HLG-PX-05	
Date:	2022-12-27		
Path:			