



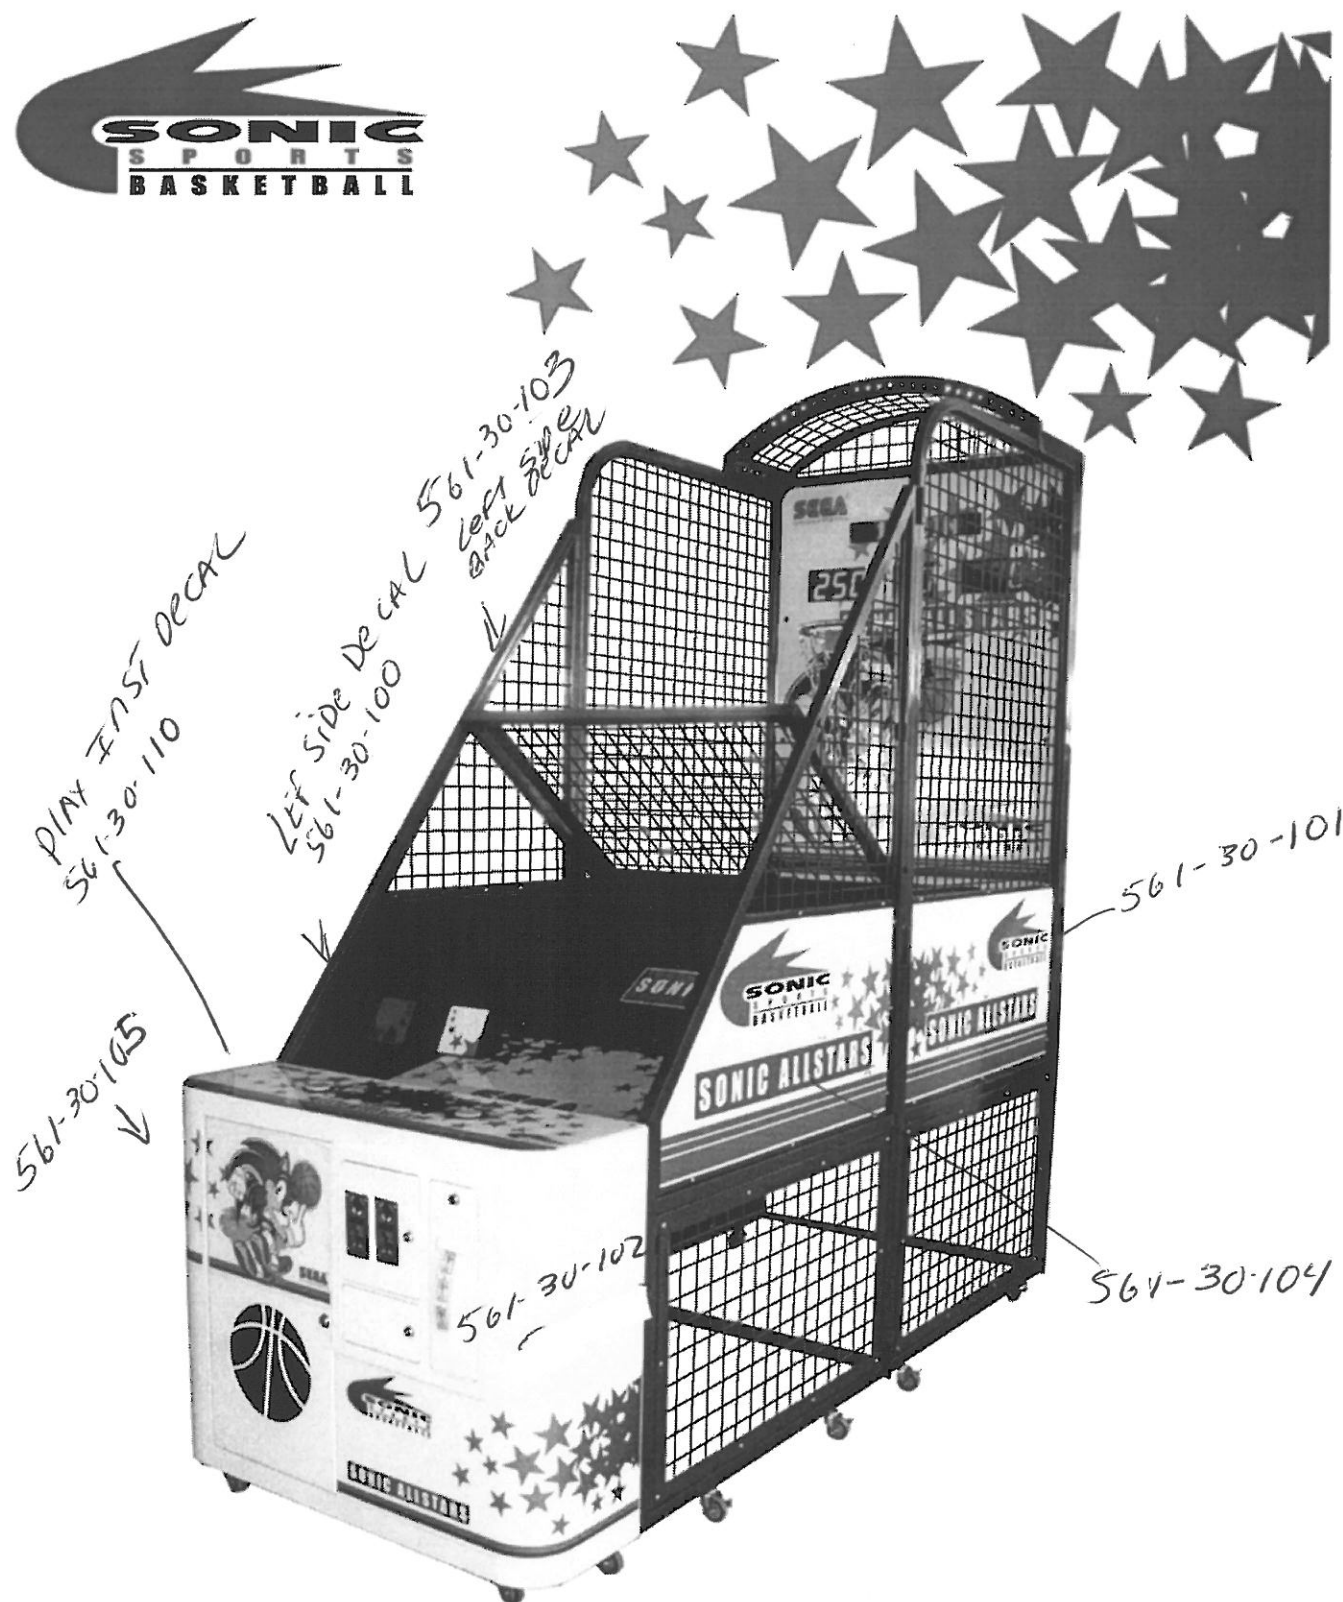


MANUAL

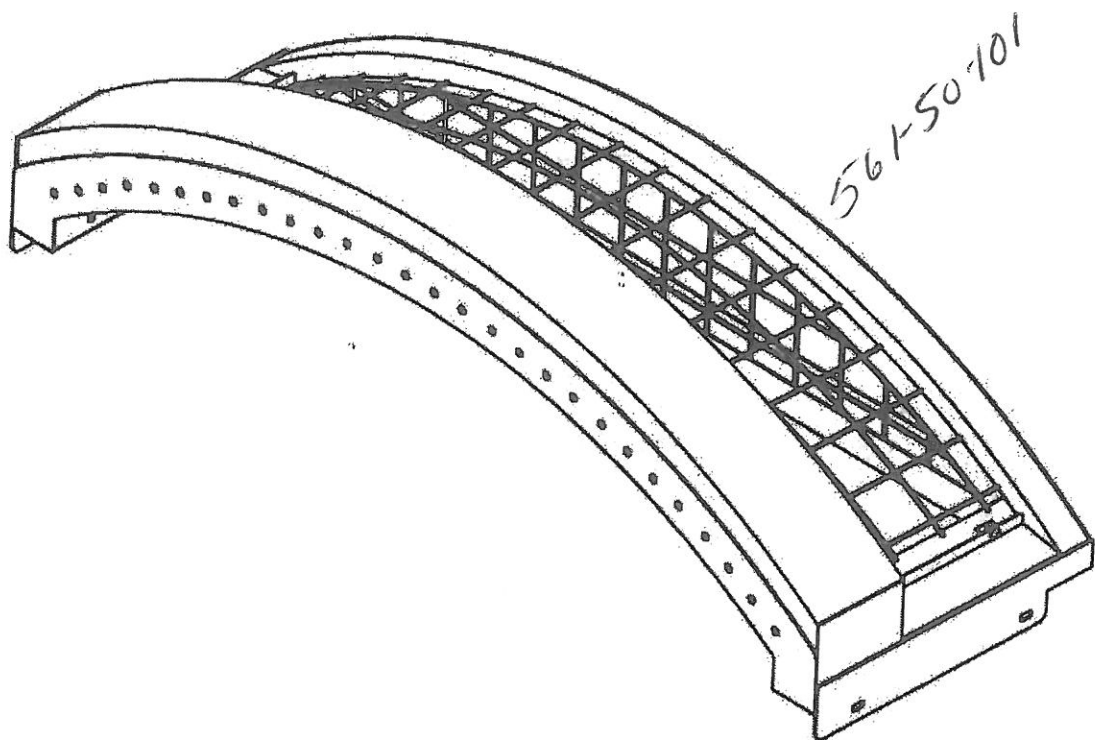

SONIC SPORTS BASKETBALL
LED TOP COVER (SEGA)

Step 1.

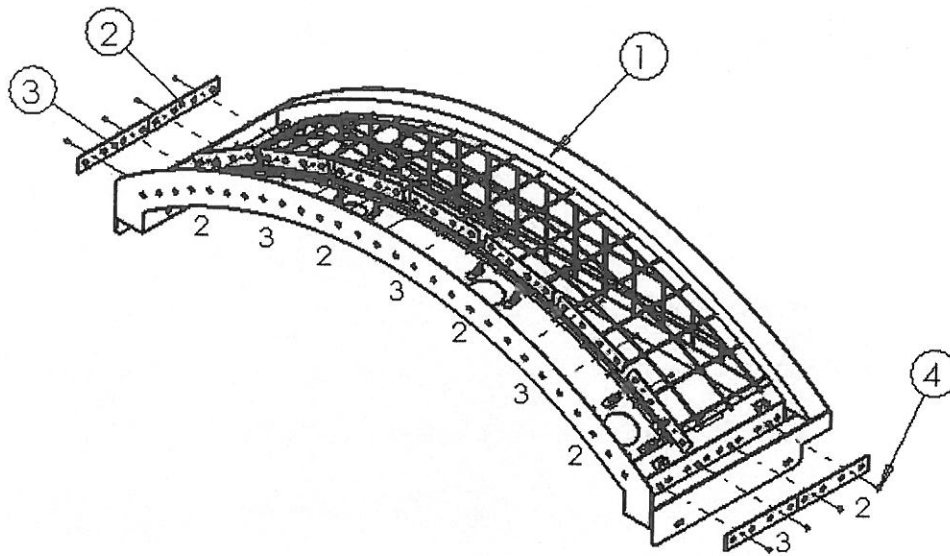


Item	Description	Part No.	Quantity
1	LED Top (SEGA)	1134-13810501	1
2	4 LED Board (Red)	2212-13800601	6
3	4 LED Board (Blue)	2212-13800701	5

561-10-003


561-10-004

Step 2.

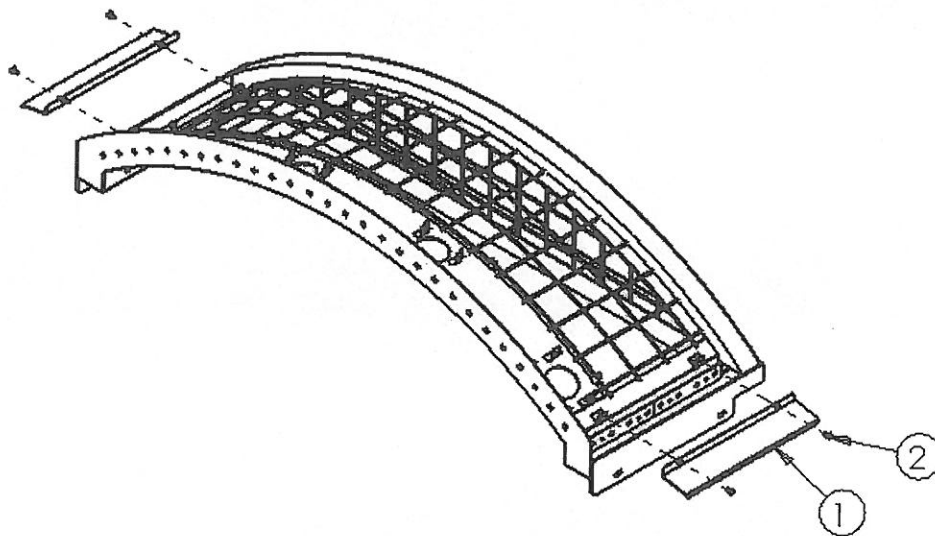


Item	Description	Part No.	Quantity
1	LED Side Cover (SEGA)	1121-50400301	2

Step 3.

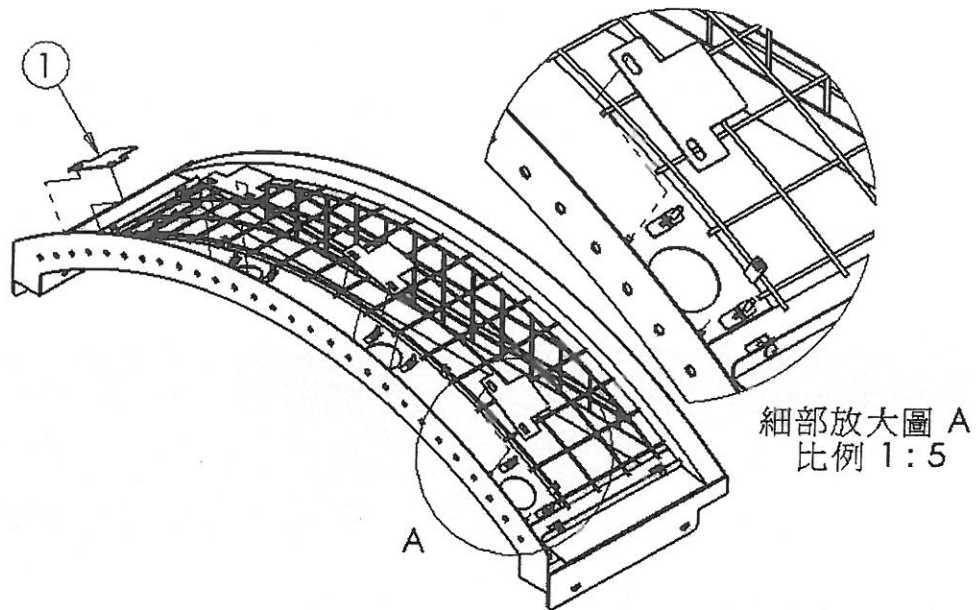

Item	Description	Part No.	Quantity
1	PVC Cover (SEGA)	5041-50400101	4

Step 4.

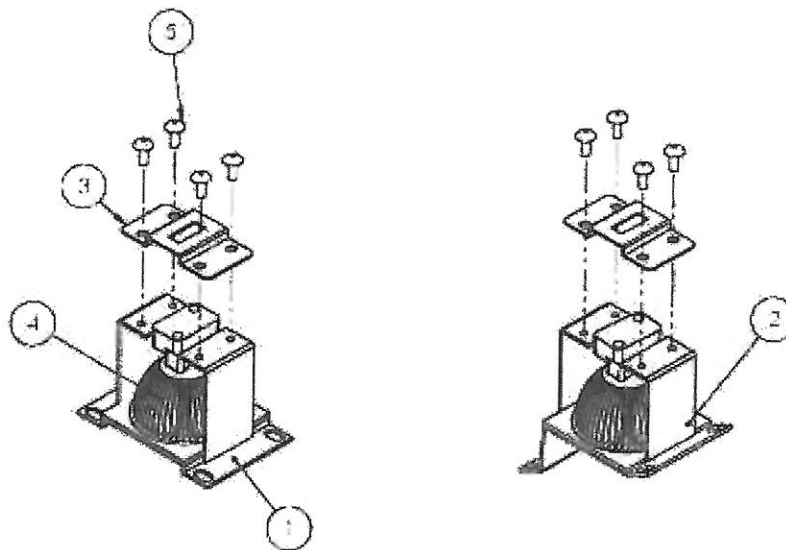


Item	Description	Part No.	Quantity
1	LED Light Base A (SEGA)	1132-13805201	2
2	LED Light Base B (SEGA)	1132-13805301	2
3	LED Light Fixed Plate (SEGA)	1132-13805001	4
4	LED Light	0962-00005401	4

wire for LED LIGHT 0610-13801102

561-10-001


564-10-002

Step 5.

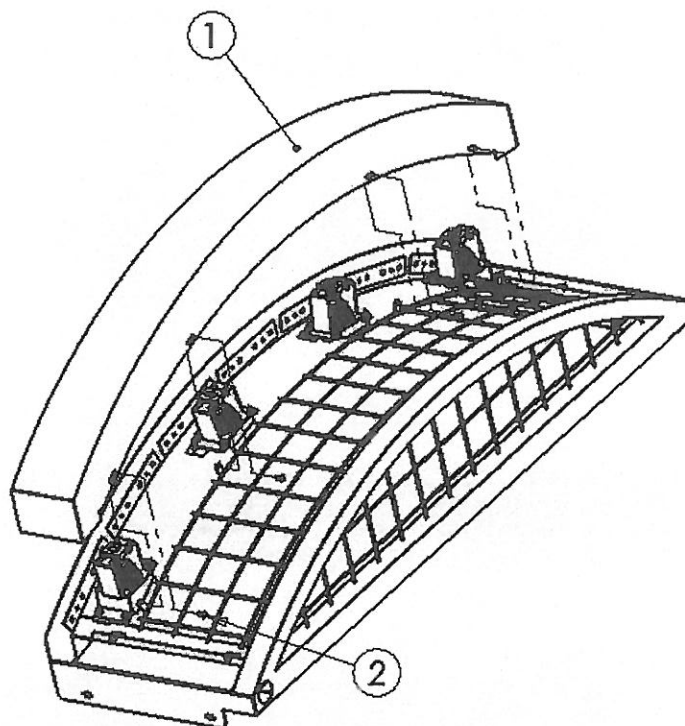

Item	Description	Part No.	Quantity
1	LED Front Cover (SEGA)	1132-13804901	1


Step 6.

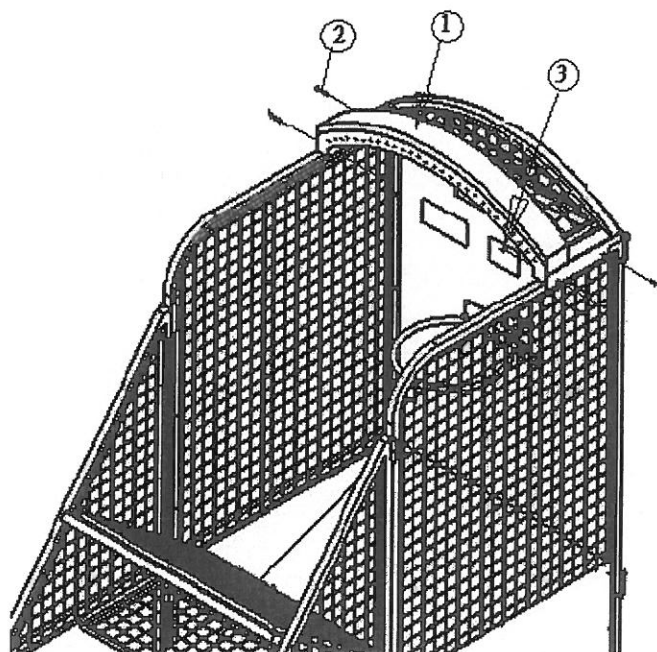

Item	Description	Part No.	Quantity
1	LED Top Cover (SEGA)	2231-13818001	1




IX.Expended view

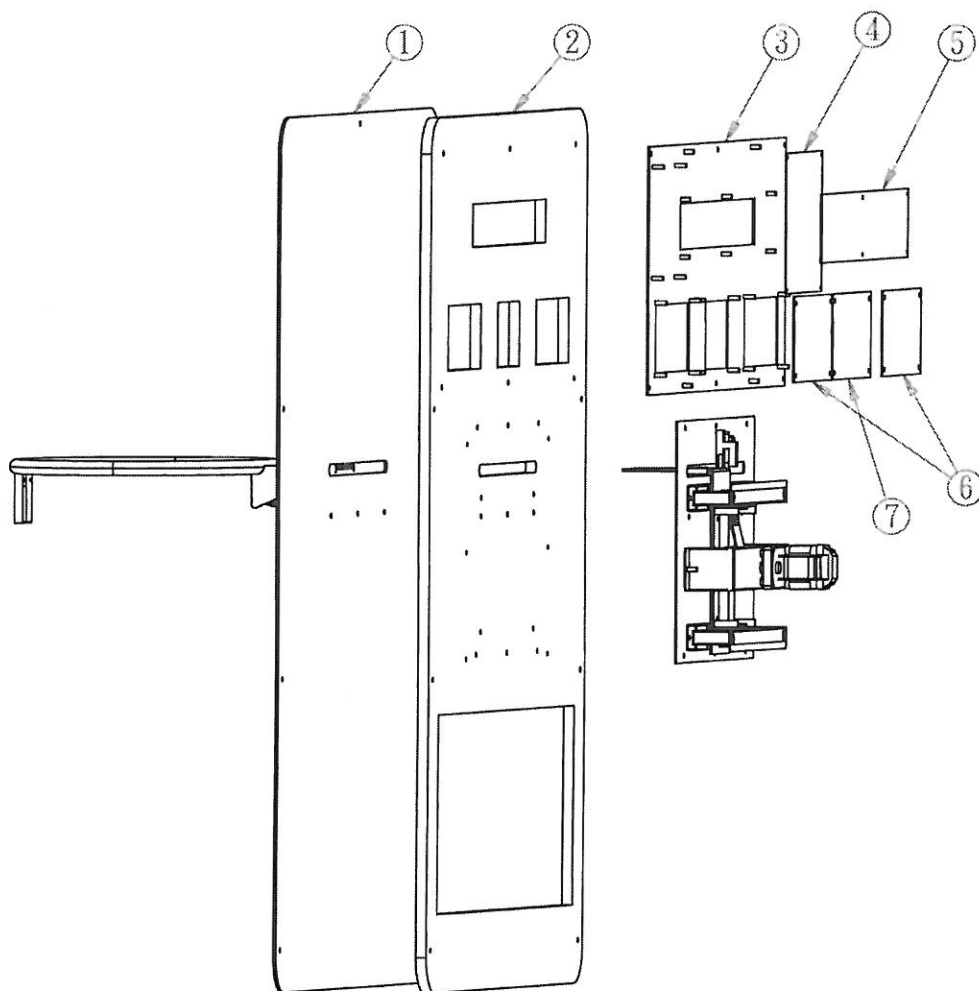

Item	Name	Part Number	Quantity
1	Basket acrylic board (SEGA)	1121-13800802	1
2	Wooden basket board (SEGA)	2246-13800501	1
3	Main wooden board (SEGA)	1134-13801701	1
4	I/O control board (SEGA)	2213-13800101	1
5	Running display board (SEGA)	2212-13800201	1
6	3 Digital display board (SEGA)	2212-13800401	2
7	2 Digital display board (SEGA)	2212-13800301	1

561-20-111
561-50-103
561-00-140
561-00-101
561-00-102
561-00-103
561-00-104

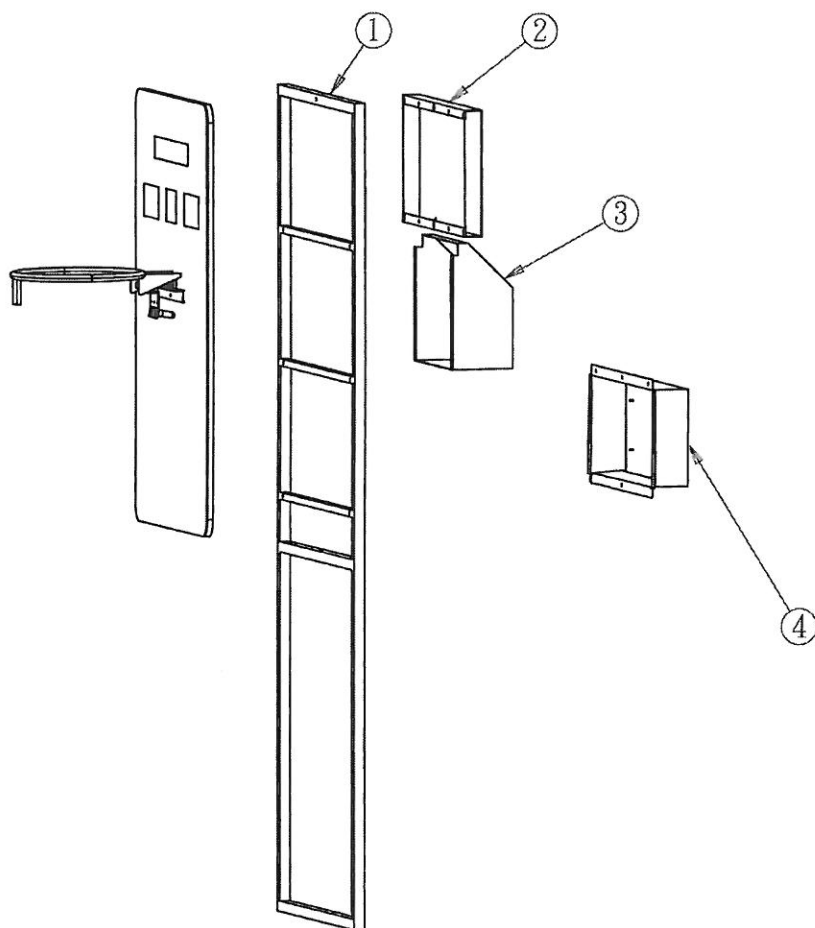


Item	Name	Part Number	Quantity
1	Frame for main wooden board fix use (SEGA)	1134-13850411	1
2	Board cover (SEGA)	1134-13850561	1
3	Basket cover (SEGA)	1134-13850571	1
4	Box cover (SEGA)	1134-13850581	1

56100-147

561-00-146

561-00-139

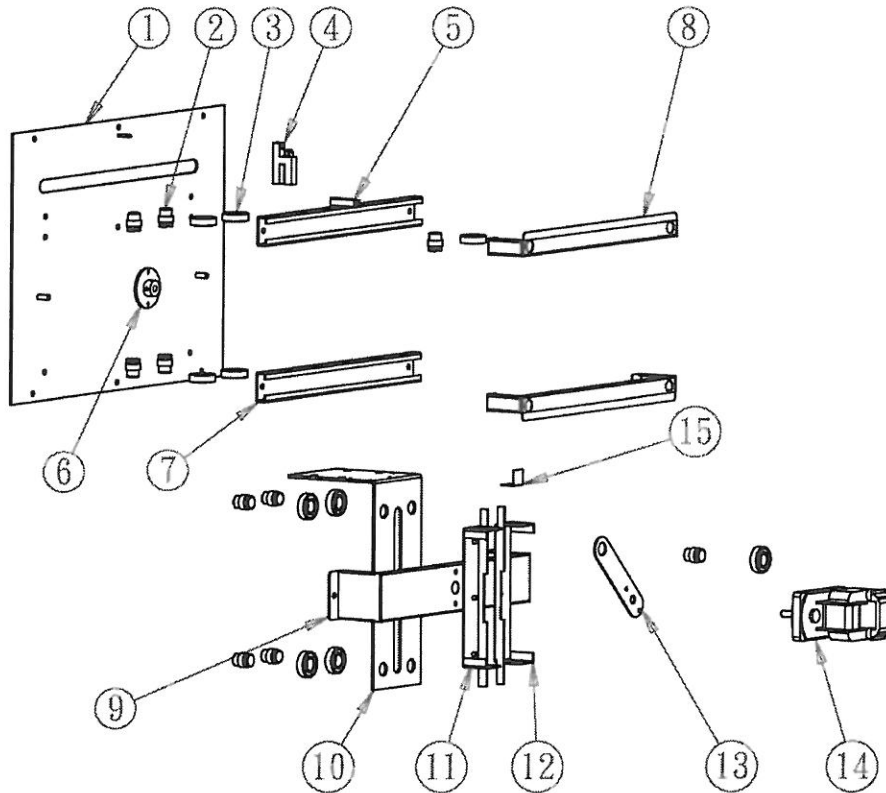

Item	Name	Part Number	Quantity
1	Wooden board for basket unit fix use(SEGA)	1134-13801101	1
2	Bearing (SEGA)	1151-13800301	9
3	Bearing (6002ZZ)(SEGA)	1243-13800101	9
4	Sensor 1.1 (SEGA)	2213-13800301	1
5	Sliding railway for sensor(SEGA)	1134-13802901	1
6	Bearing D-Type for Basket(SEGA)	1151-13800101	1
7	Sliding railway for basket(SEGA)	1134-13801601	2
8	Bearing cover(SEGA)	1132-13802601	2
9	Basket motor holder(SEGA)	1132-13801101	1
10	Basket holder(SEGA)	1132-13801431	1
11	Basket left holder(SEGA)	1132-13802701	1
12	Basket right holder	1132-13802801	1
13	Connecting rod for basket unit(SEGA)	1134-13801001	1
14	Gear motor (KGB-215-8130B1)(SEGA)	0912-00001061	1
15	Basket position board(SEGA)	1134-13803001	1

Sensor wiring JCA016
Sensor wiring JCA017

561-00-140

561-00-119

561-00-134

561-00-118

561-00-121

561-00-122

561-00-123

561-00-124

561-00-125

561-00-126

561-00-127

561-00-141


561-00-128

561-00-113

561-00-129

561-10-005

561-10-006

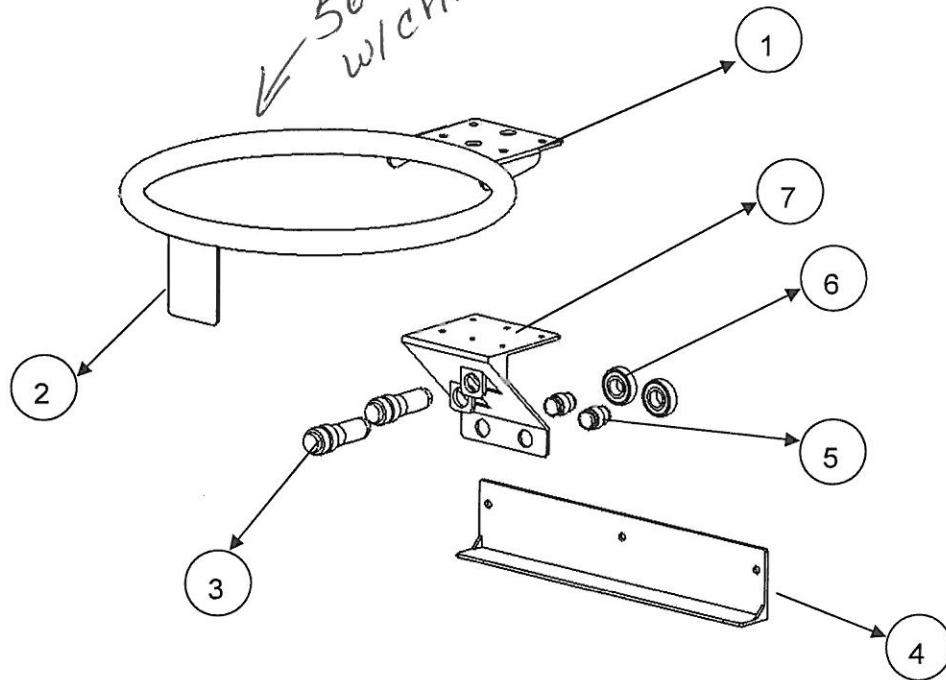

Item	Name	Part Number	Quantity
1	Basket net kit(SEGA)	1134-13800741	1
2	3M reflection sticker(SEGA)	1032-13800941	1
3	Sensor for basket (WO-RNPW2) (SEGA)	0955-13800001	2
4	Basket sensor railway(SEGA)	1134-13807141	1
5	Bearing (SEGA)	1151-13800301	2
6	Bearing (6002ZZ)(SEGA)	1243-13800101	2
7	Holder for basket sensor(SEGA)	1132-13801331	1

BASKETBALL

Ball Net "Gate" Holder

561-50-105

561-00-130

561-00-131

561-00-132


561-00-133

561-00-134

561-00-135

561-30-222

561-50-104

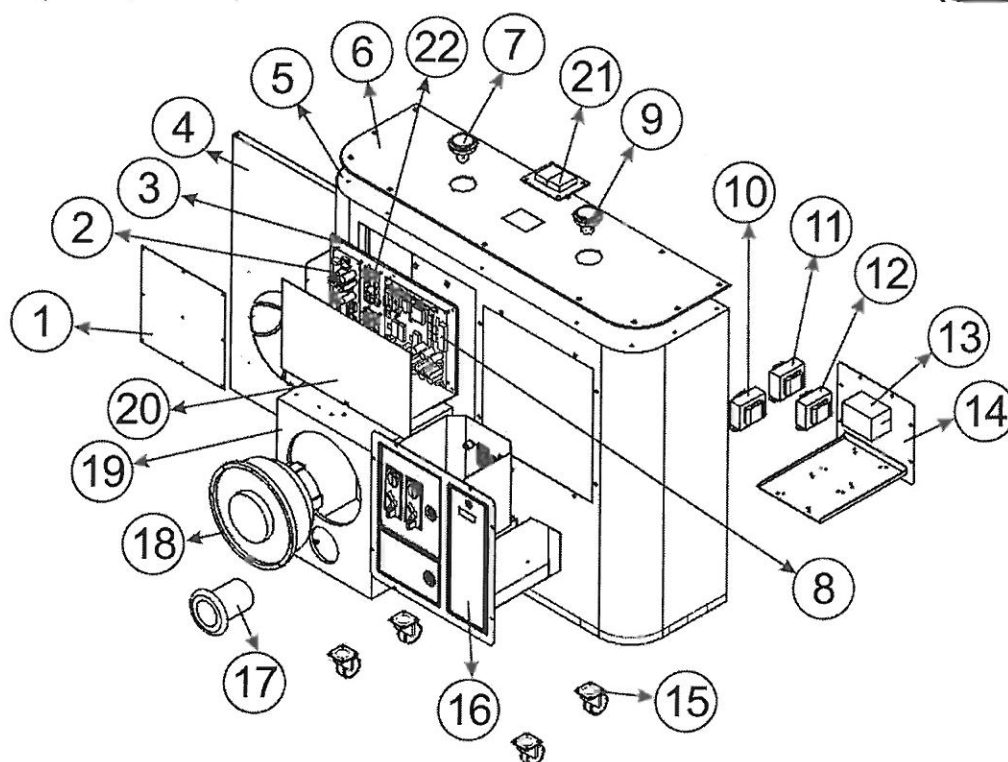

Item	Name	Part Number	Quantity
1	Hole type cover (SEGA)	1134-13850601	1
2	Link PCB(ROHS)	2215-13800101	1
3	Main box base (SEGA)	1134-13850631	1
4	The door of speaker(SEGA)	1134-13850611	1
5	Main part (SEGA)	1134-13850591	1
6	Main part acrylic board (SEGA)	1121-13800881	1
7	1P playpush button (SEGA)	2243-13800301	1
8	Single main IC board (SEGA)	2211-13800101	1
9	Team play push button (SEGA)	2243-13800401	1
10	Transformer 220V/110V 2A(SEGA)	0923-10000191	1
11	Transformer 110V/15V 3A*2(SEGA)	0923-10000181	1
12	Transformer 110V/15V 3A*2(SEGA)	0923-10000181	1
13	The knob for wooden box(SEGA)	1119-00000001	1
14	Base for transformer fixed use (SEGA)	1134-13850651	1
15	Castor(SEGA)	1155-00010111	4
16	3 in 1 door (SEGA)	2239-13800701	1
17	Ventilation duct of speaker box (SEGA)	1294-00000202	1
18	Speaker (SEGA)	0931-10000015	1
19	Speaker box (SEGA)	2246-13800401	1
20	Cover for IC board (SEGA)	1134-13850641	1
21	COIN display board(AM-BK-D1)	2212-13800101	1
22	Link Sub IC Board (SEGA)(AM-BK-E1)	2215-13800201	2

561-00-142

561-00-138

561-00-105

561-00-106

561-00-107

561-00-108

561-20-109

561-20-110

561-20-110

561-10-011

561-00-137

561-00-144

561-00-145

561-20-112


561-10-010

Cable for LINK BID

- 41 -

Power Supply
CASTOR W/BRAKE

1155-00010041

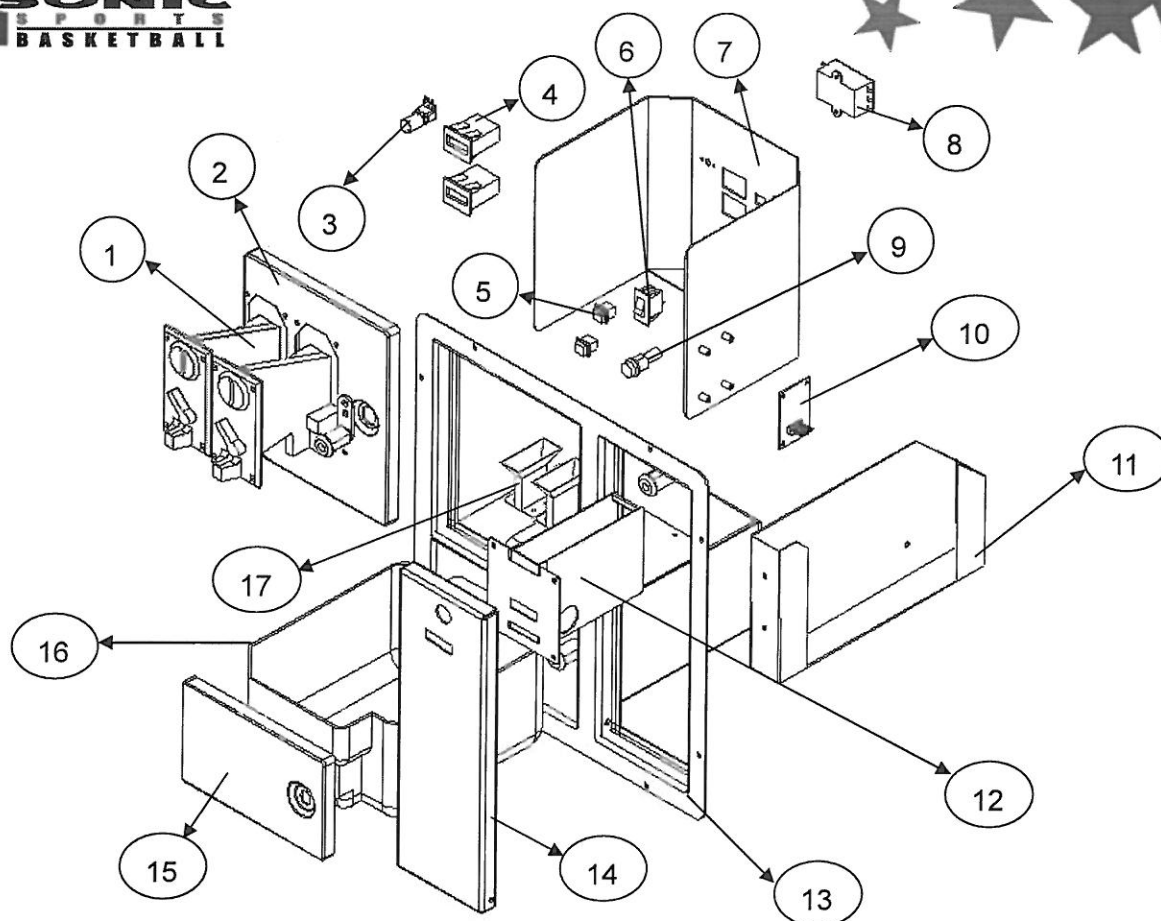

Item	Name	Part Number	Quantity
1	Coin selector (SEGA)-TW400	1291-10000041	2
2	Coin door with hinge (SEGA)	1134-00000145	1
3	Variable resistor 10K 3P(SEGA)	0106-00001001	1
4	Counter (SEGA)	0922-00001081	2
5	Audit push button (Red) (SEGA)	0944-00000091	2
6	Ship-Type switch(SEGA)	0944-00000141	1
7	Socket for counter (SEGA)	1134-13850621	1
8	Filter YG03T5 (3A)(SEGA)	0924-00000101	1
9	Fuse R3-11 20mm(SEGA)	0974-00001001	1
10	Ticket control board(SEGA)	2213-13100201	1
11	Ticket container(SEGA)	1134-00000035	1
12	Ticket dispenser(SEGA)	0918-00001011	1
13	Frame of 3 in 1 (SEGA)	1134-00000085	1
14	Ticket door with hinge (SEGA)	1134-00000115	1
15	Cash box door with hinge (SEGA)	1134-00000105	1
16	Cash box (SEGA)	1134-00000045	1
17	Coin Drop Plastic	1134-05000101	2

561-20-100

561-20-101

561-20-102

561-20-103

561-20-104


561-20-105

561-20-110

561-20-106

561-20-107

561-20-108

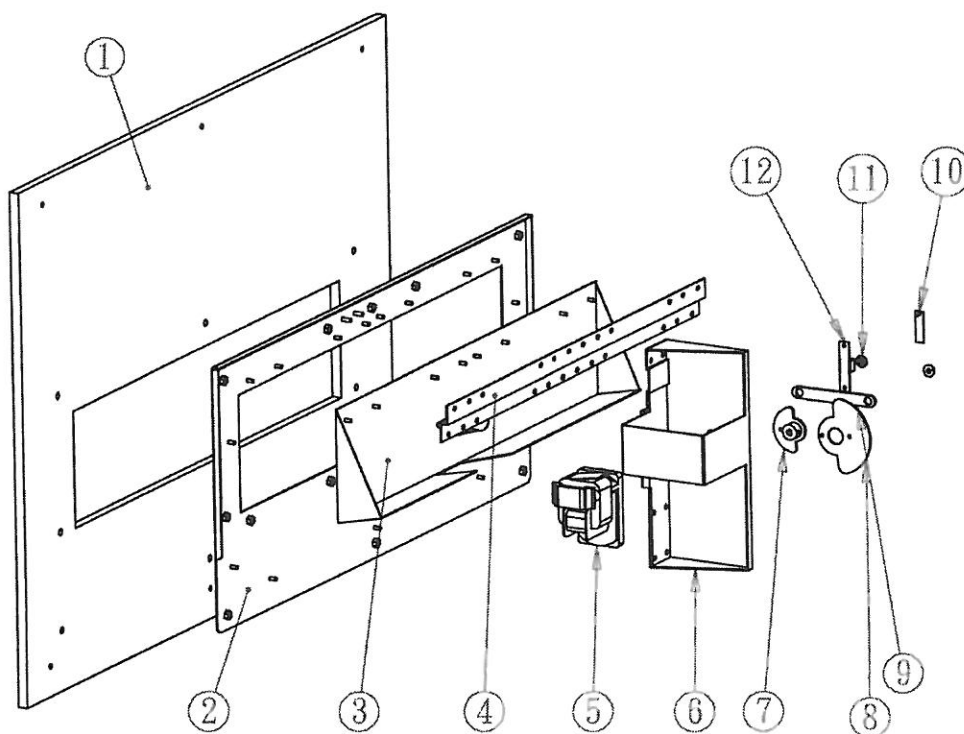

Item	Name	Part Number	Quantity
1	Wooden board B-type (SEGA)	2246-13802101	1
2	Base of ball holder unit (SEGA)	1134-13850671	1
3	Ball holder kit (SEGA)	1134-13850681	1
4	Hinge for ball holder (650*46.6)(SEGA)	1134-13803301	1
5	Gear Motor KGB-215-6130B1(SEGA)	0912-00001061	1
6	Motor Frisked for ball holder kit(SEGA)	1134-13850661	1
7	Bearing D-Type for ball holder(SEGA)	1151-13800201	1
8	Ball holder bearing(SEGA)	1134-13804201	1
9	Arm of ball holder(SEGA)	1134-13802501	1
10	SENSOR 1.1 (SEGA)	2213-13800301	1
11	Bearing LF-1040(SEGA)	1243-13800301	2
12	Bracket for ball holder sensor fixed use(SEGA)	1132-13803001	1

561-00-111

561-00-143

561-00-112

561-00-113

561-00-114

561-00-116

561-00-115

561-00-117

561-00-118

561-00-119

561-00-120

561-50-104

BALL NET "GATE" HOLDER

